 


Flymo

 Electrolux

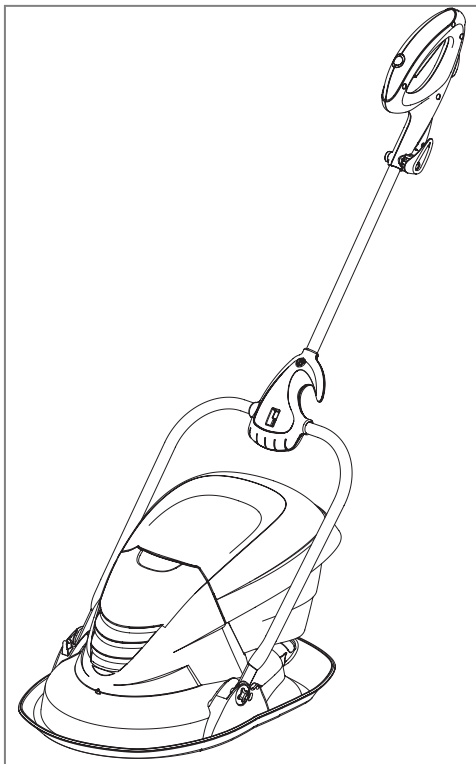

GB

IMPORTANT INFORMATION

Read before use and retain for future reference

DE

WICHTIGE INFORMATION

Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren

FR

RENSEIGNEMENTS IMPORTANTS

A lire avant usage et à conserver pour référence ultérieure

NL

BELANGRIJKE INFORMATIE

Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging

NO

VIKTIG INFORMASJON

Les bruksanvisningen nøye før bruk og oppbevar den for senere bruk

Mow n Vac

FI

TÄRKEÄÄ TIETOA

Lue tämä ennen käyttöä ja säilytä myöhempää tarvetta varten

SE

VIKTIG INFORMATION

Läs anvisningarna före användningen och spara dem för framtida behov

DK

VIGTIGE OPLYSNINGER

Du bør læse brugsanvisningen før brug og gemme til senere henvisning

ES

INFORMACIÓN IMPORTANTE

Léase antes de utilizar y consérvela como referencia en el futuro

PT

INFORMAÇÕES IMPORTANTES

Leia antes de utilizar e guarde para consulta futura

IT

INFORMAZIONI IMPORTANTI

Leggere prima dell'uso e conservare per ulteriore consultazione

HU

Jótállást vállalni csak rendeltetésszerűen használatba vett gépekre tudunk. Kérjük, hogy a gép használatba vétele előtt gondosan olvassa el a kezelési utasításokat.

PL

Gwarancja traci ważność w przypadku używania urządzenia do celów innych niż wymienione w instrukcji obsługi. Prosimy o uważne przeczytanie instrukcji oraz o stosowanie się do zaleceń i wskazówek w niej zawartych

CZ

 
 
 
 
 
 
 
 
 
Záruka se nebude vztahovat na závady způsobené nesprávným používáním, nebo jestliže bude výrobek použit pro jiné účely než pro jaké byl vyroben, nebo také jinak než je uvedeno v návodu k obsluze. Tento návod si přečtěte, prosím, velmi pozorně a uchovejte jej pro možné budoucí odkazy

 
 
 
 
 
 
 
 
 
 
SK

Záruka na tento produkt nebude uznaná v prípade porúch spôsobených nesprávnou obsluhou alebo používaním výrobku na iný účel alebo iným spôsobom, ako je uvedené. Pred začatím práce si prosím dôkladne prečítajte návod na obsluhu a tento si aj pre prípad potreby uschovajte

SI


Garancija ne velja ob nepravilni uporabi proizvoda in/ali ob uporabi za drugi namen kot je izdelan. Prosimo, da pred uporabo, preverite pazljivo navodila za obratovanje in jih shranite za kasnejšo rabo.

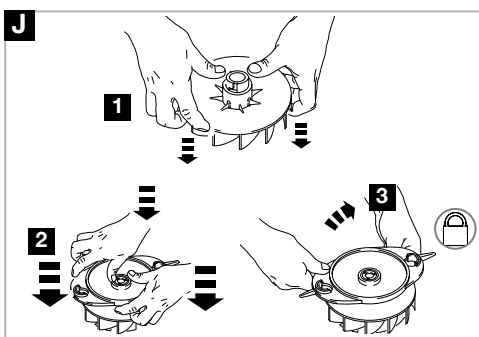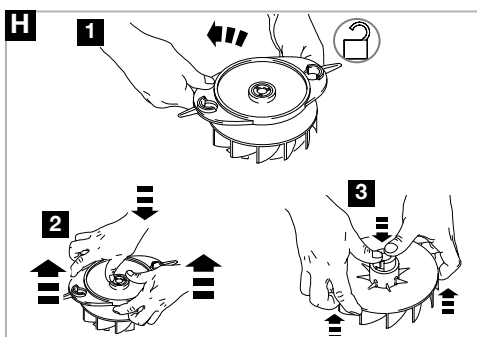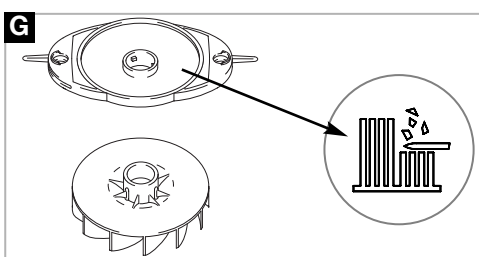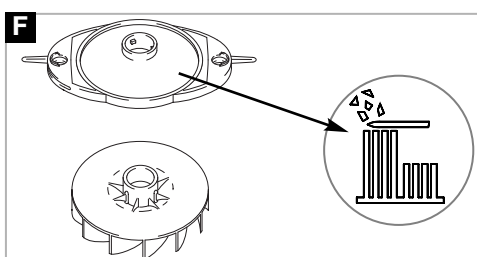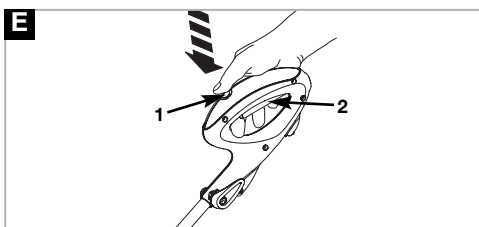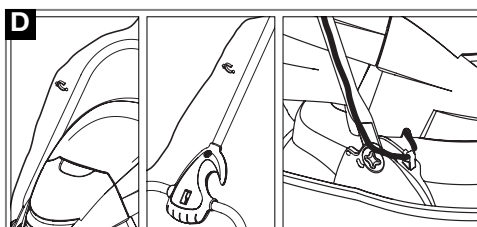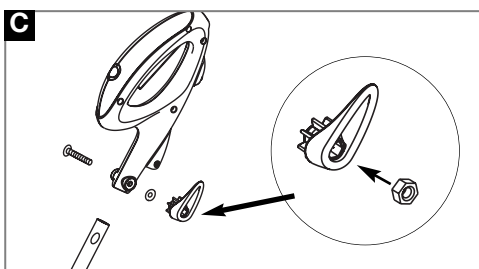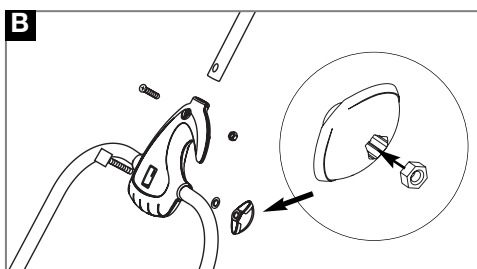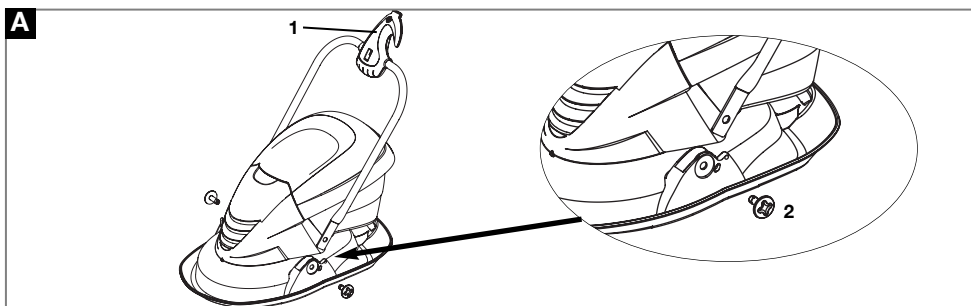

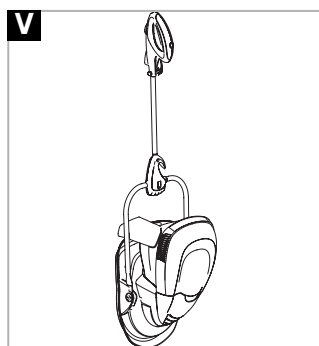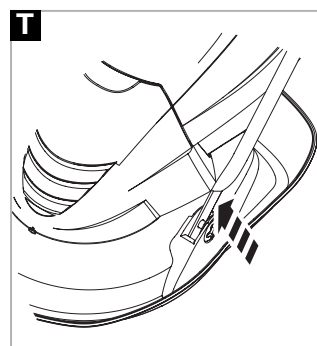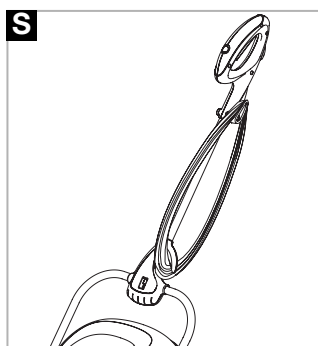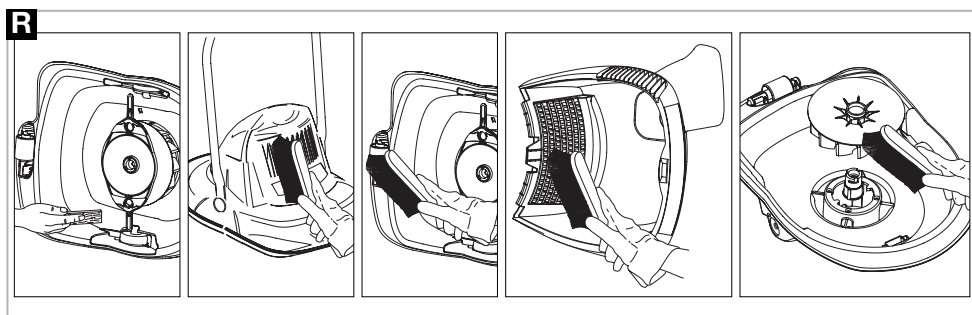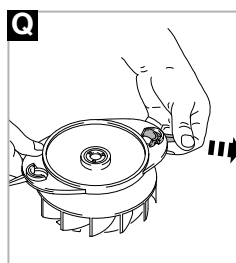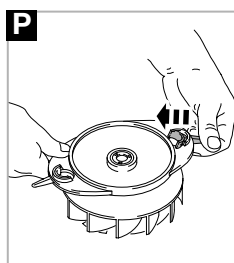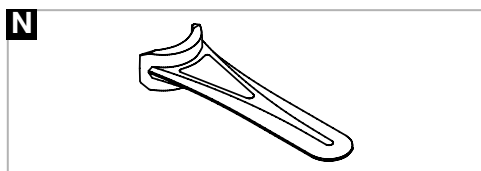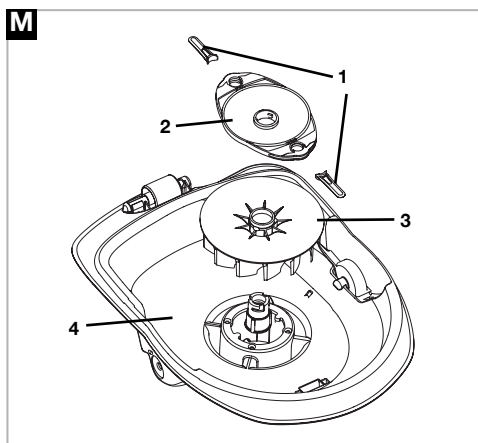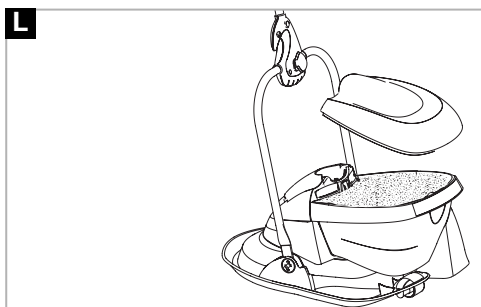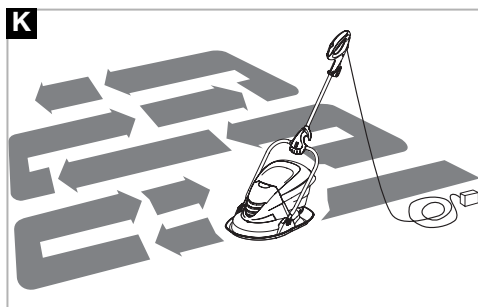

GB - CONTENTS - Switch handle - Bolt - Washer (x 2) - Upper wing knob - M6 nut (x 2) - Handle tube - Cable clip (x 2) - Joint - Screw - M5 nut - Square headed bolt - Lower wing knob - Lower handle - Fixing pin (x 2) - Instruction manual - Plastic cutters - Warning label - Product rating label	NO - INNHold - Bryterhåndtak - Bolt - Skive (pakning) (x 2) - Øvre vingefeste - M6 mutter (x 2) - Håndtaksskaff - Kabelklemme (kabelsko) (x 2) - Forbindelse - Skruer - M5 mutter - Skruer med firkanthode - Nedre vingefeste - Nedre håndtak - Festepinne (x 2) - Bruksanvisning - Plastkniver avstandsstykker - Advarselsetikett - Produktmerking	ES - CONTENIDO - Mango del interruptor - Perno - Arandela (x 2) - Manigueta lateral superior - tuerca M6 (x 2) - Tubo del mango - Grapa de cable (x 2) - Junta - Tornillo - Tuerca M5 - Perno de cabeza cuadrada - Manigueta lateral inferior - Empuñadura inferior - Pasador de fijación (x 2) - Manual de instrucciones - Cortadoras plásticas - Etiqueta de Advertencia - Placa de Características del Producto	PL - ZAWARTOSC KARTONU - Rączka przełącznika - Śruba - Podkładka (x 2) - Górne pokrętko łopatkowe - Nakrętka M6 (x 2) - Rura rękojęści - Zaczep kabla (x 2) - Złącze - Śruba - Nakrętka M5 - Śruba z łbem kwadratowym - Dolne pokrętko łopatkowe - Dolny uchwyty - Śworzeń mocujący (x 2) - Instrukcja Obsługi - Plastykowe noże - Żnaki bezpieczeństwa - Tabliczka znamionowa
DE - INHALT - Schalter-Griff - Bolzen - Unterlegscheibe (x 2) - Oberer Rändelknopf - M6-Mutter (x 2) - Griffrohr - Kabelhalter (x 2) - Verbindungssteil - Schraube - M5-Mutter - Vierkantverschraube - Unterer Rändelknopf - Unterer Griff - Paßstift (x 2) - Bedienungsanweisung - Kunststoffklingen - Warnetikett - Produkttypenschild	FI - SISÄLTÖ - Käynnistyskahva - Pultti - Tiivistysrengas (x 2) - ylempi siipikiristin - M6-mutteri (x 2) - Kahvan varsi - Johdon pidike (x 2) - Liitinkappale - Ruuvi - M5-mutteri - Nelikulmainen pultti - Alempi siipikiristin - Alempi kahva - Kiinnitystappi (x 2) - Käyttöopas - Muovi terät - Varoitustunnus - Ruohonleikkurin arvokilpi	PT - LEGENDA - Pega do interruptor - Caviha - Anilha (x 2) - Botão da asa superior - Perno M6 (x 2) - Tubo da pega - Grampo do cabo (x 2) - União - Parafuso - Perno M5 - Parafuso de cabeça quadrada - Botão da asa inferior - Guiador inferior - Parafuso (x 2) - Manual de Instruções - Cortadores de plástico - Etiqueta de Aviso - Rótulo de Avaliação do Produto	CZ - POPIS STROJE - Spínací rukojet - Šroub - Podložka (x 2) - Horní křídlový knoflík - Matic M6 (x 2) - Trubka rukojeti - Úchytka kabelu (x 2) - Kloub - Šroub - Matic M5 - Šroub se čtvercovou hlavou - Dolní křídlový knoflík - Spodní rukojet - Spojovací kolík (x 2) - Návod k obsluze - Plastové žací lišty - Výstražný štítek - Typový štítek výrobku
FR - TABLE DES MATIÈRES - Manette de contact - Boulons - Rondelles (x 2) - Écrou papillon supérieure - Écrou M6 (x 2) - Tube de la poignée - Attache câble (x 2) - Élément d'assemblage - Vis - Écrou M5 - Boulon à tête carrée - Écrou papillon inférieure - Guidon inférieur - Cheilles de fixation (x 2) - Manuel d'Instructions - Racleur en plastique - Étiquette d'avertissement - Plaquette des Caractéristiques du Produit	SE - INNEHÅLL - Brytarhandtag - Bult - Bricka (x 2) - Övre vingratt - M6 mutter (x 2) - Handtagsrör - Kabelklämma (x 2) - Skarv - Skruv - M5 mutter - Bult med fyrkantshuvud - Nedre vingratt - Undre handtag - Fästbult (x 2) - Bruksanvisning - Skärblad av plast - Varningsetikett - Produktmärkning	IT - INDICE CONTENUTI - Maniglia d'interruzione - Bullone - Rondella (x 2) - Pomolo ala superiore - Dado M6 (x 2) - Tubo impugnatura - Morsetto per il cavo (x 2) - Giunto - Vite - Dado M5 - Bullone a testa quadra - Pomolo ala inferiore - Impugnatura inferiore - Perno di fissaggio (x 2) - Manuale di istruzioni - Lame di plastica - Etichetta di pericolo - Etichetta dati del prodotto	SK - OBSAH - Spínacia rúčka - Skrutka - Podložka (x 2) - Horný křídlový gombík - M6 matica (x 2) - Týč rukoväte - Švorka na kábel (x 2) - Spoj - Skrutka - M5 matica - Skrutka so štvorcovou hlavou - Dolný křídlový gombík - Spodná rukoväť - Upevňovací kolík (x 2) - Príručka - Plastové nože - Varovný štítok - Prístrojový štítok
NL - INHOUD - Schakelhendel - Bout - Pakkingsring (x 2) - Bovenste vleugelknop - M6 moer (x 2) - Hendelstang - Snoerklem (x 2) - Verbindingsstuk - Schroef - M5 moer - Bout met vierkante kop - Onderste vleugelknop - Onderstuk van duwboom - Bevestigingspin (x 2) - Handleiding - Plastic messen - Waarschuwingsetiket - Product-informatielabel	DK - INDHOLD - Omskifterhåndtag - Bolt - Spændeskive (x 2) - Øvre vingeskrue - M6-møtrik (x 2) - Håndtagsrør - Kabelklemme (x 2) - Samling - Skruer - M5-møtrik - Bolt med firkantet hoved - Nedre vingeskrue - Nedre håndtag - Håndtagsskift (x 2) - Brugsvejledning - Plastskærebåde - Advarselsmærkat - Produktets mærkeskilt	HU - TARTALOMJEGYZÉK - Kézikapcsoló - Csavar - Alátét (x 2) - Felső füles csavar - M6 anyá (x 2) - Fogantyú cső - Kábelrögzítő (x 2) - Csatlakozó - Csavar - M5 anyá - Szögletes fejű csavar - Alsó füles csavar - Alsó tolókar - Rögzítőcsap (x 2) - Kezelési útmutató - Műanyag vágókés - Figyelmeztető címke - Termékinformációs címke	SI - VSEBINA - Ročaj s stikalom - Vijak - Podložka (x 2) - Zgornji krilni vijak - Matica M6 (x 2) - Cev za držalo - Sponka za kabel (x 2) - Spojini element - Vijak - Matica M5 - Vijak s kvadratno glavou - Spodnji krilni vijak - Spodnje držalo - Pridrlni trn (x 2) - Priručnik - Plastična rezila - Opozorilna oznaka - Tipna tablica

(GB)	CARTON CONTENTS	(SE)	FÖRPACKNINGENS INNEHÅLL	(IT)	CONTENUTO
(DE)	KARTONINHALT	(DK)	KARTONINDHOLD	(HU)	A DOBOZ TARTALMA
(FR)	CONTENU DU CARTON	(ES)	CONTENIDO DEL CARTON	(PL)	ZAWARTOŚĆ KARTONU
(NL)	INHOUD	(PT)	LEGENDAS DOS DESENHOS	(CZ)	OBSAH KRABICE
(NO)	KARTONGEN INNEHOLDER			(SK)	OBSAH BALENIA
(FI)	PAKETIN SISÄLTÖ			(SI)	VSEBINA ŠKATLE

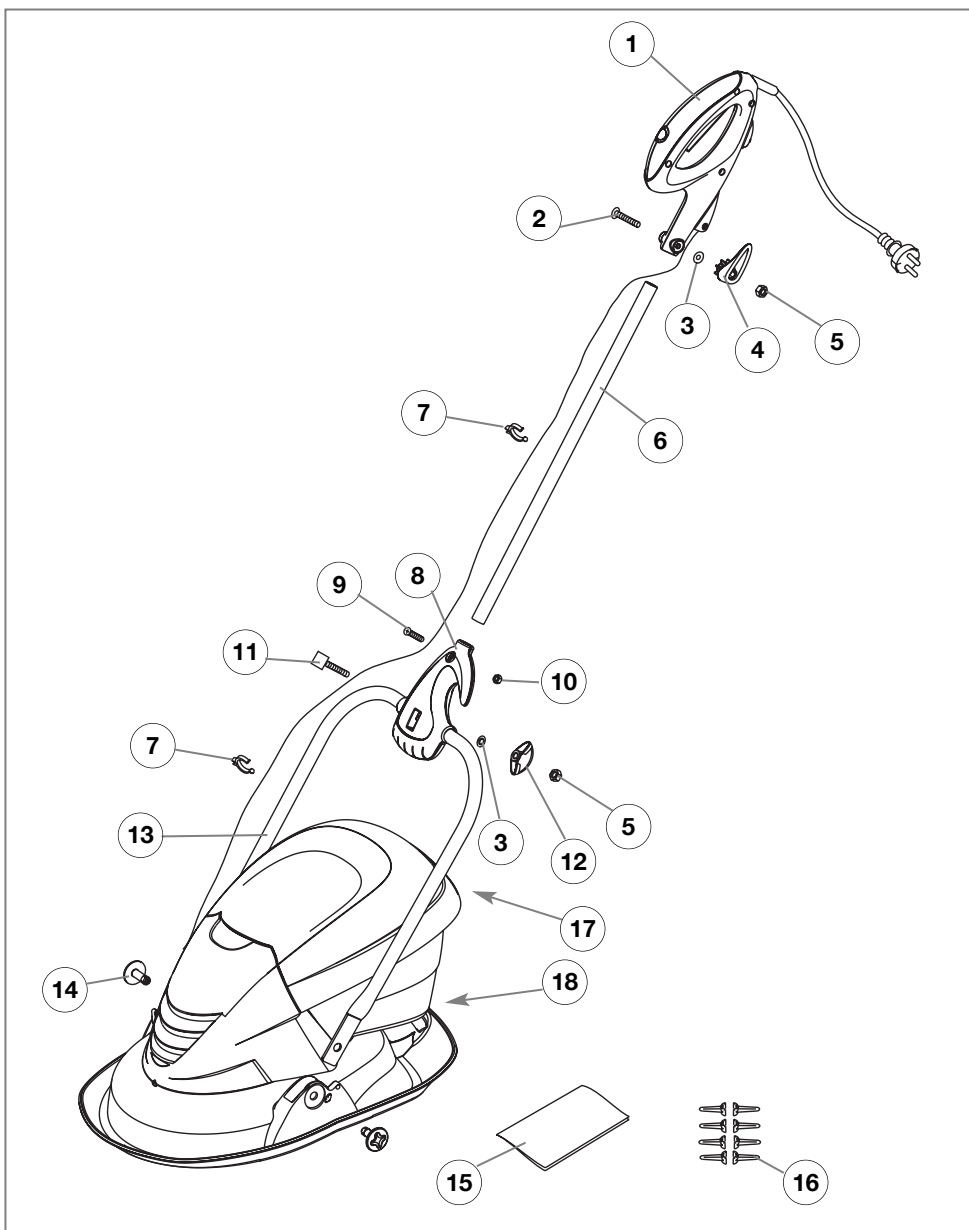 

Safety Precautions



If not used properly your product can be dangerous! Your product can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using your product. The operator is responsible for following the warning and safety instructions in this manual and on the product. Never use the product unless the grassbox or guards provided by the manufacturer are in the correct position.

Explanation of Symbols on the Mow 'n' Vac



 
Warning



Read the user instructions carefully to make sure you understand all the controls and what they do.



Switch off! Remove plug from mains before adjusting, cleaning or if cable is entangled or damaged. Keep the cable away from the cutting parts.



Keep bystanders away. Do not operate whilst people especially children or pets are in the area.



Do not operate in the rain or leave the product outdoors while it is raining.



The use of eye protection is recommended to protect against objects thrown by the cutting parts.

General

1. Never allow children or people unfamiliar with these instructions to use the product. Local regulations may restrict the age of the operator.
2. Only use the product in the manner and for the functions described in these instructions.
3. Never operate the product when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Electrical

1. The use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30mA is recommended. Even with a R.C.D. installed 100% safety cannot be guaranteed and safe working practice must be followed at all times. Check your R.C.D. every time you use it.
2. Before use, examine cable for damage, replace it if there are signs of damage or ageing.
3. Do not use the product if the electric cables are damaged or worn
4. Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected. Do not repair a cut or damaged cable. Replace it with a new one.
5. Your cable must be uncoiled, coiled cables can overheat and reduce the efficiency of your product.
6. Keep cable away from product, always work away from the power point using up and down, never in circles.

7. Do not pull cable around sharp objects.
8. Always switch off at the mains before disconnecting any plug, cable connector or extension cable.
9. Switch off, remove plug from mains and examine electric supply cable for damage or ageing **before** winding cable for storage. Do not repair a damaged cable, replace it with a new one. Use only Flymo replacement cable.
10. Always wind cable carefully, avoiding kinking.
11. Never carry the product by the cable.
12. Never pull on the cable to disconnect any of the plugs.
13. Use only on AC mains supply voltage shown on the product rating label.
14. Our products are double insulated to EN60335. Under no circumstance should an earth be connected to any part of the product.

Cables

Use only 1.00mm² size cable up to 40 metres length maximum.

Maximum rating:

- 1.00mm² size cable 10 amps 250 volts AC
1. Mains cables and extensions are available from your local Electrolux Outdoor Products Approved Service Centre.
 2. Only use extension cables specifically designed for outdoor use.

Preparation

1. While using your product always wear substantial footwear and long trousers.
2. Make sure the lawn is clear of sticks, stones, bones, wire and debris; they could be thrown by the plastic cutters.
3. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
4. Replace worn or damaged plastic cutters together with their fixings in sets to preserve balance.

Use

1. Use the product only in daylight or good artificial light.
2. Avoid operating your product in wet grass, where feasible.
3. Take care in wet grass, you may lose your footing.
4. On slopes, be extra careful of your footing and wear non-slip footwear.
5. Use across the face of slopes, never up and down.
6. Exercise extreme caution when changing direction on slopes.
7. Using on banks and slopes can be dangerous. Do not use on **banks** or **steep** slopes.
8. Do not walk backwards whilst operating your product, you could trip. Walk never run
9. Never cut grass by pulling the product towards you.
10. Switch off before pushing the product over surfaces other than grass.
11. Never operate the product with damaged guards or without guards in place.
12. Keep hands and feet away from the cutting means at all times and especially when switching on the motor.

Safety Precautions

13. Do not tilt the product when the motor is running, except when starting and stopping. In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Always ensure that the hand is in the operating position before returning the appliance to the ground.
14. Never pick up or carry a product when it is operating or still connected to the mains supply.
15. Remove the plug from the mains :
 - before leaving the product unattended for any period;
 - before clearing a blockage;
 - before checking, cleaning or working on the appliance;
 - if you hit an object. Do not use your product until you are sure that the entire product is in a safe operating condition;
 - if the product starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the product is in safe working condition.
2. Check the grassbox frequently for wear or deterioration.
3. Replace worn or damaged parts for safety.
4. Only use the replacement spare parts and accessories specified for your product.
5. Be careful during adjustment of the product to prevent entrapment of the fingers between moving cutting parts and fixed parts of the machine.

Assembly Instructions

Assembly of lower handle to hood (A)

1. Place the ends of the lower handle into the slots ensuring that the joint is facing the correct way (A1).
2. Secure lower handle to hood by firmly pushing fixing pin through holes in hood and handle (A2).
3. Repeat on the other side.

NOTE

Should a problem occur when securing handle with the fixing pin, carefully lever the pin out of location and repeat steps 1 to 3 above.

Assembly of handle tube to joint (B)

1. Ensure that the joint is centralised on the lower handle.
2. Line up the hole in the joint with the hole in the lower handle
3. Insert the square headed bolt through the hole in the joint and the hole in the lower handle.

4. Insert an M6 nut into the lower wing knob.
5. Fit washer, then wing knob and tighten.
6. Insert handle tube into joint, lining up the holes.
7. Insert screw through joint and handle tube. Fit M5 nut and tighten screw.

Assembly of switch handle to handle tube (C)

1. Insert the handle tube into the switch handle, ensuring the handle is in an upright position and lining up the holes.
2. Push bolt through the holes.
3. Insert M6 nut into the upper wing knob.
4. Fit washer, then wing knob and tighten.

Cable clips (D)

1. Fit the cable to the handles with the clips provided.
2. Ensure the cable is secured under the clip on the hood.

Starting and Stopping

E1 - Lock-off button, E2 - Switch lever

Starting

1. Hold as illustrated in **Figure E**.
2. To start, press the lock-off button down, whilst pressing the lock-off button, squeeze the switch lever.

Stopping

1. To stop your product, release the switch lever.

Adjusting the Cutting Height

F - Highest height of cut - This symbol visible after fitting

G - Lowest height of cut - This symbol visible after fitting

- **THERE ARE 2 CUTTING HEIGHTS (F & G)**
- **Height of cut is adjusted by turning over the cutting head.**

- Disconnect from the mains electricity supply and wait until the cutting head has stopped rotating. Turn your product upside down.

To Remove the Cutting Head and Fan (H)

1. Hold the fan firmly and twist the cutting head anti-clockwise as illustrated.

2. Hold the cutting head in the centre and remove as illustrated.

3. Hold fan in the centre and remove as illustrated.

4. Inspect for damage and clean as necessary.

To Refit the Fan and the Cutting Head (J)

1. Replace the fan as illustrated.
2. Replace the cutting head, adjusting the height of cut as required.
3. Hold the fan firmly and twist the cutting head clockwise, as illustrated.

- **IMPORTANT**
ENSURE FAN AND CUTTING HEAD ARE CORRECTLY LOCATED

How to Use

1. Start at the edge of the lawn nearest to the power point so the cable is laid out on the lawn you have already cut. (K)
2. Cut your grass twice a week during the growing season, your lawn will suffer if more than a third of its length is cut at one time.

Do Not Overload Your Product

Using in long thick grass may cause the motor speed to drop, you will hear a change in the motor sound. If the motor speed drops you may overload your product which may cause damage. When using in long thick grass a first cut with the cutting height set higher will help reduce the load. See Adjusting the Cutting Height.

Grassbox

- **For optimum performance your product is designed to be used with the grassbox fitted.**

Emptying the Grassbox (L)

- Stop the product and wait until the cutting head has stopped rotating before emptying the grassbox.
1. Remove the grassbox lid.
 2. Lift the grassbox off the product and empty.
 3. Replace grassbox and lid carefully.
 - **Failure to fit the grassbox and lid correctly will cause poor collection of grass clippings.**

Cutting System Maintenance

M1 - Plastic cutters

M2 - Cutting head

M3 - Fan

M4 - Hood

- **Always handle the plastic cutters with care - sharp edges could cause injury. USE GLOVES.**

Checking your Cutting System (M)

- The cutting system must be kept in good condition and inspected before and after use.
 - Disconnect from the mains electricity supply and wait until the cutting head has stopped rotating. Turn your product upside down.
1. Visually check cutting head for wear. Replace if damaged.
 2. Visually check plastic cutters for wear and replace when necessary.
 3. Plastic cutters should be straight. Replace if bent or twisted.

Replacing Plastic cutters (N)

- Use only genuine Flymo replacement plastic cutters specified for this product. These are available from all Electrolux Outdoor Products Service Centres and major retail outlets.
- Plastic cutters must be replaced in pairs to retain balance.
- Two plastic cutters of the same type should be fitted.
- **Never fit a steel bar blade to this product.**

To Replace Plastic Cutters

- Disconnect from the mains electricity supply and wait until the cutting head has stopped rotating. Turn your product upside down.
1. Push plastic cutter towards centre of cutting disc. Lift plastic cutter away from cutting head. **(P)**
 2. If the plastic cutter is broken during use - lever cutter out of the slot, and dispose of carefully.
 3. Fit new plastic cutters into the slots at each side of the cutting head and pull into place. **(Q)**
- **IMPORTANT**
ENSURE PLASTIC CUTTERS ARE CORRECTLY LOCATED.

Caring

- **It is very important that you keep your product clean. Grass clippings left in any of the air intakes or under the hood could become a potential fire hazard.**

Cleaning (R)

• USE GLOVES

1. Remove grass from under the hood with a piece of wood or similar.
 2. Using a soft brush - remove grass clippings from all air intakes, the roller, grassbox and grassbox lid.
 3. Remove the cutting head, **see Adjusting the Cutting Height**, to gain access to the fan and clean with a soft brush.
 4. Wipe over the surface of your product with a dry cloth.
- **IMPORTANT**
Never use water for cleaning your product. Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts.

Storing your product

1. Your mains cable can be stored as illustrated in **figure S**.

Your product can be stored in a hanging position.

- **The back of the switch handle has a hanging slot for storing the product on the wall.**

1. Push the lower handle in on both sides (**figure T**) and the handle will drop down.
2. Hang the product from a hook or suitable screw as illustrated in **figure V**.

At the End of the Season

1. Replace plastic cutters, bolts, nuts or screws, if necessary.
2. Clean your product thoroughly.
3. Ask your local Service Centre to clean the air filter thoroughly and carry out any service or repairs required.

Fault Finding Hints

Fails to Operate

1. Is the Power Turned On?
2. Check the fuse in the plug, if blown replace.
3. Fuse continues to blow?

Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Poor Flotation

1. Disconnect from the mains electricity supply.
2. Clean the underside of the hood and the fan blades.
3. Raise to a higher height of cut. See Adjusting the Cutting Height.
4. If poor flotation persists?
Disconnect from the mains electricity supply and consult your local approved Service Centre.

Poor Collection

1. Is the grassbox fitted correctly?
2. Are you using in straight lines?
3. Are you cutting more than one third of the grass length?
4. Do you need to raise the cutting height?
5. Follow the procedure described in "**Poor Flotation**".

Excessive Vibration

1. Disconnect from the mains electricity supply.
2. Replace broken or missing plastic cutters.
3. Check plastic cutters are fitted correctly.
4. If vibration persists?
Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Service Recommendations

- **Your product is uniquely identified by a silver and black product rating label.**
- **We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.**

Guarantee and Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) The fault is reported directly to the Authorised Repairer.
 - (b) Proof of purchase is provided.
 - (c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
 - (d) The failure has not occurred through fair wear and tear.
 - (e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
 - (f) The machine has not been used for hire.
 - (g) The machine is owned by the original purchaser.
 - (h) The machine has not been used commercially.
- * This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- * Replacing worn or damaged plastic cutters
- * Failures as a result of not reporting an initial fault.
- * Failures as a result of sudden impact.
- * Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- * Machines used for hire are not covered by this guarantee.
- * The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Plastic cutters, Cutting head, Electric Mains cable.

Caution!

Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way.

Environmental Information

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

EC DECLARATION OF CONFORMITY

I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham. DL5 6UP. Certify that the Product:- Category..... Electric Lawn Trimmer Make..... Electrolux Outdoor Products Conforms to the specifications of Directive 2000/14/EEC	I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field semi anechoic chamber conditions was :-	I, the undersigned M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham. DL5 6UP. Certify that a sample of the above product has been tested using ISO 5349 as a guide. The maximum weighted root mean square value of vibration recorded at operator's hand position was:-		
<table><tr><td>Type of Cutting Device.....Plastic Cutter Identification of Series.....See Product Rating Label Conformity Assessment Procedure.....ANNEX VI Notified Body.....I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Other Directives:-.....98/37/EEC, 89/336/EEC, 73/23/EEC & applicable standards:- EN786, IEC60335-1, IEC60335-2-91, EN61000-3-2, EN61000-3-3, EN55014-1, EN55014-2</td><td>Type..... A Width of Cut..... B Speed of Rotation of Cutting Device..... C Guaranteed sound power level..... D Measured Sound Power Level..... E Level..... F Value..... G Weight..... H</td></tr></table>			Type of Cutting Device..... Plastic Cutter Identification of Series..... See Product Rating Label Conformity Assessment Procedure..... ANNEX VI Notified Body..... I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Other Directives:-..... 98/37/EEC, 89/336/EEC, 73/23/EEC & applicable standards:- EN786, IEC60335-1, IEC60335-2-91, EN61000-3-2, EN61000-3-3, EN55014-1, EN55014-2	Type..... A Width of Cut..... B Speed of Rotation of Cutting Device..... C Guaranteed sound power level..... D Measured Sound Power Level..... E Level..... F Value..... G Weight..... H
Type of Cutting Device..... Plastic Cutter Identification of Series..... See Product Rating Label Conformity Assessment Procedure..... ANNEX VI Notified Body..... I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Other Directives:-..... 98/37/EEC, 89/336/EEC, 73/23/EEC & applicable standards:- EN786, IEC60335-1, IEC60335-2-91, EN61000-3-2, EN61000-3-3, EN55014-1, EN55014-2	Type..... A Width of Cut..... B Speed of Rotation of Cutting Device..... C Guaranteed sound power level..... D Measured Sound Power Level..... E Level..... F Value..... G Weight..... H			

EC KONFORMITÄTSERKLÄRUNG

Ich, der Unterzeichner M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham. DL5 6UP. Bescheinigung, dass das Produkt:- Kategorie..... Elektorasentrimmer Fabrikat..... Electrolux Outdoor Products die Spezifikationen der Direktive 2000/14/EG erfüllt	Ich, der Unterzeichner M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei Direktive 81/1051/EWG als Richtschnur verwendet wurde. Der maximale A-gewichtete Schalldruckpegel, der an der Bedienerposition unter Freifeld-Halbschalltot-Kammerbedingungen gemessen wurde, betrug:-	Ich, der Unterzeichner M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham, DL5 6UP, bescheinige hiermit, daß eine Probe des obigen Produkts getestet wurde und dabei ISO 5349 als Richtschnur verwendet wurde. Der maximale gewichtete Vibrationseffektivwert, der an der Handposition des Bedieners gemessen wurde, betrug:-
Schneidwerktyp..... Kunststoffklingen Identifizierung der reihe..... Siehe Produkttypenschild Konformitätsbestätigungsverfahren..... ANNEX VI Benachrichtigte Behörde..... I.T.S., Cleeve Road, Leatherhead, Surrey. KT22 7SB England Andere Direktiven..... 98/37/EEC, 89/336/EEC, 73/23/EEC und Normen:-..... EN786, IEC60335-1, IEC60335-2-91, EN61000-3-2, EN61000-3-3, EN55014-1, EN55014-2	Typ..... A Schnittbreite..... B Umdrehungsgeschwindigkeit des Schneidwerks..... C Garantierter Geräuschpegel..... D Gemessener Geräuschpegel..... E Höhe F Wert..... G Gewicht..... H	

EC DÉCLARATION DE CONFORMITÉ

Je soussigné M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham. DL5 6UP. Certifie que ce produit:- Catégorie..... Coupe-bordure électrique Marque..... Electrolux Outdoor Products est conforme aux spécifications de la Directive 2000/14/EEC	Je soussigné M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la directive 81/1051/EEC. Le niveau maximum pondéré de pression acoustique enregistré à la position de l'opérateur en champ libre en chambre demi-sourde était de:-	Je soussigné M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE, Co. Durham, DL5 6UP, Grande-Bretagne, certifie qu'un échantillon du produit ci-dessus a été essayé selon les indications de la norme ISO 5349. La moyenne quadratique pondérée des vibrations enregistrées à la position de la main de l'opérateur était de:-
Type d'outil de coupe.....Racleur en plastique Identification de la série.....Voir la Plaqueette D'identification Procédure d'évaluation de la conformité.....ANNEX VI Organisme notifié.....I.T.S., Cleeve Road, Leatherhead, Surrey, KT22 7SB England Autres directives.....98/37/EEC, 89/336/EEC, 73/23/EEC et aux normes.....EN786, IEC60335-1, IEC60335-2-91, EN61000-3-2, EN61000-3-3, EN55014-1, EN55014-2	Type..... A Largeur de coupe..... B Vitesse de rotation de l'outil de coupe..... C Niveau garanti de puissance sonore..... D Niveau mesuré de puissance sonore..... E Niveau..... F Valeur..... G Poids..... H	

EC CONFORMITEITSVERKLARING

Ik, ondergetekende M. Bowden of Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham. DL5 6UP. Verklaaren dat het product:- Categorie..... Elektrische gazonmaaier Merk..... Electrolux Outdoor Products Voldoet aan de specificaties van directief 2000/14/EEC	Ik, ondergetekende M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens richtlijn 81/1051/EEC. Het maximale A-belaste geluidsdrukniveau dat is geregistreerd bij de positie van de bediener in een semi geluidichte ruimte bij vrije veld condities bedraagt:-	Ik, ondergetekende M. Bowden, Electrolux Outdoor Products, Aycliffe Industrial Park, NEWTON AYCLIFFE , Co. Durham, DL5 6UP, verklaar hierbij dat een proefexemplaar van het bovengenoemde product is getest volgens ISO 5349 als richtlijn. De maximale belaste effectieve waarde van trilling, geregistreerd bij de positie van de hand van de bediener, bedraagt:-
Type maaier..... Plastic messen Identificatie van serie..... Zie Productlabel Procedure voor het beoordelen van conformiteit..... ANNEX VI Op de hoogte gestelde instantie. I.T.S., Cleeve Road, Leatherhead, Surrey. KT22 7SB England Andere directieven..... 98/37/EEC, 89/336/EEC, 73/23/EEC en aan de volgende normen..... EN786, IEC60335-1, IEC60335-2-91, EN61000-3-2, EN61000-3-3, EN55014-1, EN55014-2	Type..... A Maaibreedte..... B Toerental maaier..... C Gegarandeerd geluidsvermogen..... D Gemeten geluidsvermogen..... E Niveau..... F Waarde..... G Gewicht..... H	

A	HV280
B	28 cm
C	7,350 RPM
D	93 dB (A)
E	92 dB (A)
F	80.9 dB(A)
G	2.13 m/s²
H	5.5 kg



Newton Aycliffe, 02/08/2004
M. Bowden,
Research & Development Director

BELGIQUE/BELGIË	Flymo Belgique/België Tel: 02 363 0311, Fax: 02 363 0391
ČESKÁ REPUBLIKA	Electrolux, spol. s.r.o., oz Electrolux Outdoor Products, Na Křečku 365, 109 00 Praha 10 - Horní Měcholupy. Tel: 274008905, Info-linka: 800/110 220 Internet: www.partner-flymo.cz E-mail: info@husqvarna.cz
DANMARK	Electrolux Outdoor Products, Flymo/Partner A/S, Lundtoftegaardsvej 93A, DK 2800 Kgs.Lyngby Tel: 45 87 75 77, Fax: 45 93 33 08, www.flymo-partner.dk
DEUTSCHLAND	Flymo Deutschland Tel: 097 21 7640, Fax: 097 21 764202
ESTONIA	Electrolux Estonia Ltd (Electrolux Eesti AS) Tel: (372) 6650010
FRANCE	Flymo France SNC Tel 01 46 67 8141, Fax 01 43 34 2491
FINLAND SUOMI	Electrolux Outdoor Products Finland Tel: 00 358 9 39611, Fax: 00 358 9 3961 2644
ITALIA	McCulloch Italiana s.r.l. - Via Como 72, 23868 Valmadrera (LECCO) - ITALIA Tel: 800 017829, Fax: 0341 581671
IRELAND	Flymo Ireland Tel: 01 4565222, Fax: 01 4568551
MAGYARORSZÁG	Electrolux Lehel Kft Tel: 00 36 1 251 41 47
NORGE	Flymo/Partner, div. av Electrolux Motor a.s. Tel: 69 10 47 90
NEDERLAND	Flymo Nederland Tel: 0172-468322, Fax: 0172-468219
ÖSTERREICH	Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ, Tel: 0732 770101-0, Fax: 0732 770101-40, email: office@husqvarna.co.at Internet: www.husqvarna.at
POLSKA	Electrolux Poland Sp. z o.o. Husqvarna, Wysockiego 15 b 03-371 Warszawa Tel:- (0-22) 330 96 00, Fax: (0-22) 330 96 35
SLOVENIJA	Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ, Tel: 0732 770101-0, Fax: 0732 770101-40, email: office@husqvarna.co.at Internet: www.husqvarna.at
SLOVENSKA	Electrolux Slovakia s.r.o., Borova Sihat 211, 033 01 Lipt. Hradok Tel: 044 522 14 19, Fax: 044 522 14 18, www.flymo-partner.sk
SCHWEIZ/SUISSE/SUIZZERA	Flymo Schweiz/Suisse/Suizzera Tel 062 889 93 50 / 889 94 25, Fax 062 889 93 60 / 889 94 35
SVERIGE	Electrolux Outdoor Products, Sverige Tel: 036 – 14 67 00, Fax: 036 – 14 60 70
UNITED KINGDOM	Electrolux Outdoor Products United Kingdom Tel: 01325 300303, Fax: 01325 310339

Electrolux Outdoor Products
Aycliffe Industrial Park
NEWTON AYCLIFFE
Co.Durham DL5 6UP
ENGLAND

Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339
UK Telephone - 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ
Registered number 974979 England



The Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

