

LT2116A2

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos


Reservdelar

ILLUSTRATED PARTS LIST

MFG ID NO. 96011012700

CUSTOMER CATALOG NO. LT2116A2


PRODUCT NO. 960 11 01-27

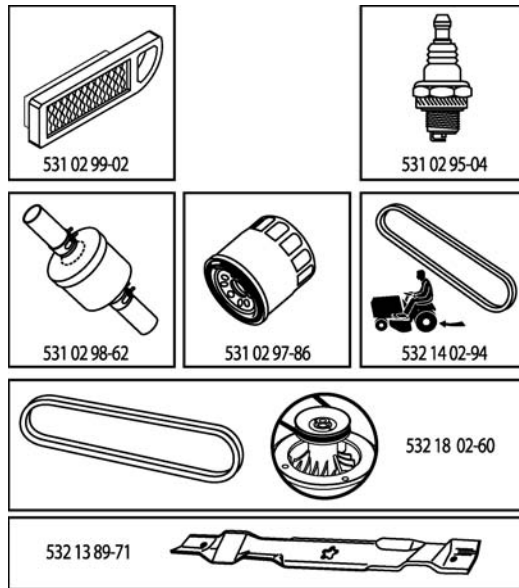

401941

REPAIR PARTS


TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
DECALS

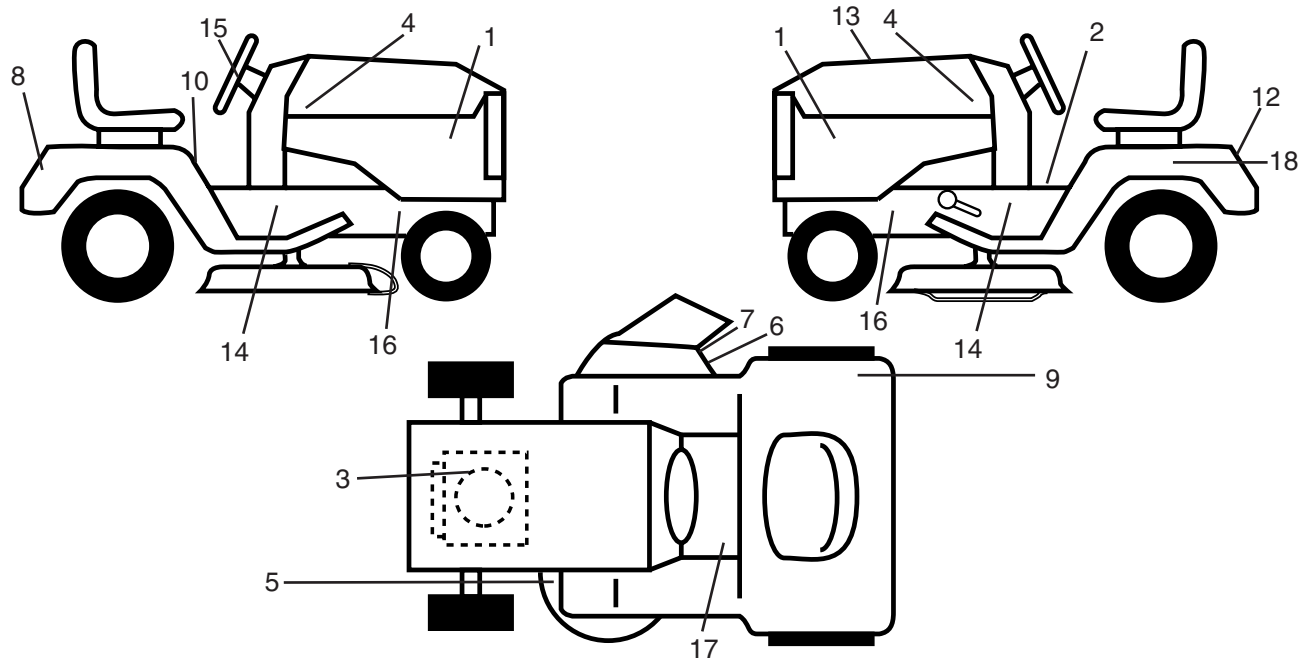

KEY NO.	PART NO.	DESCRIPTION
1	532 18 88-76	Decal, Side Panel
2	532 14 08-37	Decal, Brake Parking Sandle
3	532 19 68-41	Decal, Warning Eng. Syms.
4	532 18 95-53	Decal, Hood RH/LH
5	532 16 03-96	Decal, V-Belt Sch.
6	532 19 63-57	Decal, Warning Cutfinger
7	532 18 21-66	Decal, Mower Cutfinger Symbol
8	532 18 39-30	Decal, Logo, Fender
9	532 18 04-32	Decal, 100 DB/CE
10	532 40 03-89	Decal, Read Owners Manual
11	532 14 50-05	Decal, Bat Dan/Poi P/L Sym
12	532 40 04-23	Decal, Fender

KEY NO.	PART NO.	DESCRIPTION
13	532 40 19-41	Decal, RPL Int
14	532 40 11-46	Decal, Warning Service/Fire
15	532 18 57-73	Decal, Logo Steering Wheel Cap
16	532 15 97-36	Decal, Chassis Hot Muffler
17	532 15 97-37	Decal, Brake/Clutch Symbol LT
18	532 14 50-05	Decal, Bat. Dan/Poi
--	532 16 25-98	Decal, Drawbar Load Limit
--	532 16 69-60	Decal, By-Pass
--	532 13 83-11	Decal, Handle Lft. Height Adjust
--	532 18 82-52	Pad, Footrest LH
--	532 18 82-53	Pad, Footrest RH
--	532 40 18-30	Manual, Operator's (Euro)

WHEELS & TIRES

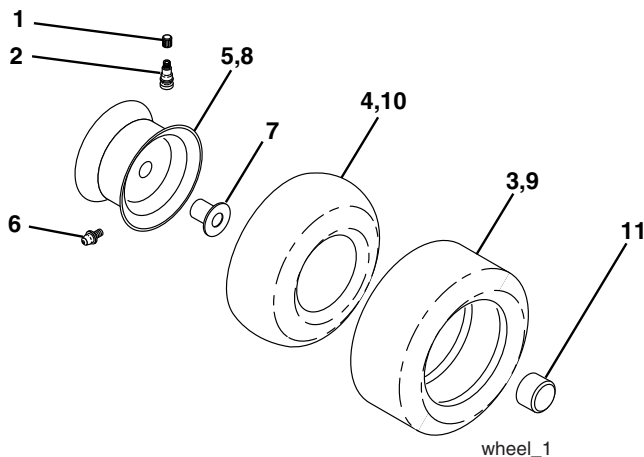


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 x 6 0 - 6 Service
4	532 05 99-04	Tube Front (Service Item Only)
5	532 13 83-36	Rim Asm 6"front Silver Service
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 13 83-37	Rim Asm 8"rear Silver Service
9	532 12 20-82	Tire R Ts 20 x 10-8 C Service
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 17 50-39	Cap Axle Blk 1 50 x 1 00
--	532 14 43-34	Sealant, Tire (10 oz. tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
SCHEMATIC

03054 (197428)

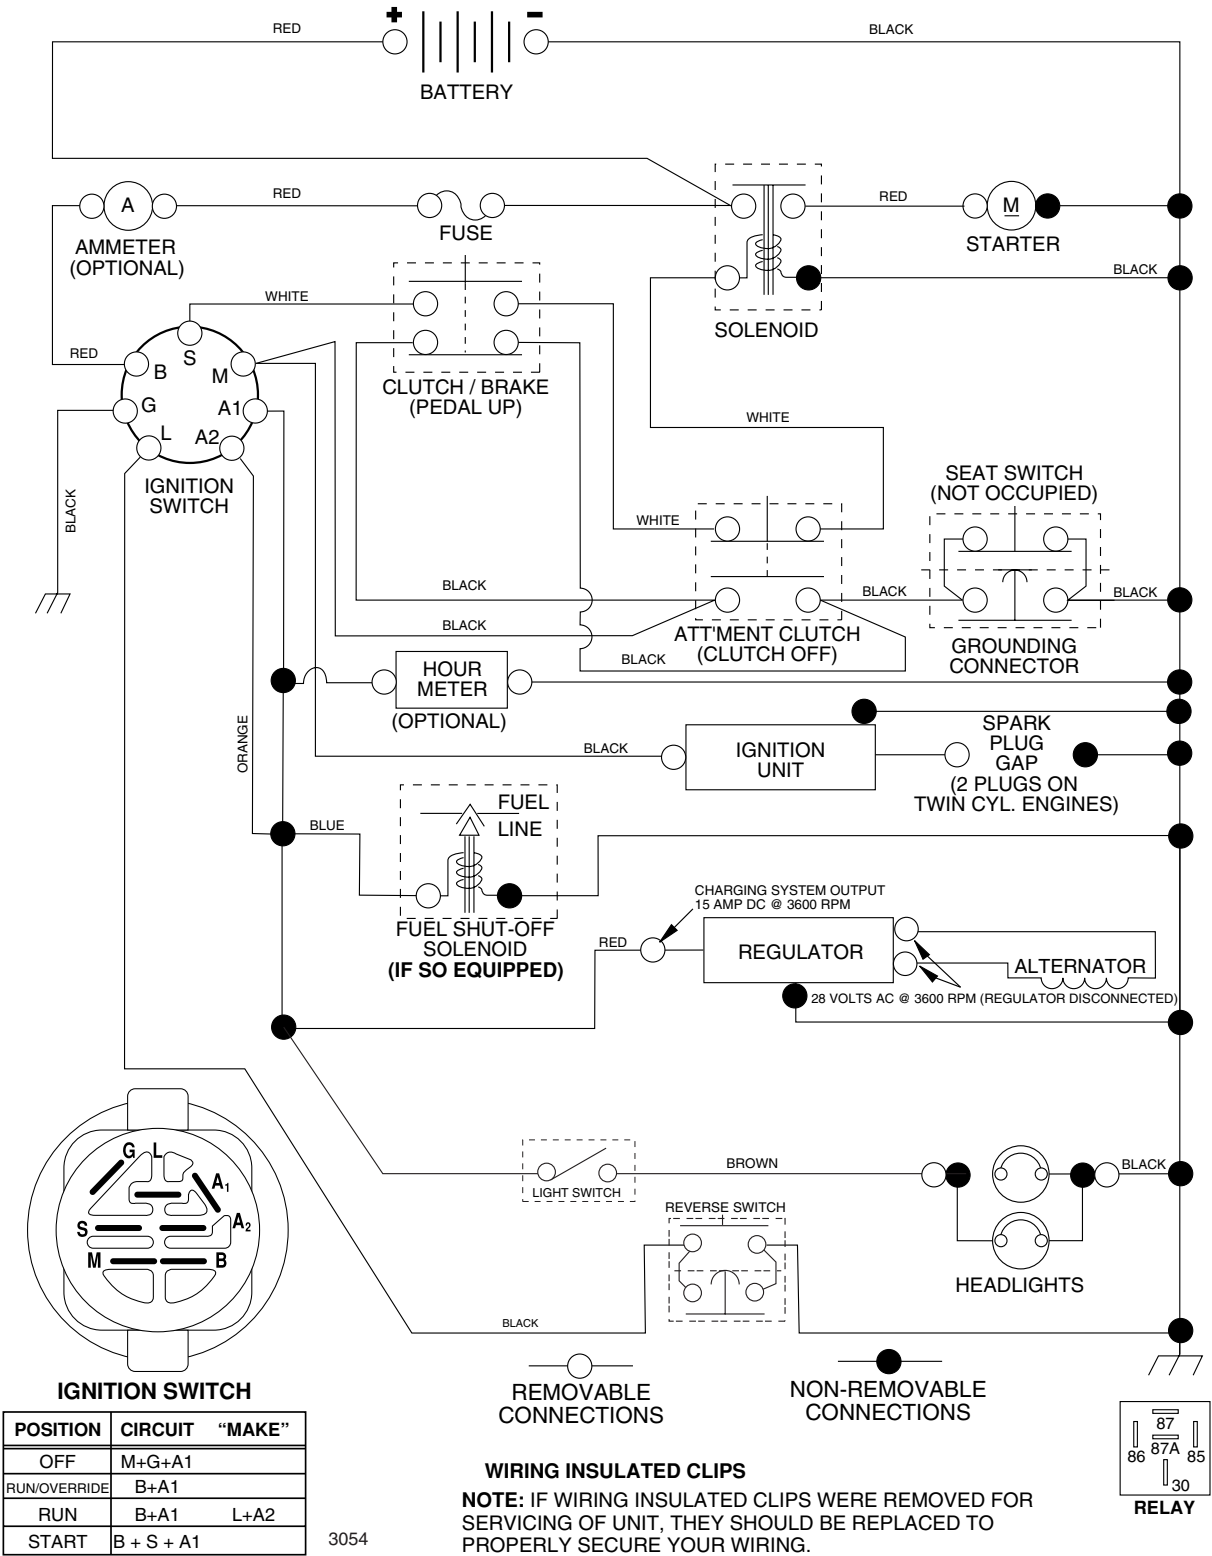

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
ELECTRICAL

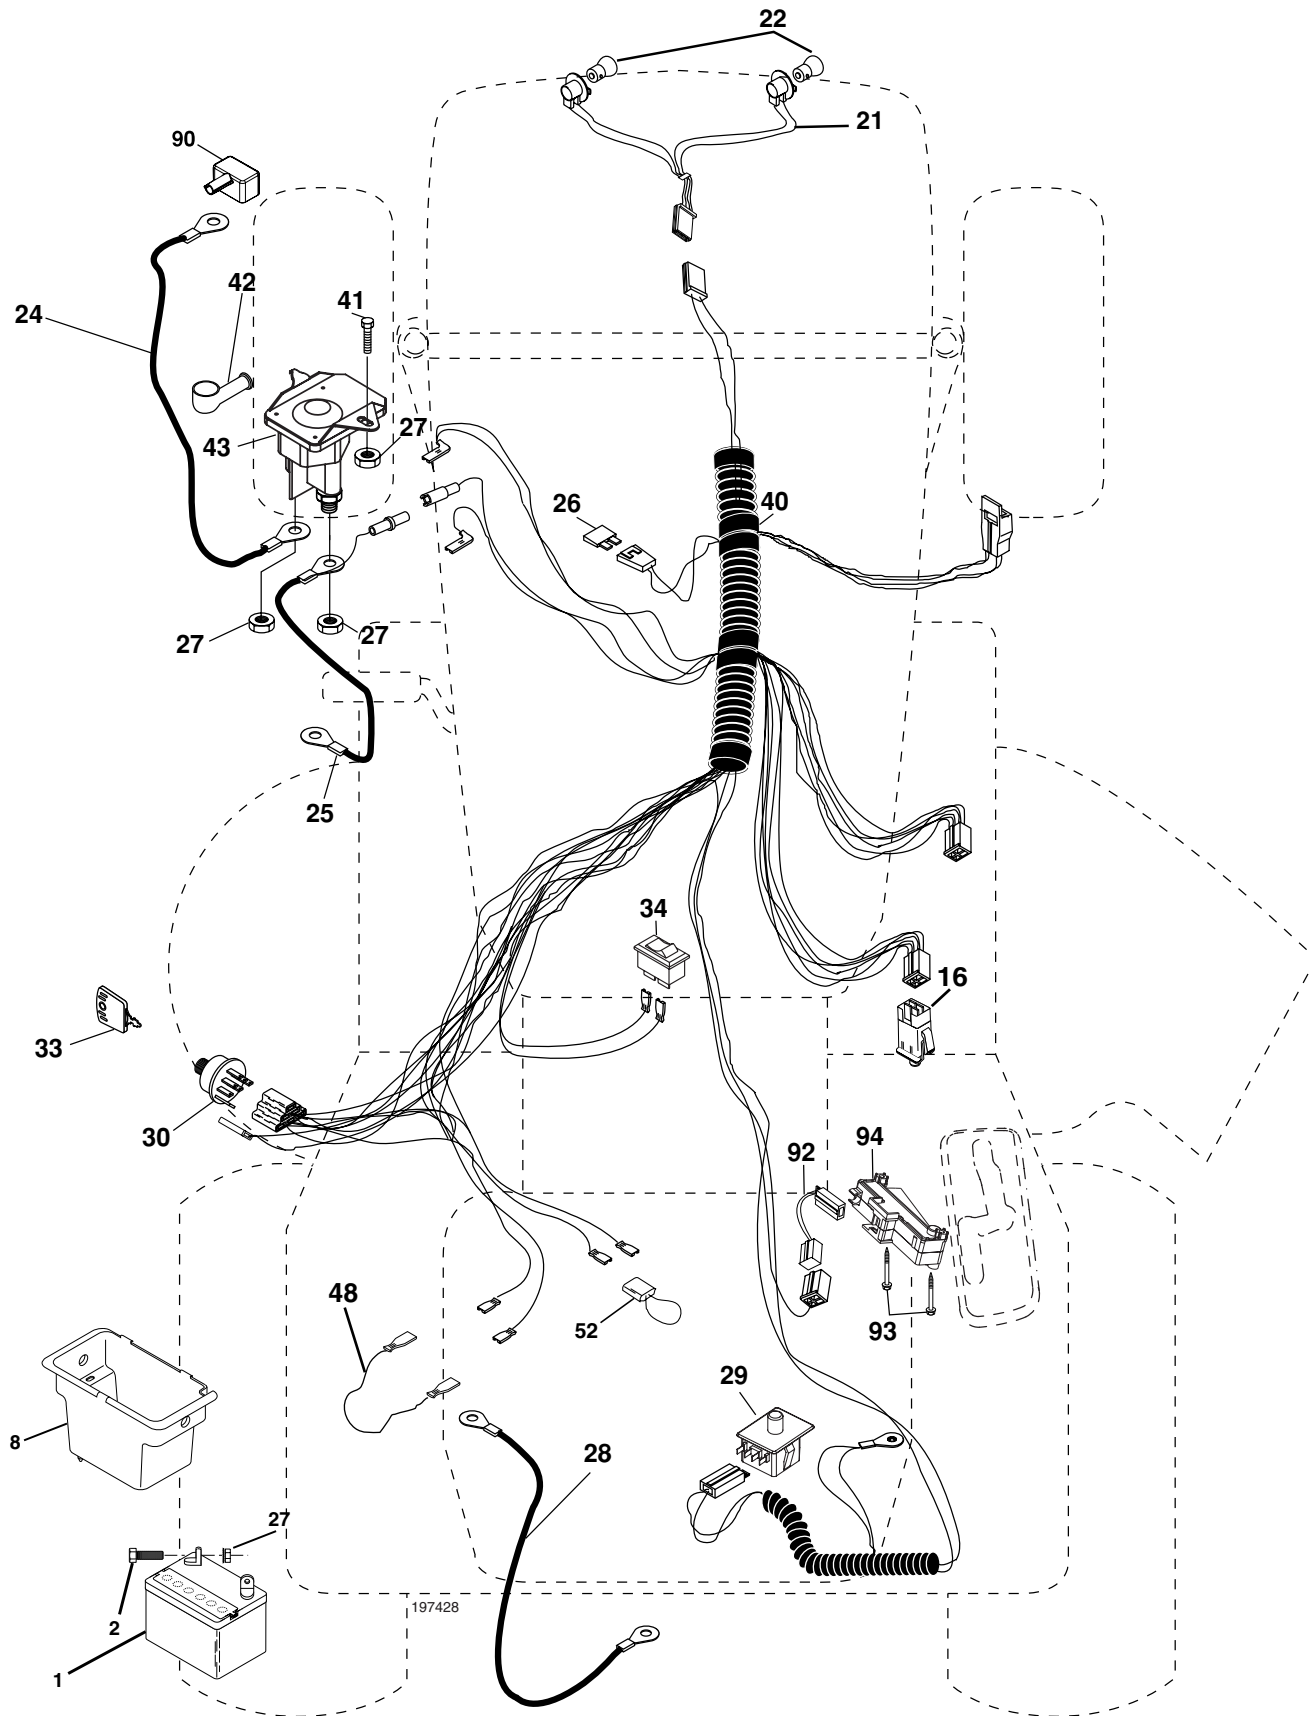

REPAIR PARTS


TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532 14 49-27	Battery
2	874 76 04-12	Bolt Hex Hd 1/4-20 unc x 3/4
8	532 17 66-89	Box Battery
16	532 17 61-38	Switch Interlock Push-In
21	532 18 37-59	Harness Asm Light W/4152J
22	532 00 41-52	Bulb Light #1156
24	532 12 47-70	Cable Battery 6 Ga. 22" red
25	532 14 61-47	Cable Battery 6 Ga. W/16 Ga. Wire 44"
26	532 17 51-58	Fuse 20 AMP
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 12 47-73	Cable Ground
29	532 19 27-49	Switch Seat
30	532 19 33-50	Switch Ignition
33	532 14 04-01	Key Ign Molded Generic Delta
34	532 11 07-12	Switch Light
40	532 19 74-28	Harness Ignition
41	871 11 04-08	Bolt Blk Fin Hex 1/4-20 unc x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 19 25-07	Solenoid
48	532 14 08-44	Adapter Ammeter
52	532 14 19-40	Protection Wire Loop Hour Meter
90	532 18 04-49	Cover Terminal
92	532 19 66-15	Harness Pigtail
93	532 19 25-40	Screw Plastite 10-24 x 2.0
94	532 19 18-34	Module Reverse

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
CHASSIS AND ENCLOSURES

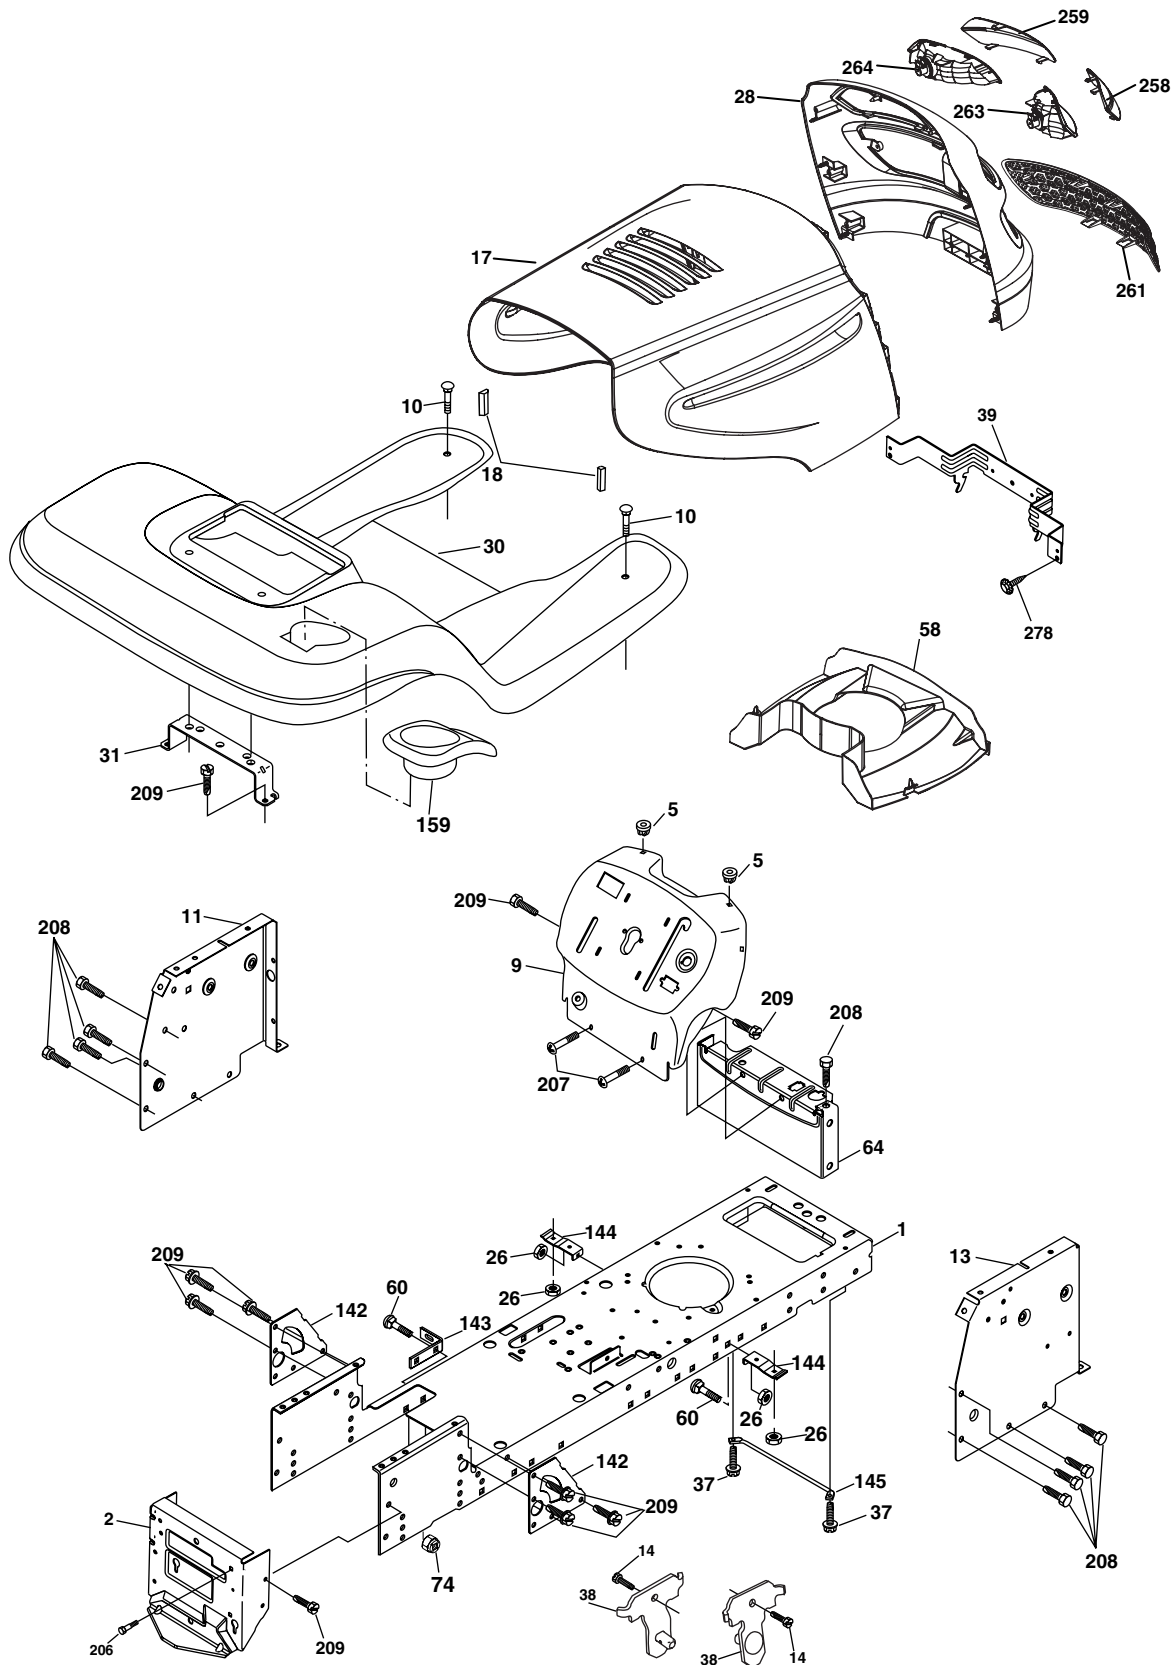

REPAIR PARTS


TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1	532 17 46-19	Chassis Wldmt.
2	532 17 65-54	Drawbar 12 Ga.
5	532 15 52-72	Bumper Hood/Dash
9	532 19 48-22	Dash
10	872 14 06-08	Bolt RdHd Sqnk. 3/8-16 x 1
11	532 17 49-96	Panel Asm. Dash Lh
13	532 18 69-52	Panel Dash Rh
14	817 49 06-08	Screw Thdrol 3/8-16 x 1/2
17	532 19 47-57	Hood Pnt
18	532 18 49-21	Bumper Hood Large 1.75"
26	873 80 06-00	Nut Lock Hex w/Ins 3/8-16 unc
28	532 19 29-15	Grill
30	532 40 14-91	Fender /Ftrest Pnt STL
31	532 13 99-76	Bracket Fender
37	817 49 05-08	Screw Thdrol 5/16-18 x 1/2
38	532 17 57-10	Bracket Asm. Pvt. Mwr. Rear
39	532 17 47-14	Bracket Pivot
58	532 18 43-22	Duct Air
60	872 14 06-06	Bolt Rdhd Sqnk 3/8-16 unc x 3/4
64	532 15 47-98	Dash Lower
74	873 68 06-00	Nut, Crownlock 3/8-16 unc
142	532 17 57-02	Plate Reinforcement STLT
143	532 18 66-89	Bracket Sway Bar
144	532 17 55-82	Bracket Footrest STLT
145	532 15 65-24	Rod Pivot Chassis/Hood
159	532 18 13-55	Cupholder
206	532 17 01-65	Bolt Shoulder 5/16-18
207	817 67 05-08	Screw Thdrol 5/16-18 x 1/2
208	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
209	817 00 06-12	Screw Hexwsh Thdr 3/8-16 x 3/4
258	532 18 97-55	Lens Grille RH
259	532 18 97-54	Lens Grille LH
261	532 18 97-53	Insert Grille
263	532 18 38-33	Bezel Grille RH
264	532 18 38-32	Bezel Grille LH
278	532 19 16-11	Screw 10 x 3/4 Single Lead Hex
--	532 00 54-79	Plug Btn Blk

NOTE: All component dimensions given in U. S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
DRIVE

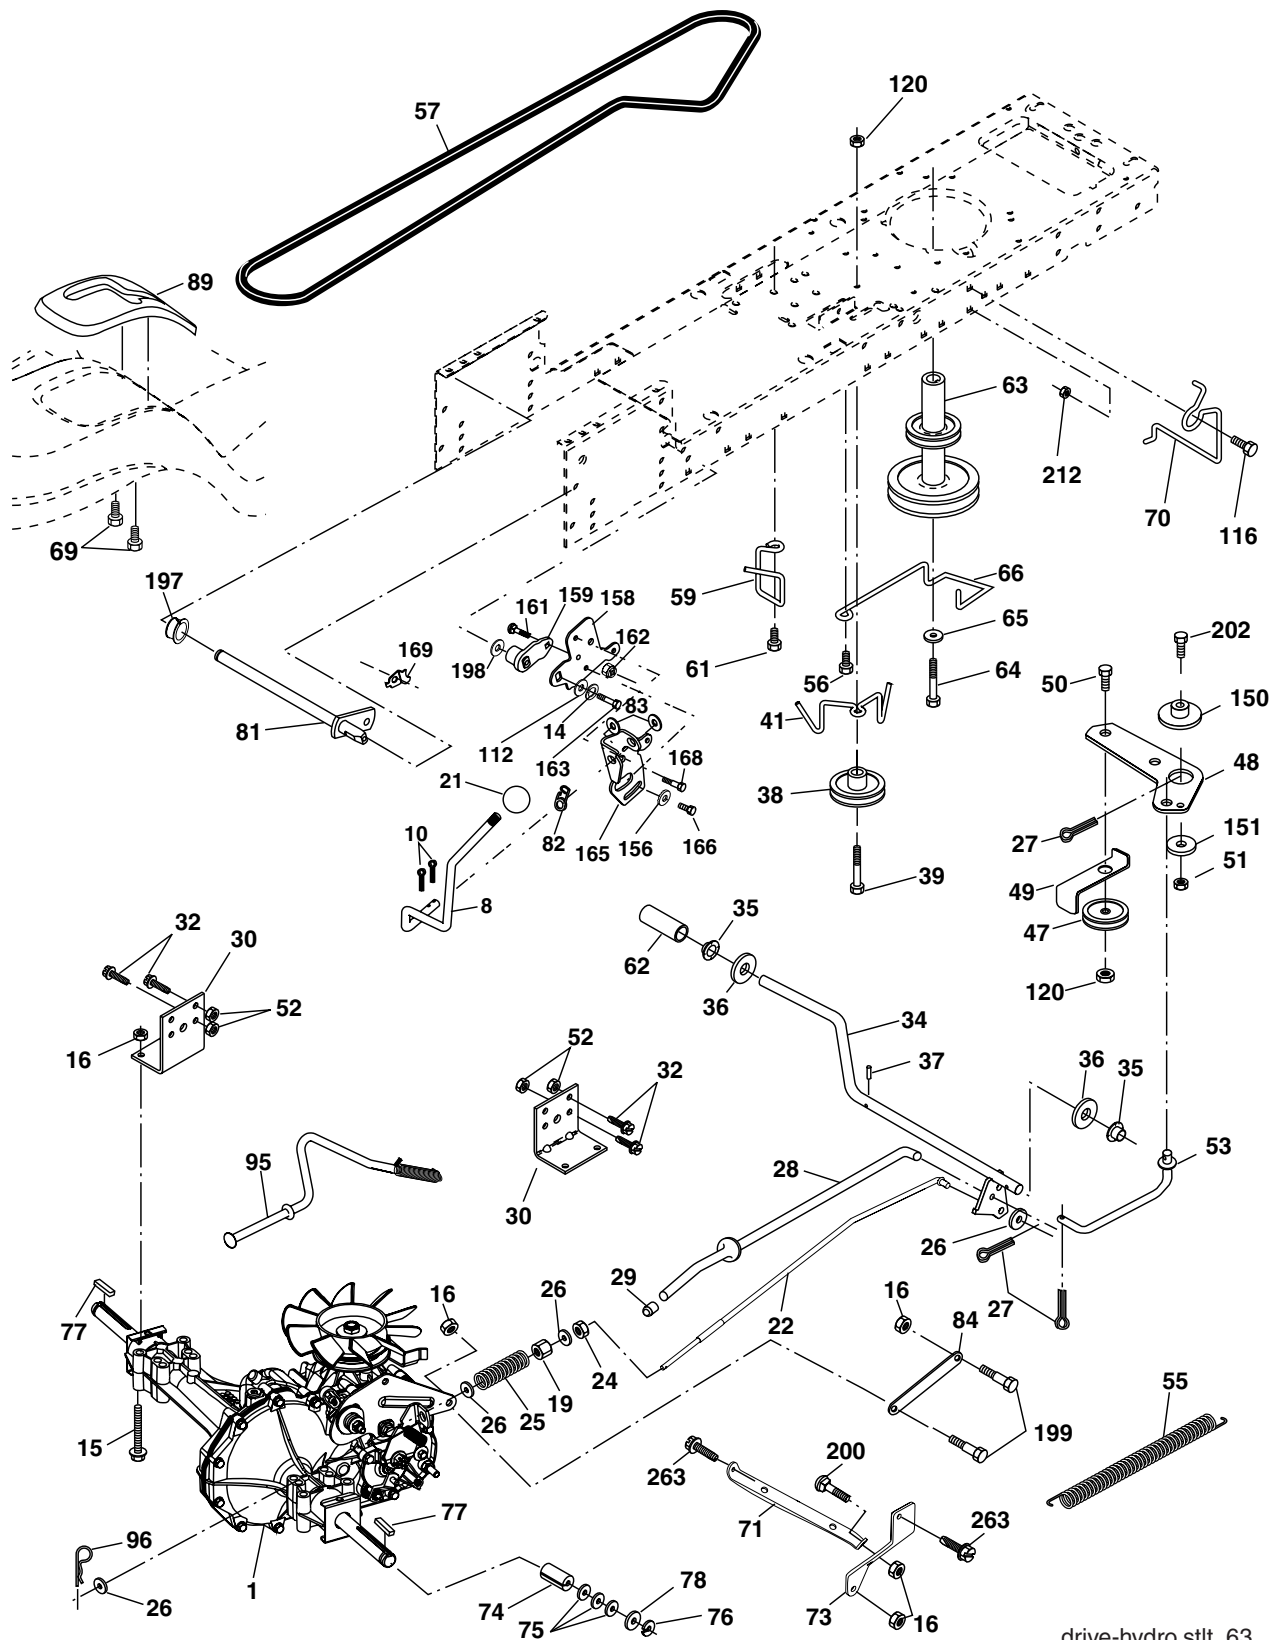

drive-hydro.stlt_63

REPAIR PARTS

**TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
DRIVE**


KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle Hydro Gear 314-0510 Order parts from transaxle manu- facturer
8	532 19 25-02	Rod Shift Fender
10	876 02 04-16	Pin Cotter 1/8 x 1 CAD
14	810 04 04-00	Washer Lock Hvy Helical
15	874 49 05-44	Bolt Hex Flghd. 5/16-18 Gr. 5
16	873 80 05-00	Nut Lock Hex W/Ins. 5/16-18 unc P
19	873 80 06-00	Nut Lock Hex W/Wsh 3/8-16 unc
21	532 13 05-64	Knob Deluxe
22	532 16 94-98	Rod, Brake Hydro
24	873 35 06-00	Locknut
25	532 10 68-88	Spring, Brake Rod
26	819 13 13-16	Washer
27	876 02 04-12	Pin Cotter 1/8 x 3/4 CAD.
28	532 17 57-65	Rod, Parking Brake
29	532 07 16-73	Cap, Parking Brake
30	532 16 95-92	Bracket, Transaxle
32	874 76 05-12	Bolt Hex Hd 5/16-18 unc x 3/4
34	532 17 55-78	Shaft, Foot Pedal
35	532 12 01-83	Bearing, Nylon
36	819 21 16-16	Washer
37	532 12 49-63	Pin, Roll
38	532 17 91-14	Pulley, Composite, Flat
39	872 11 06-22	Bolt RDHD 3/8-16 unc x Z-3/4 Gr.5
41	532 17 55-56	Keeper, Belt Idler Flat
47	532 12 77-83	Pulley, Idler, V-Groove
48	532 15 44-07	Bellcrank Grnd Clutch
49	532 12 32-05	Retainer, Belt
50	872 11 06-12	Bolt Carr. Sh. 3/8-16 x 1-1/2 Gr. 5
51	873 68 06-00	Nut
52	873 68 05-00	Nut Crown Lock 5/16-18
53	532 19 96-52	Link, Clutch
55	532 10 57-09	Spring, Return, Clutch
56	817 06 06-20	Screw 3/8-16 x 1-1/4
57	532 14 02-94	V-Belt, Ground Drive
59	532 16 96-91	Keeper, Center Span
61	817 12 06-14	Screw 3/8-16 x .875 SMGML Tap/R.Z
62	532 12 48-72	Cover, Pedal
63	532 18 02-19	Pulley, Engine
64	532 17 39-37	Bolt, Hex 7/16-20 x 4 x Gr. 5-1.5
65	810 04 07-00	Washer

KEY NO.	PART NO.	DESCRIPTION
66	532 15 47-78	Keeper Belt Engine Hydro
69	532 14 24-32	Screw Hex Wsh Hi-Lo 1/4-1/2 unc
70	532 18 02-18	Guide Belt Mower Drive RH
71	532 16 91-83	Strap Torque Lh Hydro
73	532 16 91-82	Strap Torque Rh Hydro
74	532 13 70-57	Spacer, Axle
75	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
76	812 00 00-01	E-Ring
77	532 12 35-83	Key, Square
78	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
81	532 16 55-96	Shaft Asm Cross Tapered 510 20"
82	532 16 57-11	Spring Torsion T/A
83	819 17 12-16	Washer 17/32 x 3/4 x 16 Ga.
84	532 16 95-94	Link Transaxle HB-0510
89	532 19 57-46	Console, Shift
95	532 17 02-01	Control Asm. Bypass Hydro
96	532 12 47-88	Retainer Spring 1" Zinc/Cad
112	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
116	872 14 06-08	bolt Rdhd Sqnk 3/8-16 unc x 1
120	873 90 06-00	Nut Lock Flg 3/8-16
150	532 17 54-56	Spacer Retainer
151	819 13 32-10	Washer 13/32 x 2 x 10 Ga.
156	532 16 60-02	Washer Srrted 5/16ID x 1.125
158	532 16 55-89	Bracket Shift Mount
159	532 18 39-00	Hub Shift
161	872 14 04-06	Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr. 5
162	873 68 04-00	Nut Crownlock 1/4-20 unc
163	874 78 04-16	Bolt Hex Fin 1/4-20 unc x 1 Gr. 5
165	532 16 56-23	Bracket Pivot Lever
166	817 49 05-10	Screw 5/16-18 x 5/8
168	532 16 54-92	Bolt Shoulxder 5/16-18 x .561
169	532 16 55-80	Plate Fasteneing Lt
197	532 16 96-13	Nylinder Snap-In
198	532 16 95-93	Washer Nyl. 7/8 ID x .105"
199	532 16 96-12	Bolt Shoulder 5/16-18
200	872 14 05-08	Bolt Rdhd Sqnk 5/16-18 x 1
202	872 11 06-14	Bolt Rdhd 3/8-16 unc x 1-3/4 Gr. 5
212	532 14 52-12	Nut Hexflange Lock
263	817 00 06-12	Screw Hex Wsh Thdr 3/8-16 x 3/4 BL

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
STEERING ASSEMBLY

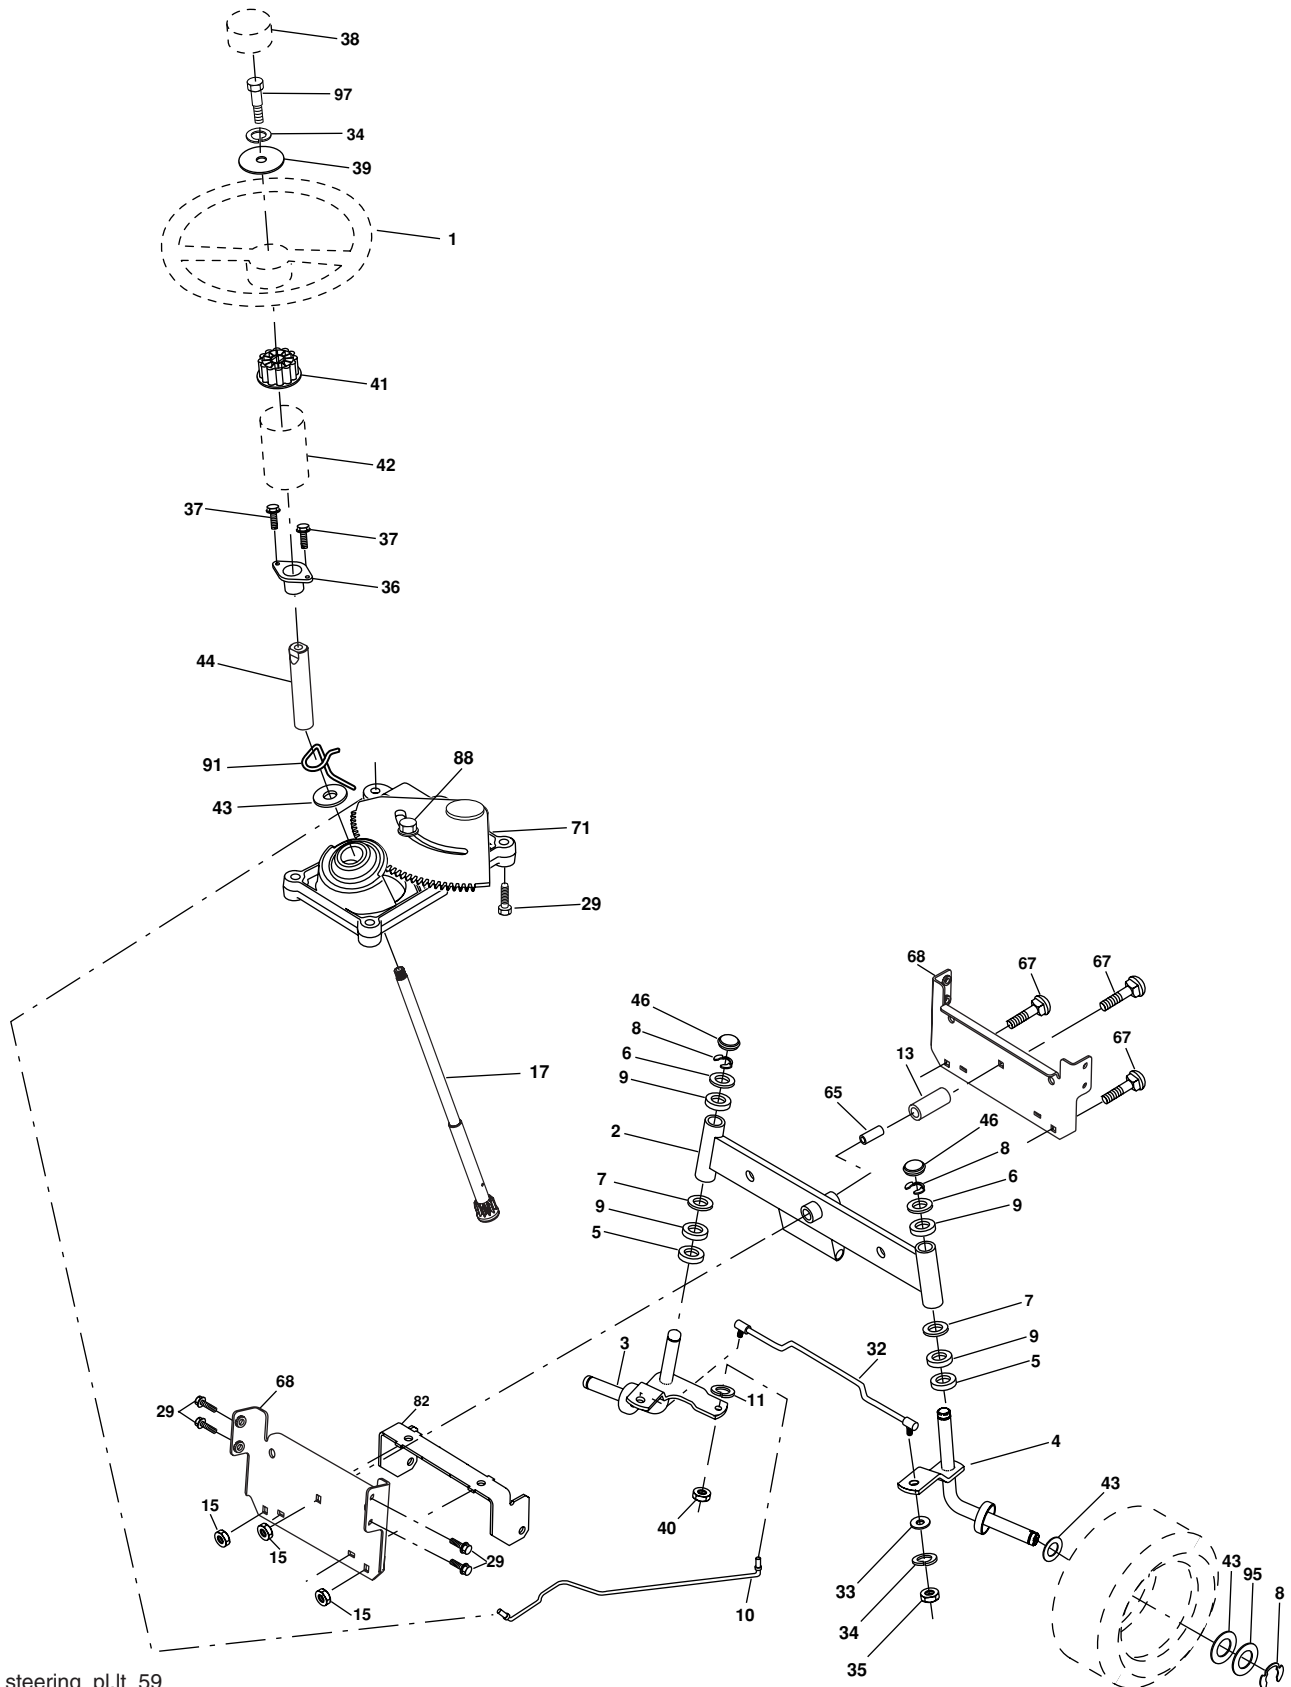

REPAIR PARTS


TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532 19 46-37	Wheel Steering
2	532 19 56-73	Axle Front
3	532 16 98-40	Spindle Asm LH
4	532 16 98-39	Spindle Asm Stmp RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga
7	819 27 20-16	Washer 27/32 x 1-1/4 x 16 Ga.
8	812 00 00-29	Ring Klip #t5304-75
9	532 12 49-37	Bearing Col. Strg.
10	532 17 51-21	Link Drag
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
13	532 13 65-18	Spacer Bearing Axle Front
15	532 14 52-12	Nut Hex Flange Lock
17	532 19 07-53	Shaft Asm Strg
29	817 00 06-12	Screw 3/8-16 x .75
32	532 17 18-88	Rod Asm Tie Ball J Solid
33	819 11 12-16	Washer 11/32 x 3/4 x 16 Ga.
34	810 04 05-00	Washer Lock Hvy HLCL Spr. 5/16
35	873 54 05-00	Nut Crown Lock 5/16-24
36	532 15 50-99	Bushing Strg
37	532 15 29-27	Screw TT #32.5 x 5 x 3/8 Flange
38	532 19 46-03	Cap Wheel Steer
39	819 11 38-12	Washer 11/32 ID x 2-3/8 OD 12 Ga.
40	873 54 06-00	Nut Crownlock 3/8-24
41	532 18 67-37	Adaptor Wheel Strg
42	532 16 96-33	Boot Dash Steering
43	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
44	532 19 07-52	Shaft Exten. Strg. Spline
46	532 12 12-32	Cap Spindle Fr Top Blk
65	532 16 03-67	Spacer
67	872 11 06-18	Bolt Rdhd Sqnk 3/8-16 x 2-1/4
68	532 16 98-27	Brace, Axle
71	532 17 51-46	Steering Asm
82	532 19 99-78	Bracket Susp Chassis
88	532 17 51-18	Bolt Shoulder 7/16-20
91	532 17 55-53	Clip Steering
95	532 18 89-67	Washer Harden .793 x 1.637 x .060
97	874 78 05-64	Bolt 5/16-18 unc x 4"L Gr. 5

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
ENGINE

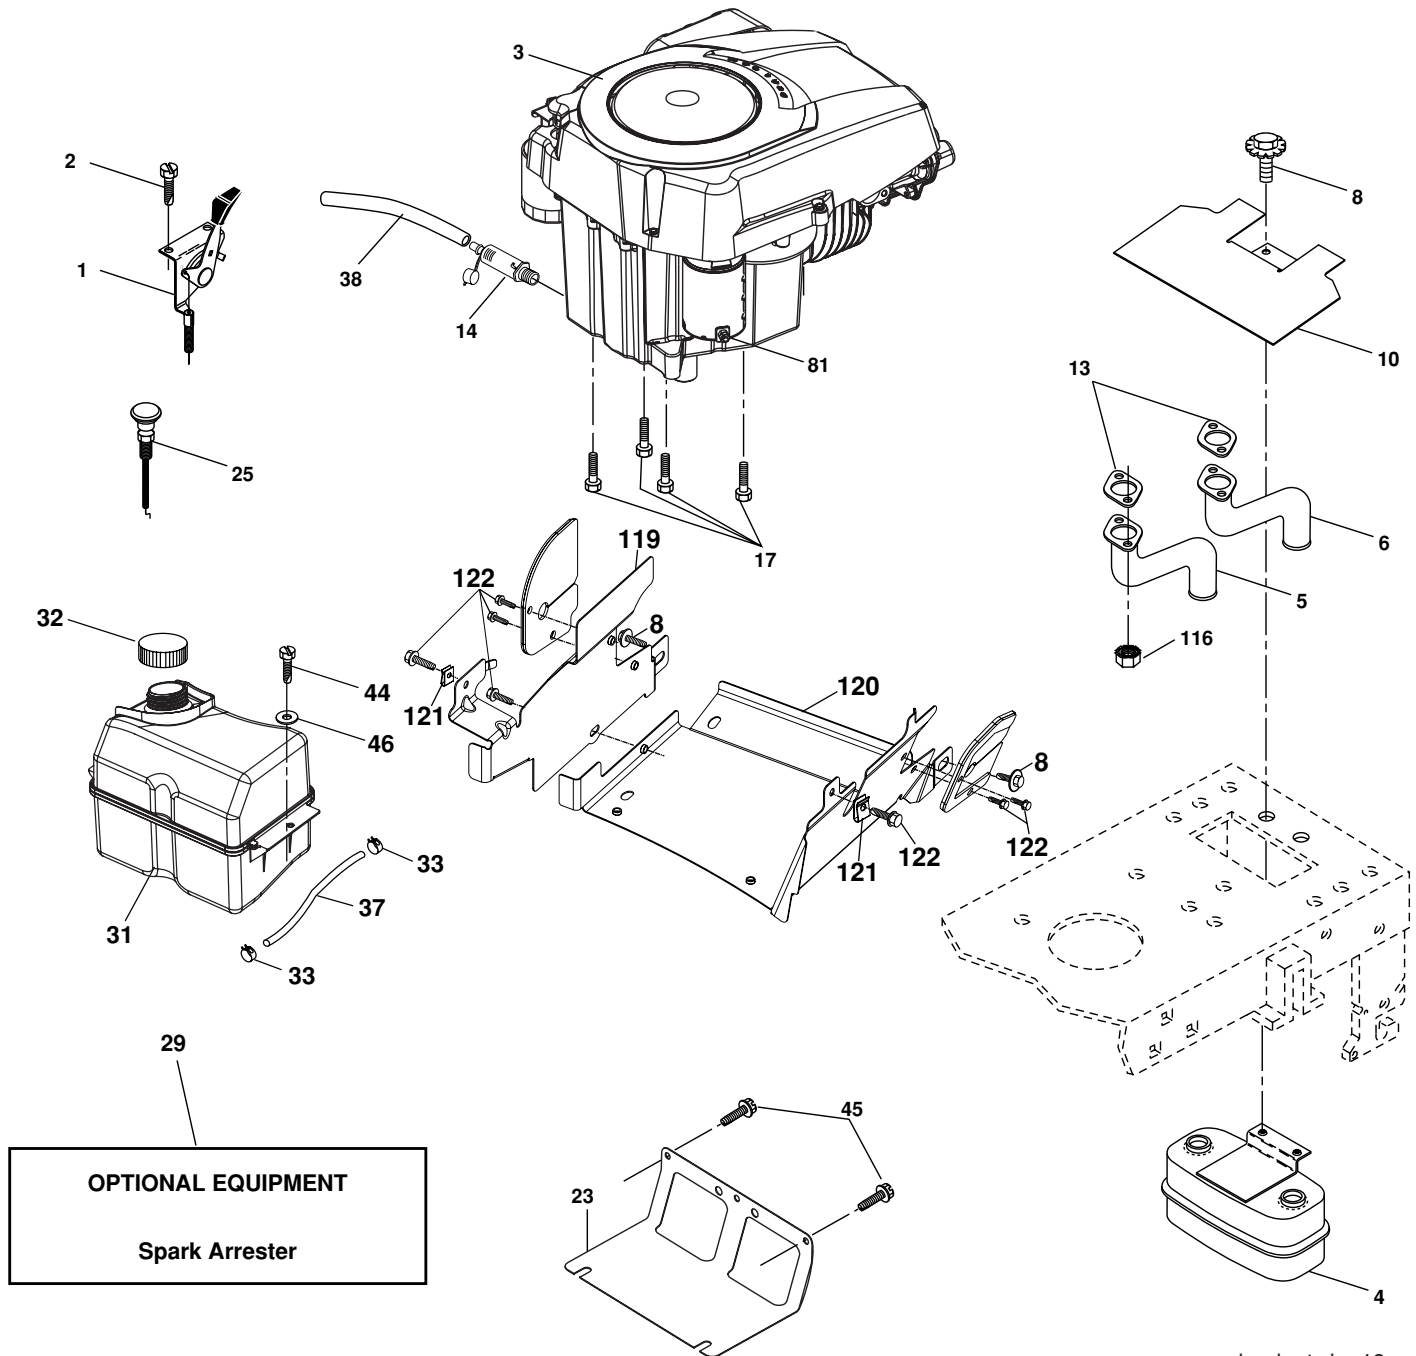

engine-ko.twin_19

REPAIR PARTS


TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	532 17 08-63	Control Th/ch
2	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
3	-----	Engine Kohl Model No. SV710 (Order parts from engine manufacturer)
4	532 14 97-23	Muffler
5	532 14 66-99	Pipe Exhaust LH
6	532 14 67-00	Pipe Exhaust RH
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	532 14 66-29	Shield Heat Muffler
13	532 18 60-54	Gasket Eng
14	532 14 84-56	Tube Drain Oil Easy
17	817 12 06-16	Screw 3/8-16 x 1
23	532 16 98-37	Shield Browning/Debris Guard
25	532 19 17-17	Control Choke
29	532 13 71-80	Kit Spark Arrestor
31	532 18 55-34	Tank Fuel
32	532 19 77-25	Cap Asm Fuel Top
33	532 12 34-87	Clamp Hose Black
37	532 13 70-40	Line Fuel
38	532 18 16-54	Plug Drain Oil Easy
44	817 67 04-12	Screw Hex Wsh THDROL 1/4-20 x 3/4
45	817 00 06-12	Screw 3/8-16 x .75 SMGML
46	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
81	532 16 33-05	Nut Flange M8-1.25
116	532 18 43-62	Nut Hex Flange Toplock M8-1.25
119	532 40 05-95	Guard Asm. Engine LH
120	532 40 05-94	Guard Asm. Engine RH
121	532 19 66-88	Clip Threaded
122	532 13 77-29	Screw Thd Roll 1/4-20 x 5/8
123	817 67 05-08	Screw Thdroll 5/16-18 x 1/2

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
SEAT ASSEMBLY

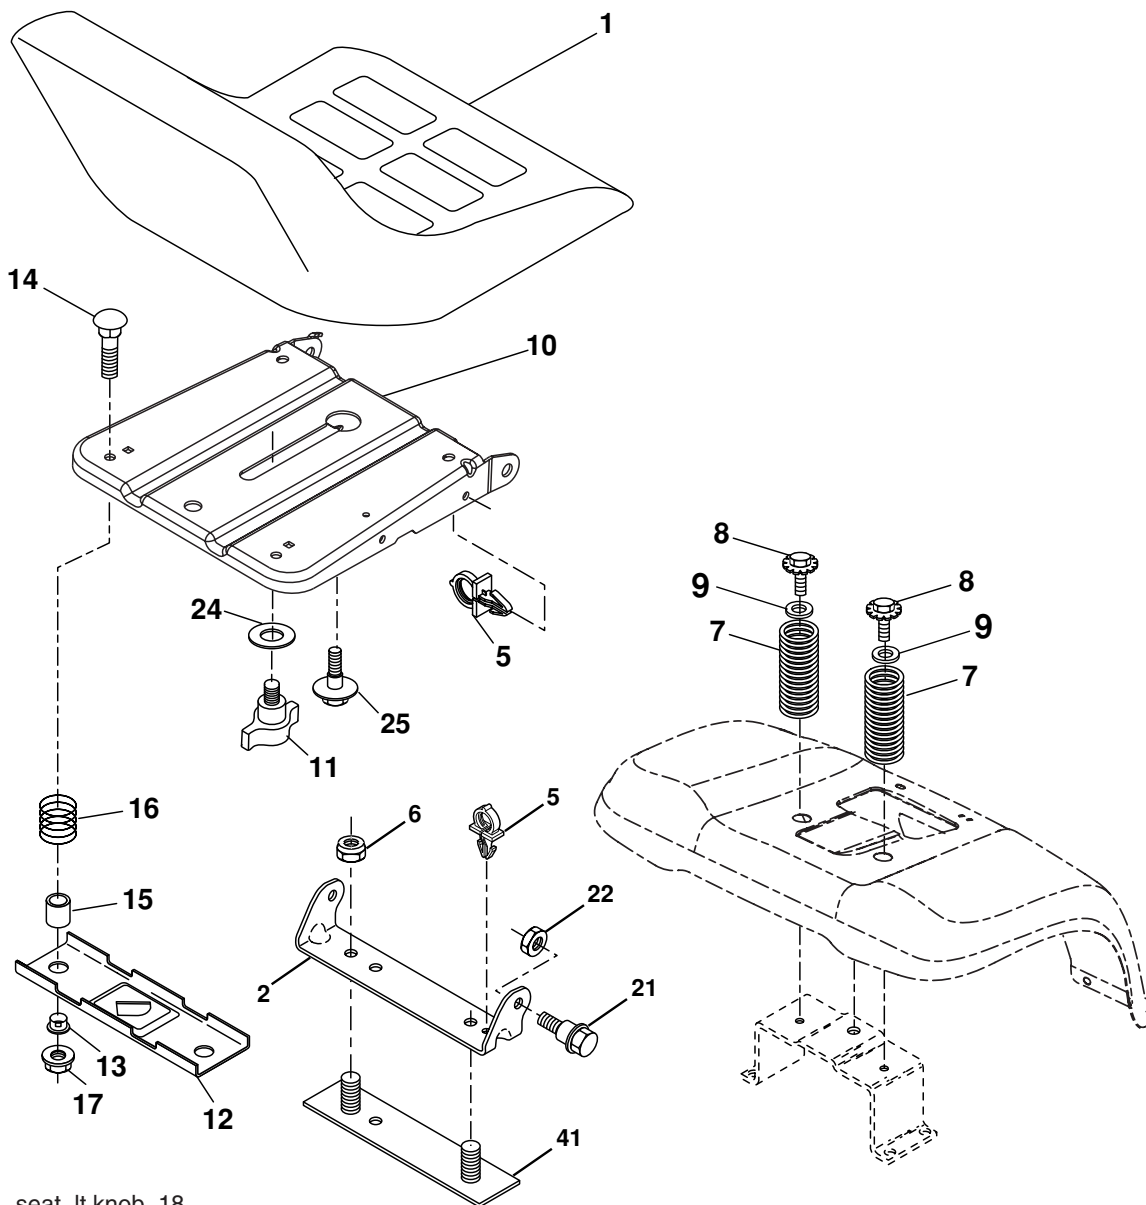

seat_lt.knob_18


KEY NO.	PART NO.	DESCRIPTION
1	532 40 10-43	Seat
2	532 14 05-51	Bracket Pivot Seat
5	532 14 50-06	Clip Push-in Hinged
6	873 80 06-00	Nut Lock Hex w/Ins. 3/8-16 unc
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 00 06-16	Screw 3/8-16 x 1.5 SMGML
9	819 13 16-14	Washer 13/32 x 1 x 14 Ga.
10	532 19 55-30	Pan Seat
11	532 16 63-69	Knob Seat Adj Wingnut
12	532 17 46-48	Bracket Mounting Switch
13	532 12 12-48	Bushing Snap Blk Nyl 50 Id

KEY NO.	PART NO.	DESCRIPTION
14	872 05 04-12	Bolt Rdhd Sht Nk 1/4-20 x 1-1/2
15	532 12 12-49	Spacer Split 28 x 88 Zinc
16	532 12 37-40	Spring Cprsn 1 310 Blk Pnt
17	532 12 39-76	Nut Lock 1/4 Lge Flg Gr. 5 Zinc
21	532 17 18-52	Bolt Shoulder 5/16-18 unc-2A
22	873 80 05-00	Nut Lock 5/16-18
24	819 17 19-12	Washer 17/32 x 1-3/16 x 12 Ga.
25	532 12 70-18	Bolt Shoulder 5/16-18 x .62
41	532 14 06-75	Strap Asm. Fender

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
MOWER LIFT

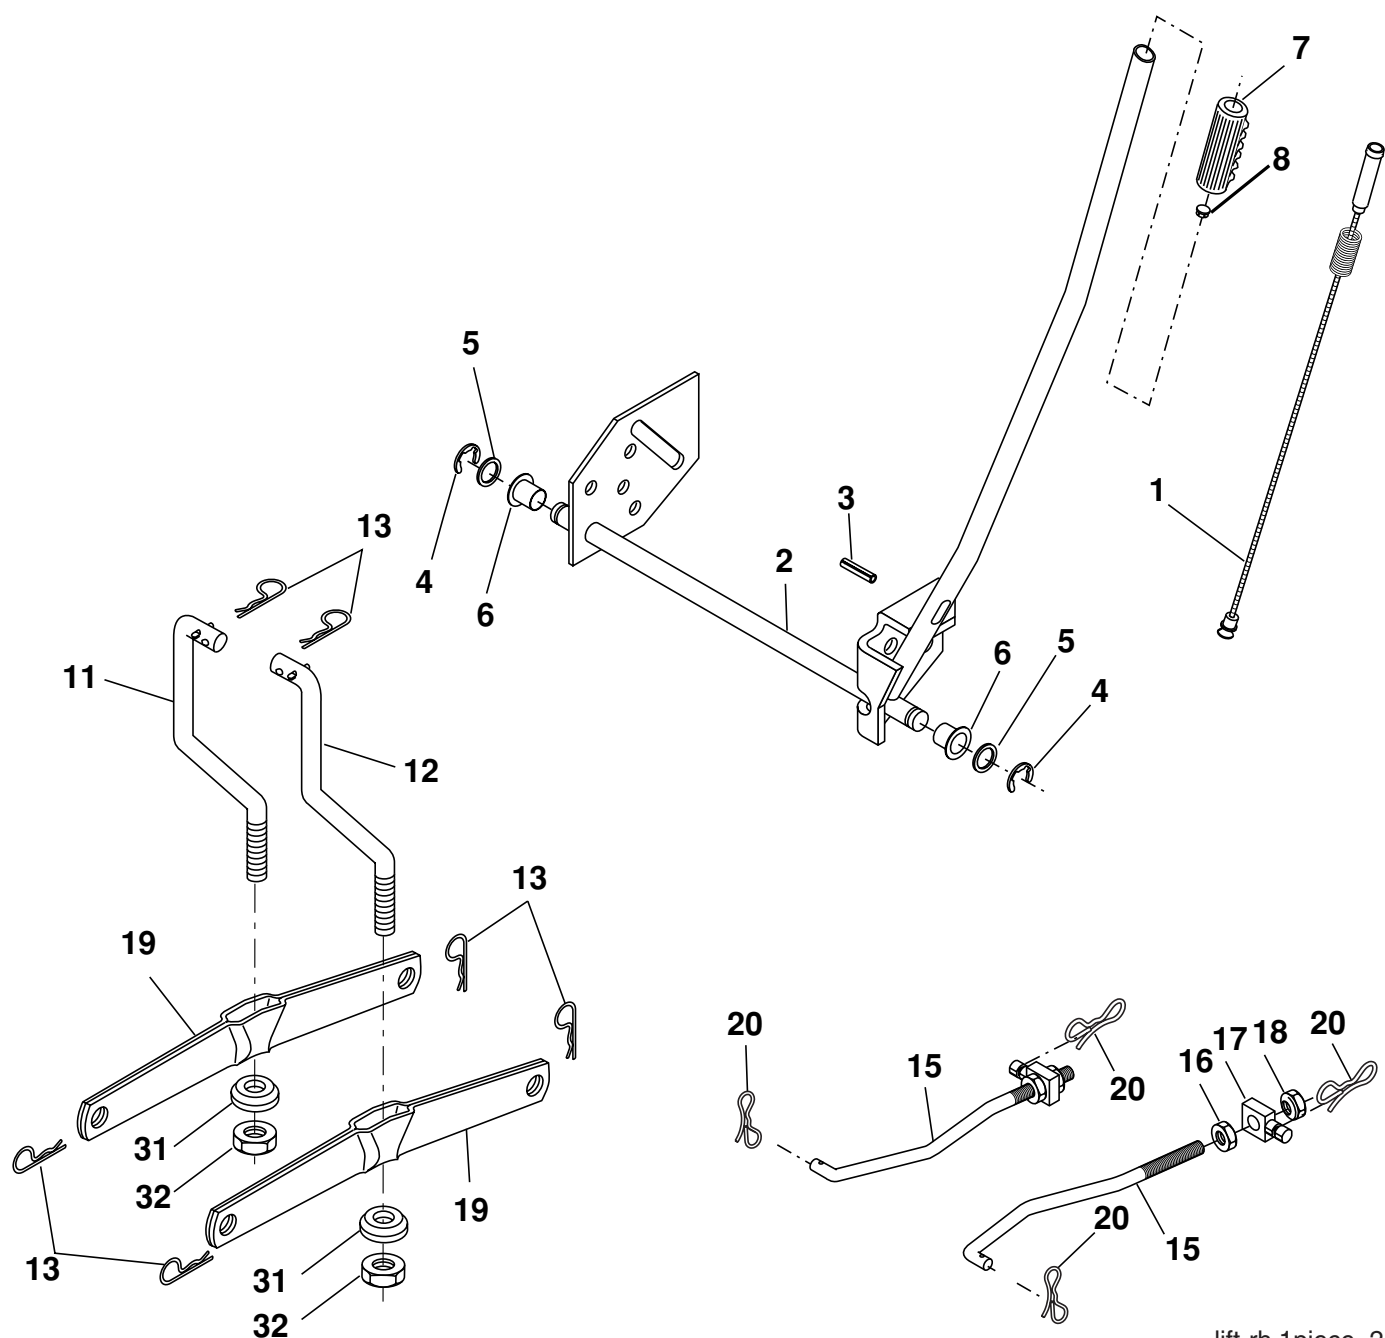

lift-rh.1piece_25


KEY NO.	PART NO.	DESCRIPTION
1	532 19 84-17	Wire Asm Inner/Sprg W/plunger LT
2	532 19 80-70	Shaft Asm Lift
3	532 18 88-22	Pin Groove
4	812 00 00-02	E Ring #5133-62
5	819 21 16-21	Washer 21/32 x 1 x 21 Ga.
6	532 12 01-83	Bearing Nylon Blk 629 Id
7	532 12 56-31	Grip Handle Fluted Blk
8	532 12 23-65	Button Plunger Red
11	532 13 98-65	Link Lift LH Mower
12	532 13 98-66	Link Lift RH Mower
13	532 12 46-70	Retainer Spring

KEY NO.	PART NO.	DESCRIPTION
15	532 17 32-88	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 unc
17	532 17 56-89	Trunnion Blk Zinc
18	873 80 08-00	Nut Lock W/wsh 1/2-13 unc
19	532 13 98-68	Arm Suspension Rear
20	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
31	532 16 98-65	Bearing Put Lift
32	873 54 06-00	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
MOWER DECK

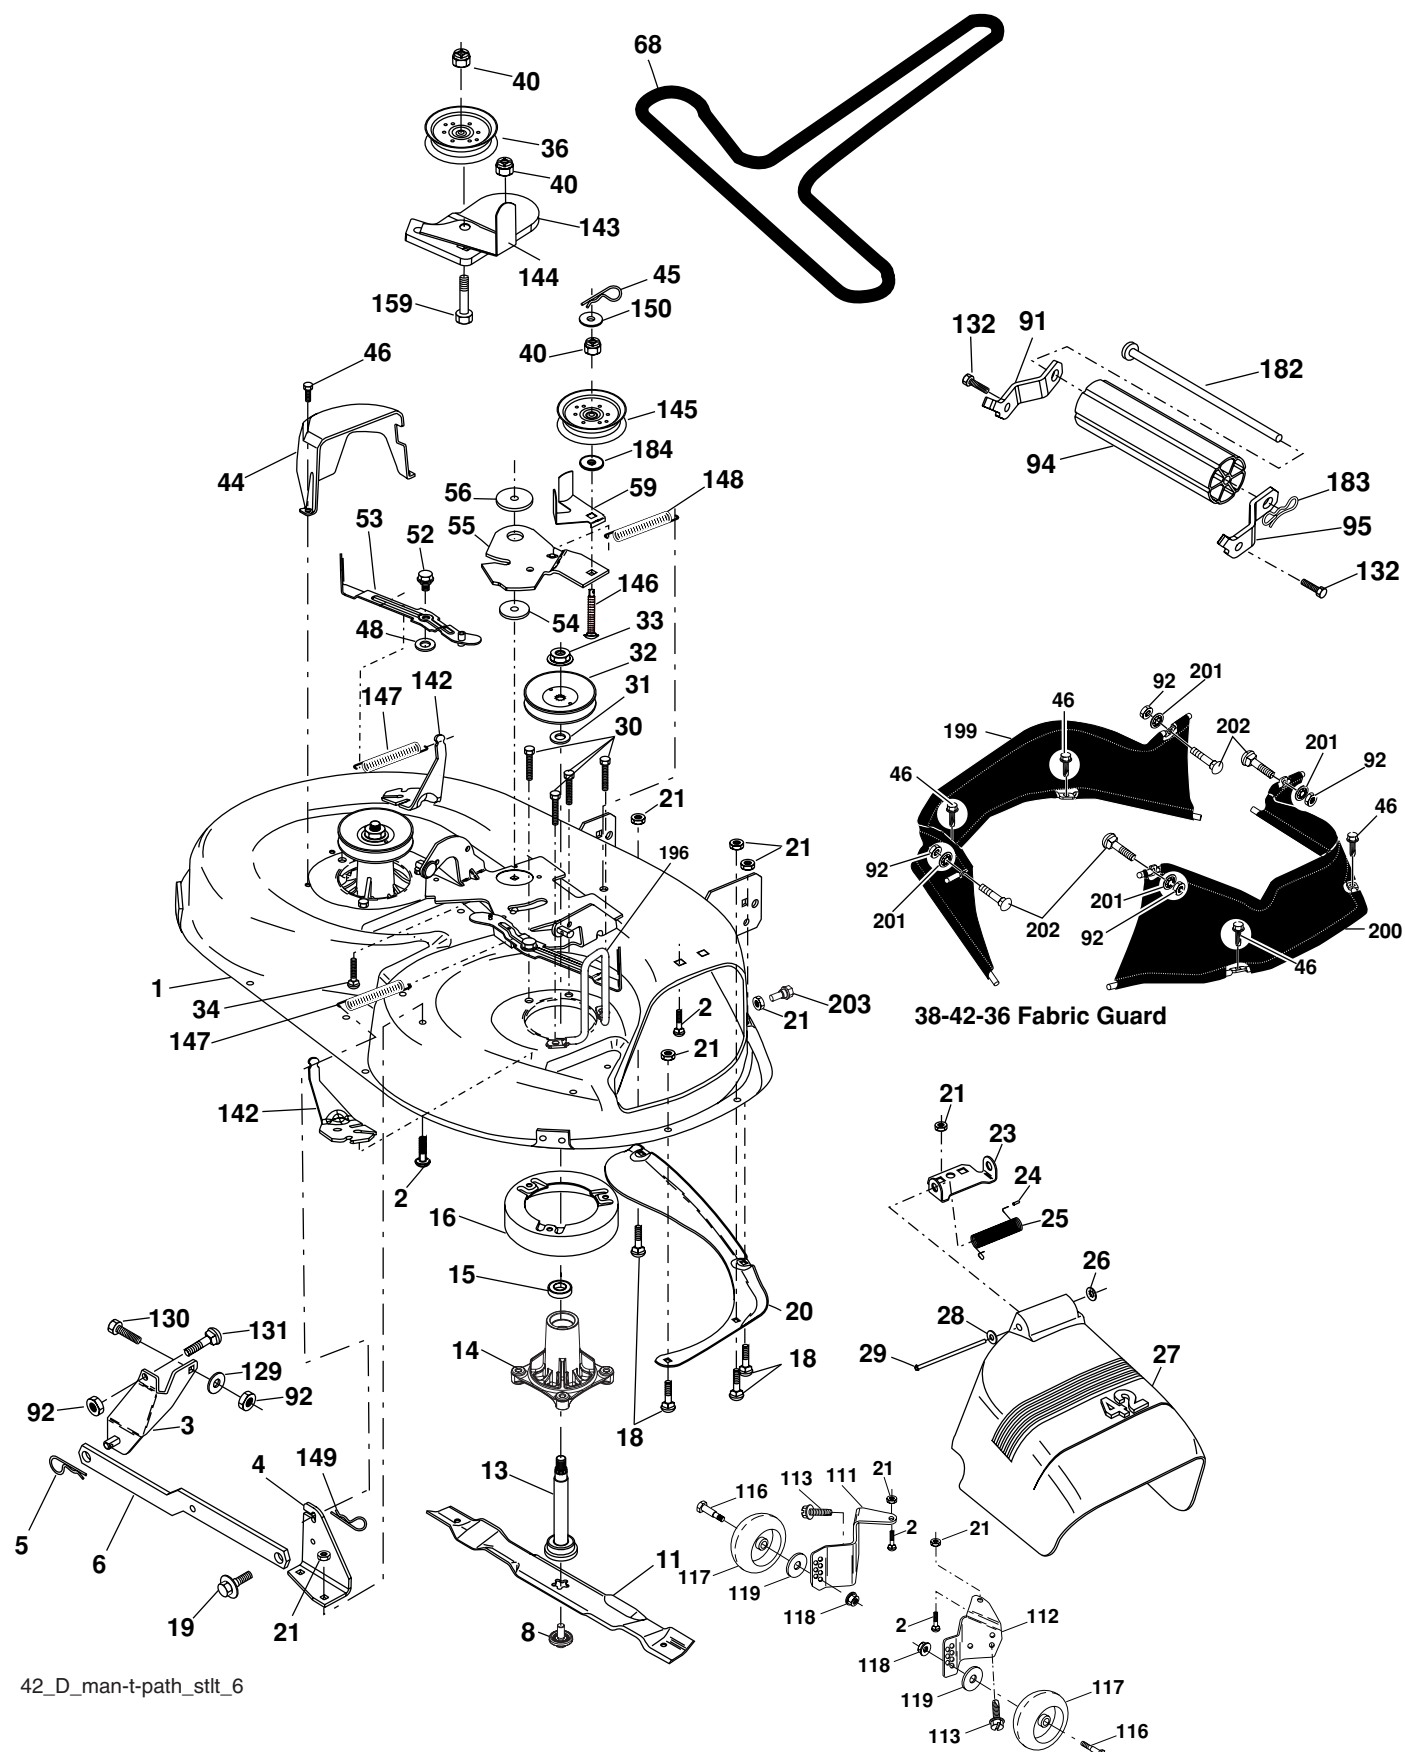

REPAIR PARTS

TRACTOR - MODEL NO. LT2116A2 (96011012700), PRODUCT NO. 960 11 01-27
MOWER DECK

KEY NO.	PART NO.	DESCRIPTION
1	532 16 58-92	Housing Asm Mower 42"94 T-Path
2	872 14 05-06	Bolt Rdhd Sqnk 5/16-18 unc x 3/4
3	532 13 80-17	Bracket Asm Fr Sway Bar 38/42
4	532 16 54-60	Bracket Asm Deck 42"sway Bar
5	532 12 46-70	Retainer Spring
6	532 17 80-24	Bar Sway Deck
8	532 19 30-03	Bolt/Washer Asm 7/16-20 unf
11	532 13 89-71	Blade Mower High Lift"
13	532 19 28-72	Shaft Asm Mandrel
14	532 18 72-81	Housing Mandrel
15	532 11 04-85	Bearing Ball Mandrel
16	532 17 44-93	Stripper Mower
18	872 14 05-05	Bolt Carr 5/16-18 x 5/8
19	532 13 28-27	Bolt Shoulder
20	532 15 97-70	Baffle Vortex 42
21	873 68 05-00	Nut Crown Lock 5/16-18
23	532 17 75-63	Bracket Deflector Mower 42"
24	532 10 53-04	Cap Sleeve 80x 112 Blk Mower
25	532 12 37-13	Spring Torsion Deflector 2 52
26	532 11 04-52	Nut Push Phos & Oil
27	532 40 14-31	Shield Deflector
28	819 11 10-16	Washer 11/32 x 5/8 x 16 Ga
29	532 13 14-91	Rod Hinge 42"6 75 Wlg
30	532 17 39-84	Screw Thd Rolling Hex
31	532 18 76-90	Washer Spacer
32	532 15 35-35	Pulley Mandrel
33	532 40 02-34	Nut Top Lock Flng
34	872 11 06-12	Bolt Carr Sh 3/8-16 x 1-1/2 Gr.5
36	532 13 14-94	Pulley Idler Flat 3 060
40	873 90 06-00	Nut Lock 3/8-16 unc
44	532 14 00-88	Guard Mandrel LH Black
45	532 12 47-88	Retainer Spring
46	532 13 77-29	Screw Thdrol 1/4-20 x 5/8
48	532 13 39-44	Washer Hardened
52	532 13 98-88	Bolt Shld 5/16-18
53	532 18 49-07	Arm. Asm. Brake
54	532 17 85-15	Washer Hardened
55	532 15 50-46	Arm Idler 42"mower LT/YT
56	532 16 57-23	Spacer Retainer Mower
59	532 14 10-43	Guard, Belt
68	532 18 02-15	V-Belt Mower
91	532 18 05-32	Bracket Asm Noseroller LH
92	873 80 06-00	Nut Lock Hex w/ins. 3/8-16 unc
94	532 13 22-64	Roller Nose 38 & 42

KEY NO.	PART NO.	DESCRIPTION
95	532 18 05-33	Bracket Asm Noseroller RH
111	532 17 92-92	Bracket Gauge Wheel Lh
112	532 17 92-93	Bracket Gauge Wheel Rh
113	817 00 05-10	Bolt 5/16-18 Hex Whs HD LCK-SERR
116	532 12 48-42	Bolt Shoulder
117	532 18 86-06	Wheel Gauge
118	873 93 06-00	Nut Centerlock 3/8-16 unc
119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
129	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
130	874 78 06-16	Bolt Fin Hex 3/8-16 unc x 1 Gr. 5
131	872 14 06-08	Bolt Rdhd Sqnk 3/8-16 unc x1
132	817 00 06-12	Screw 3/8-16 x .75
142	532 19 57-84	Anchor Spring Brake Mower
143	532 15 71-09	Bracket Arm Idler
144	532 15 86-34	Keeper Belt
145	532 16 58-88	Pulley Idler Flat
146	532 17 19-77	Bolt Carriage Idler
147	532 17 97-48	Spring Extension
148	532 16 90-22	Spring Return Idler
149	532 16 58-98	Retainer Spring Yellow
150	819 09 12-10	Washer 9/32 x 3/4 x 10
159	872 14 06-14	Bolt RDHD SQN 3/8-16 x 1-3/4
182	532 17 91-26	Rod Roller Nose Standard
183	532 19 42-09	Retainer Spring
184	819 13 14-10	Washer 13/32 x 7/8 x 10 Ga.
196	532 40 11-19	Guard Mandrel RH
199	532 40 02-78	Module Guard Asm. Fabric LH
200	532 40 02-79	Module Guard Asm. Fabric RH
201	532 40 02-79	Push Nut Round 3/8 Diam.
202	872 11 06-08	Bolt Rdhd Sqnk 3/8-16 x 1 Gr. 5
203	532 19 72-62	Bolt Shoulder
--	532 19 28-70	Mandrel Assembly (Includes Housing, Shaft and Shaft Hardware Only - Pulley Not Included)
--	532 40 08-08	Replacement Deck, Complete (Std. Deck - Order separately nose roller and gauge wheel components key nos. 91, 94-95, 132, 182, 183, 116-119)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm