


Flymo®

Pac a Shredder



Original Instructions

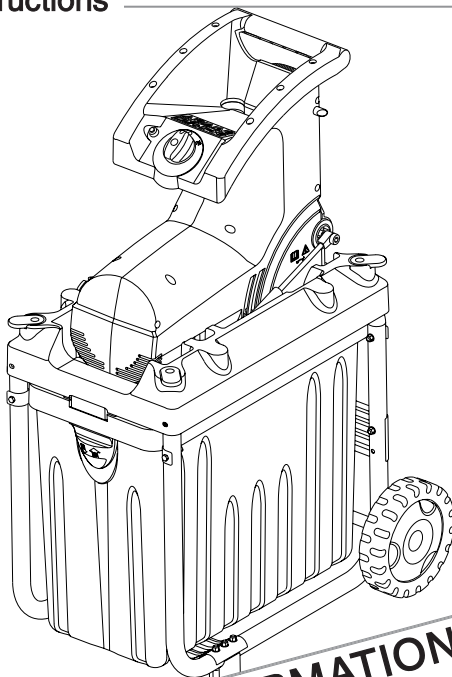

IMPORTANT INFORMATION
Read before use
& retain for future reference

IMPORTANT Please register your product warranty on line.


To register your warranty and for all your parts requirements please visit

www.flymo.com


For all other enquiries

☎ 0844 844 4558 **UK** 1800 882 350 **ROI**

✉ customer.services@husqvarna.co.uk

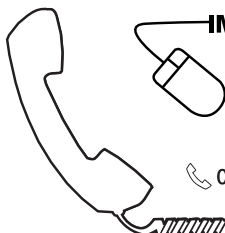

Carton Contents

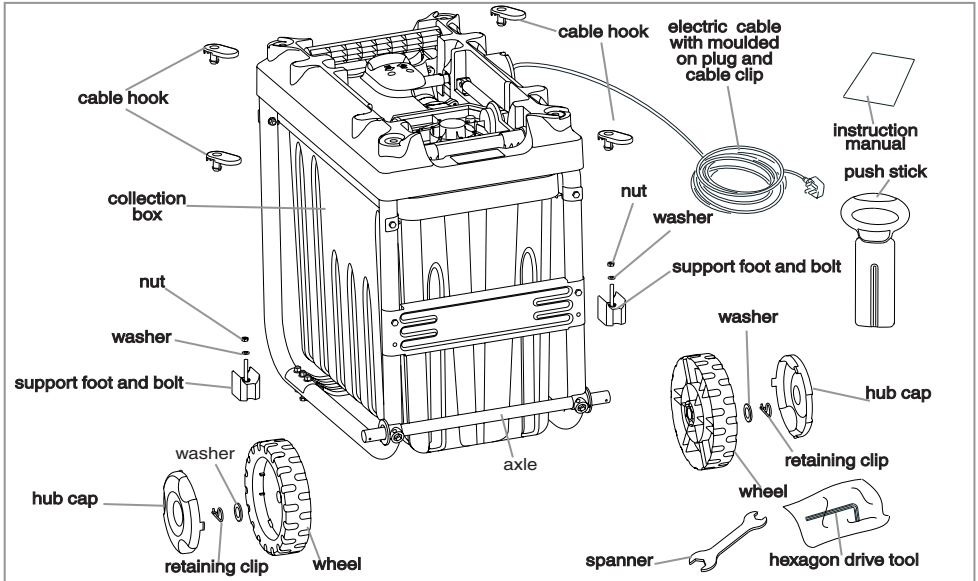

IMPORTANT!

Please check the contents of the carton are correct **BEFORE** assembling your new Flymo product.

IF ANY PARTS ARE MISSING CONTACT:-

Husqvarna UK Ltd. Customer Service Department direct

Telephone : 0844 844 4558 **UK** 1800 882 350 **ROI**

Fax : 01325 302530

Safety



If not used properly this product can be dangerous! This product can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the product. Never use the product unless the collection box or guards provided by the manufacturer are in the correct position.

Explanation of Symbols on your Product



Warning



Read the user instructions carefully to make sure you understand all the controls and what they do.



Keep bystanders away. Do not shred whilst people especially children or pets are in the area



Switch off! Remove plug from mains before adjusting, cleaning or if cable is entangled or damaged. Keep the cable away from moving parts.



Danger rotating blades. Keep hands out of openings when machine is running.



Cutting blade continues to rotate after the machine is switched off. Wait until all machine components have completely stopped before touching them.



Do not use in the rain or leave the product outdoors while raining



Wear eye protection



Wear Gloves

General

1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. Local regulations may restrict the age of the operator.
2. Never allow children or people unfamiliar with the instructions to use the machine.
3. Stop using the machine while people, especially children, or pets are nearby.
4. Only use the product in the manner and for the functions described in these instructions.
5. Never operate the product when you are tired, ill or under the influence of alcohol, drugs or medicine.
6. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Electrical

1. We recommend the use of a Residual Current Circuit Device (R.C.D.) with a tripping current of not more than 30mA. Even with a R.C.D. installed 100% safety cannot be guaranteed and safe working practice must be followed at all times. Check your R.C.D. every time you use it.
2. Before use, examine the cable for signs of damage or ageing. If the cable is found to be defective, take the product to an Authorised Service Centre and have the cable replaced.
3. Do not use the product if the electric cables are damaged or worn.
4. Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected. Do not repair a cut or damaged cable. Replace it with a new one.
5. Your extension cable must be uncoiled, coiled cables can overheat and reduce the efficiency of your product.
6. Do not pull cable around sharp objects.
7. Always switch off at the mains before disconnecting any plug, cable connector or extension cable.
8. Switch off before removing or fitting the collection box.
9. Switch off, remove plug from mains and examine electric supply cable for damage or ageing **before** winding cable for storage. Do not repair a damaged cable, replace it with a new one. Use only Flymo replacement cable.
10. Always wind cable carefully, avoiding kinking.
11. Never pull on the cable to disconnect any of the plugs.
12. Use only on AC mains supply voltage shown on the product rating label.

Preparation

1. Always wear suitable clothing, gloves, and stout shoes. Avoid wearing loose-fitting clothing or that has hanging cords or ties.
2. Obtain and wear safety glasses at all times.
3. Before using the machine check that all screws, nuts, bolts and other fasteners are properly secured and guards and screens in place and in good working condition.
4. Replace damaged or unreadable warning and operating labels.

ing labels.

5. Before starting the product, make certain that the feed inlet is empty.
6. Do not operate the product in the vicinity of bystanders.

Use

1. Use the product only in daylight or good artificial light.
2. Operate the product only on a firm, level surface.
3. Do not allow hands or any other part of the body or clothing inside the feed inlet or near any moving part.
4. Keep face and body away from the feed inlet opening.
5. Keep a proper balance and footing at all times. Do not over-reach. Never stand at a higher level than the base of the product when feeding material into it.
6. When feeding material into the product be extremely careful that pieces of metal, rocks, bottles, cans, ropes, netting or other foreign objects are not included.
7. When feeding material into the product be extremely careful that the mains cable is not accidentally fed into the product.
8. Keep hands and feet away from the cutting means at all times and especially when switching on the motor.
9. Do not touch the cutting means before the machine is disconnected from the supply and the cutting means have come to a complete stop.
10. Do not tilt product when the power source is running.
11. Do not fold product when the power source is running.
12. When folding the product for storage please ensure the mains cable is kept clear.
13. Whilst using the product ensure the cable does not become trapped under the wheels or support feet.
14. Do not allow processed material to build up in the discharge area. This may prevent proper discharge and can result in kickback of material through the feed opening.
15. Use only Approved Replacement Parts.
16. Remove the plug from the mains :
 - before leaving the product unattended for any period or when transporting;
 - before clearing a blockage;
 - before checking, cleaning or working on the product;
 - if the product starts to vibrate abnormally or makes an unusual noise. Check immediately. Excessive vibration can cause injury.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the product is in safe working condition. Do not attempt to repair the product unless you are competent to do so.
2. Check the collection box frequently for wear or deterioration.
3. Replace worn or damaged parts for safety.
4. Only use the replacement parts specified for this product.
5. Be careful during folding of the product to prevent entrapment of the fingers between moving and fixed parts of the machine.
6. Store in a cool dry place and out of reach of children. Do not store outdoors.
7. Allow the product to cool for at least 30 minutes before storing.

Cable Information

IMPORTANT

If you want to use an extension cable when operating your product, only the following cable dimensions should be used:

- 1.5 mm² : max length 25m
- 2.5 mm² : max length 40m

Minimum rating :

- 1.5mm² size cable, 16 amps 250 volts AC.

• YOUR PRODUCT IS SUPPLIED WITH CABLE WIRED DIRECTLY INTO THE PRODUCT.

1. Do not wire an extension cable directly to your product yourself. Please contact your local Approved Service Centre for further information on the connectors and kits available.
2. Only use extension cables specifically designed for outdoor use.
3. Only use 1.5mm² 3 core extension cable.

MAINS PLUG REPLACEMENT

- If the plug supplied is cut off it should be destroyed. There is an electric shock hazard if a cut off plug is inserted into a 13 amp socket.


1.Ensure the mains voltage suits your product

2.IMPORTANT! The wires in the mains lead are coloured in accordance with the following code:
BLUE - NEUTRAL BROWN - LIVE GREEN/YELLOW - EARTH

The wire which is coloured BLUE must be connected to the Terminal which is marked with the letter 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the Terminal which is marked with the letter 'L' or coloured RED. The wire which is coloured GREEN/YELLOW must be connected to the Terminal which is marked with the 'earth' symbol.


4. It is important that the outer sheath is clamped correctly into the 3-pin plug.
5. If in doubt consult your local Service Repairer or qualified electrician before the machine is used.
6. **A 13 Amp fuse must be fitted to the Mains Plug.**
7. The normal plug fuse and household fuse only protect the electrical equipment and are not a safeguard against electrocution.

Assembly

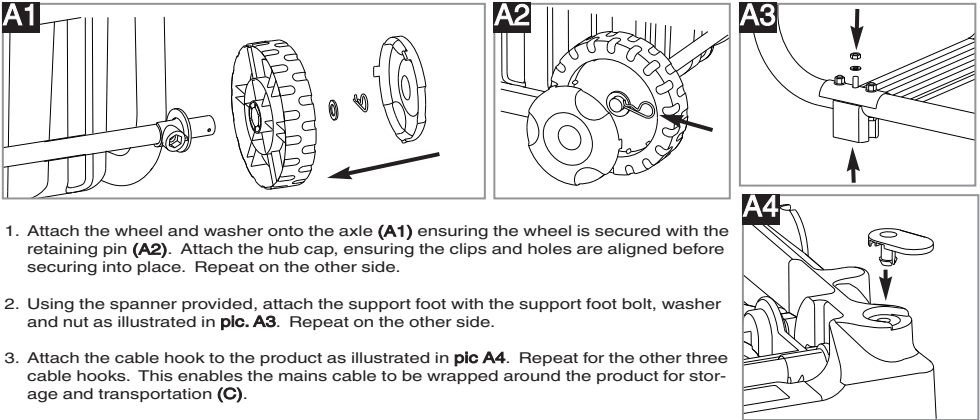


1. Attach the wheel and washer onto the axle (**A1**) ensuring the wheel is secured with the retaining pin (**A2**). Attach the hub cap, ensuring the clips and holes are aligned before securing into place. Repeat on the other side.
2. Using the spanner provided, attach the support foot with the support foot bolt, washer and nut as illustrated in **pic. A3**. Repeat on the other side.
3. Attach the cable hook to the product as illustrated in **pic. A4**. Repeat for the other three cable hooks. This enables the mains cable to be wrapped around the product for storage and transportation (**C**).

Preparation

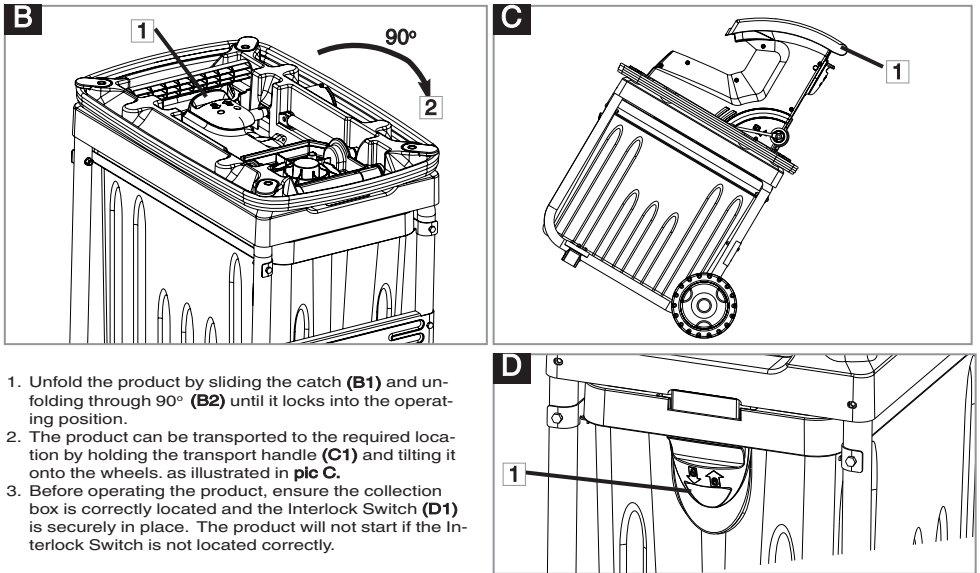

1. Unfold the product by sliding the catch (**B1**) and unfolding through 90° (**B2**) until it locks into the operating position.
2. The product can be transported to the required location by holding the transport handle (**C1**) and tilting it onto the wheels, as illustrated in **pic. C**.
3. Before operating the product, ensure the collection box is correctly located and the Interlock Switch (**D1**) is securely in place. The product will not start if the Interlock Switch is not located correctly.

Starting and Stopping

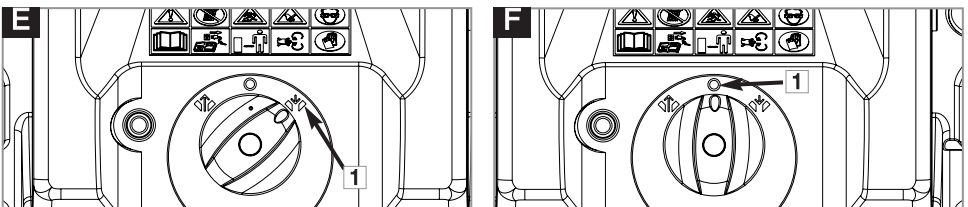

- Before starting, ensure that the Feed Inlet is empty


Starting

1. Unwind mains cable from around product and connect to mains supply.
2. To start the product, turn the control switch clockwise to the 'I' symbol (**E1**).

Stopping

1. To stop the product, turn the control switch anti-clockwise back to the 'O' symbol (**F1**).

Use

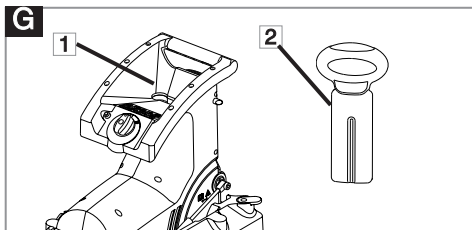

Feeding in Garden waste

1. Feed the material to be shredded into the Feed Inlet (G1).

The material is pulled in by the cutting blade automatically.

- **Caution! Do not feed garden building waste such as, sawn timber, building and decking.**
- **Caution! Long material standing out from the machine could swing out when being pulled in by the blades!**

Maintain a safe distance!

Suitable items to be shredded:-



- Twigs and branches – max. diameter 40mm;
- Waste from pruning bushes;
- Waste from hedge trimmings
- Plant parts.

2. A push stick is provided to feeding less bulky material into the Feed Inlet (G2) enabling the material to reach the cutting blade.

- **Do not use any other object to push material into the Feed Inlet.**

Overload Reset Button


Overloading, jamming the product causes the machine to automatically stop. After a short period of time, press the reset

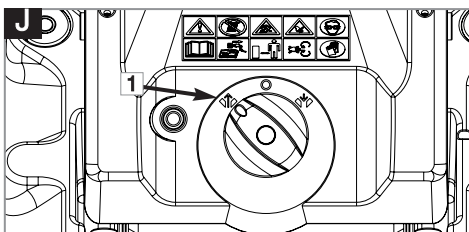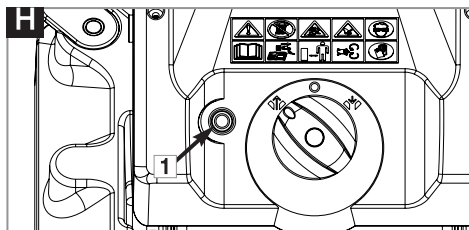

button (H1) and restart the product.

- **When the feed inlet is suddenly blocked, the direction or rotation may switch automatically. Stop the product and after a short period of time, restart.**

Clearing a Blockage

The product is fitted with a reverse switch (J1) to enable the release of jammed material. Turn the control switch anti-clockwise to the  symbol to put into reverse mode.

Compost

Compost is a natural fertiliser. It can loosen clay soils and can help sandy soils retain water. The organic matter in compost provides food for the microorganisms that keep your soil healthy and in a balanced condition. These microorganisms will naturally produce the Nitrogen, Potassium and Phosphorus your garden requires.

The waste you are composting requires the correct ratio of carbon rich materials (Browns) and nitrogen rich materials (Greens). Too much Brown material will increase the conversion time. Too much Green material and your compost will be damp, solid and release unpleasant odours.

How does my Shredder help composting?

Shredders can produce large quantities of Greens and Browns, which you could not normally compost. It will speed up the composting process by reducing the size and increasing the surface area of the material.

Shredded Browns, fibrous materials, provide body to the final product and supply trapped air to the composting creatures.

Shredded Greens, Soft Sappy materials, provide the energy for the composting creatures.

Garden Waste	Do Compost Kitchen Waste	Other
Tree Prunings*	Fruit	Washed Seaweed
Twigs*	Vegetables	Hay/Straw
Plants*	Teabags	Paper & Cardboard
Bush Prunings*	Coffee Grounds & Filters	Wood Ash
Hedge Trimmings*	Egg Shells	Manure from Vegetarian Animals
Vegetable Waste*	Sawdust	
Leaves*	Peanut Shells	
Flowers*		
Roots*		
Grass Cuttings		

* Suitable for Shredding




Garden Waste	Do Not Compost Kitchen Waste	Other
Soil	Meat	Vacuum Cleaner Contents
Poison Ivy	Fish	Plastic Glass or Metal
Poison Oak	Cooked Food Wastes	Manure from Carnivorous Animals
Weeds	Dairy Products	Coal Ash
Diseased Plants	High Fat Foods	Household or Building Waste

When will the compost be ready for use?

The compost may be ready in as little as 2 months or as much as 12 months. It depends on the materials used, the compost mix, air temperature and how much material was shredded.

The compost can be used when it has turned a dark colour and the original ingredients are no longer recognisable.

Collection Box

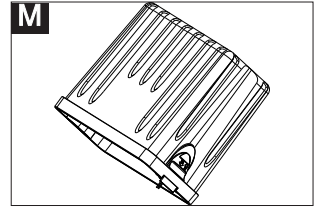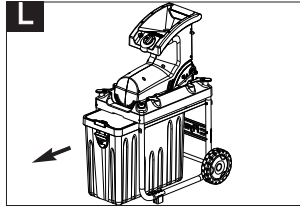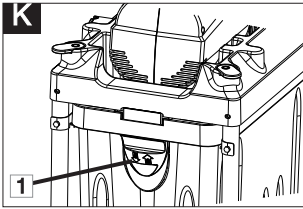

- **Important**
Switch off product before removing the Collection Box. The Collection Box is a safety guard that prevents access to the cutting blades. The product should never be used without the Collection Box in place.

Removing the Collection Box

1. Pull down the Interlock Switch on the Collection Box (K1). The product will not operate when this Interlock Switch is open.



2. Hold the handle on the Collection Box and pull out from under the shredding unit (L).
3. Empty the Collection Box (M).

Fitting the Collection Box

1. Push the Collection Box under the shredding unit.
2. Push up the Interlock Switch on the Collection Box (K1) until it clicks securely into position.

- **IMPORTANT !** The Product will not operate if the Interlock Switch on the Collection Box is not lifted upwards into position.

Adjustment

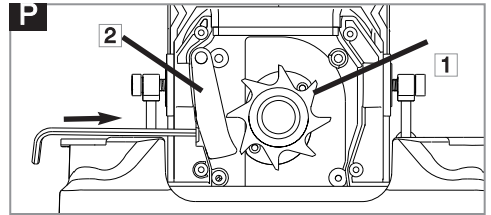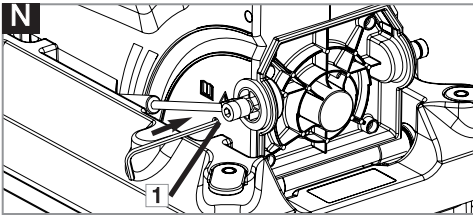

- **Important:-** Only adjust the Cutting Plate when the product is running. Failure to do so may lead to serious damage to your product and result in your Warranty becoming void.

Adjusting the Cutting Plate





If branches and twigs are not being cut through cleanly, then adjustment of the Cutting Plate against the Cutting Blade is required.

1. With the product running in the forward direction insert the hex key supplied into the hole at the side of the

casing (N1).

2. With the product running in the forward direction turn the hex key very slowly in a clockwise direction until the Cutting Blade (P1) can be heard slightly touching the Cutting Plate (P2). Do not over adjust, doing so could cause serious damage to the Cutting Plate and Cutting Blade and result in your Warranty becoming void.
3. Feed a branch into the Feed Inlet to check that it is cut cleanly and that no further adjustment is required.

Caring for your Shredder

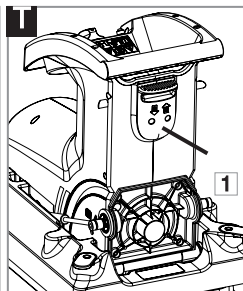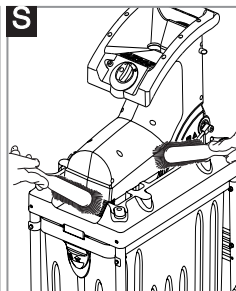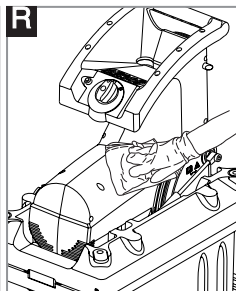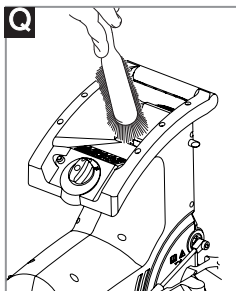

Cleaning

• USE GLOVES





- **IMPORTANT** It is very important that you keep your product clean. Debris left in any of the air intakes or under the product could become a potential fire hazard.

1. With a brush, remove any debris from the Feed Inlet (Q).
2. Wipe over the surface of your product with a dry cloth (R).
3. Using a soft brush remove debris from all air intakes (S).
4. Remove the Collection Box as described in the Collection Box section above.
5. Fold the product by sliding the catch (T1) and folding through 90° (V) until it locks into the storage position.
6. Remove debris from the discharge area with brush (W).
7. Remove debris from the grass box with a brush (X).

- **IMPORTANT** Never use water for cleaning your product. Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts.

Storing your Shredder

1. Unfold your product back into the operating position, replace the collection box and then fold into the storage position.
2. Before folding make sure that the electric cable is wound around the product properly (Y1).
3. Replace any Bolts, Nuts or Screws, if necessary.
4. Product must be stored upright as illustrated (Y1).

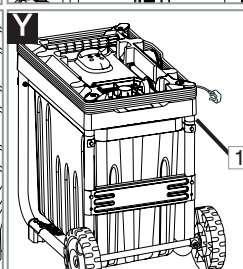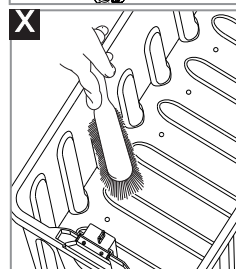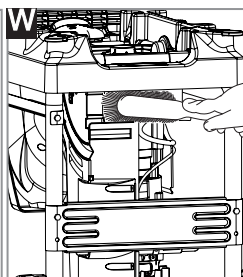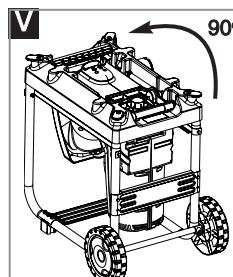

Fault Finding Hints

Fails to Operate

1. Is the correct Starting procedure being followed? See 'Starting & Stopping'
2. Has the product overloaded? See 'Use'
3. Is the Power Turned On?
4. Is the Interlock Switch engaged?. See 'Collection Box'
5. Check the fuse in the plug, if blown replace.
6. Fuse continues to blow?

Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Debris Material is not pulled into the cutter.

1. By using the Push Stick, ensure the material is fed far enough into the Feed Inlet
2. Ensure the Cutter is adjusted correctly, see 'Adjustment'
3. Is the product running in the forward direction.?
4. If problem persists?

Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Poor Cutting of Debris Material

1. See 'Adjustment'
2. If poor cutting persists.

Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Debris Material is jammed in the Feed Inlet

1. Set the start switch to reverse.
2. Ensure the material is not too thick for the product. Max diameter of twigs and branches is 40mm.
3. If problem persists?

Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Excessive Vibration

1. Disconnect from the mains electricity supply.
2. Ensure the Cutter is adjusted correctly, see 'Adjusting the Cutting Plate'
3. If vibration persists?

Immediately disconnect from the mains electricity supply and consult your local approved Service Centre.

Service Recommendations

1. We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.
2. Always use genuine Flymo Spare Parts.
3. Prepacked spares are available from most Husqvarna UK Ltd. stockists.
4. Your product is uniquely identified by a silver and black product rating label
5. If you have a problem with your machine contact your local Approved Service Centre ensuring you have full details of your product as described on the product rating label.

6. **Should it be necessary for work to be carried out by your Service Centre, it is important to take your complete machine including cable and any extension cables used.**

A network of specialist dealers can be found in your local Yellow Pages. To obtain service on your Flymo product simply telephone or visit your local Service Centre.

Should you require service under the terms of our guarantee the Service Centre will require proof of purchase.

All of the centres listed stock genuine Flymo Spare Parts.

NOTE: Our Service Repairers act on their own behalf and are not empowered to commit or legally bind Husqvarna UK Ltd. in any manner whatsoever.

Guarantee & Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Husqvarna UK Ltd., through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) The fault is reported directly to the Authorised Repairer.
 - (b) Proof of purchase is provided.
 - (c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
 - (d) The failure has not occurred through fair wear and tear.
 - (e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Husqvarna UK Ltd..
 - (f) The machine has not been used for hire.
 - (g) The machine is owned by the original purchaser.
 - (h) The machine has not been used commercially.
- * This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- * Replacing worn or damaged blades
- * Failures as a result of shredding inappropriate material.
- * Failures as a result of incorrect adjustment of the cutting plate
- * Failures as a result of not reporting an initial fault.
- * Failures as a result of sudden impact.
- * Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- * Machines used for hire are not covered by this guarantee.
- * The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Blades, Electric Mains cable, Cutting Plate


* Caution!

Husqvarna UK Ltd. does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Husqvarna UK Ltd., or by the machine having been modified in any way.

Environmental Information

- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

EC Declaration of Conformity

Husqvarna AB, 561 82, Huskvarna, Sweden

Declare under our sole responsibility that the product(s);

Category.....**Electric Garden Shredder**

Type(s)**PAS2500**

Identification of Series.....**See Product Rating Label**

Year of Construction.....**See Product Rating Label**

Conforms to the essential requirements & provisions of the following EC Directives:

2006/42/EC, 2004/108/EC, 2000/14/EC

based on the following EU harmonized standards applied:

EN60335-1, prEN50434, EN13683, EN50366, EN55014-1, EN61000-3-2, EN61000-3-11

The maximum A weighted sound pressure level L_{pA} at the operator's position, recorded on a sample of the above product(s) corresponds to the **Level** given in the table.

The maximum hand / arm vibration weighted value measured according to EN ISO 20643 on a sample of the above product(s) corresponds to the **Value** a_h given in the table.

2000/14/EC: The Measured Sound Power L_{WA} & Guaranteed Sound Power L_{WA} values are according to the tabulated figures.

Conformity Assessment Procedure..... Annex VI

Notified Body..... Intertek, Cleeve Road
Leatherhead, Surrey
KT22 7SB, England

Newton Aycliffe 26/09/2011

M.Bowden

Global R & D Director - Walk behind
Keeper of Technical Documentation



EN 61000-3-11 Compliance statement

Depending on the characteristics of the local electricity supply network, use of this product may result in short voltage drops at the instant of switching on. This may influence other electrical equipment e.g a momentary dimming of a lamp. If the **Mains Impedance Z_{max}** of your electricity supply is less than the value shown in the table (applicable to your model) then these effects will not occur. The value of the network impedance may be determined by contacting your electricity supply authority

Type	PAS2500
Width of Cut (mm)	40
Speed of Rotation of Cutting Device (rpm)	40
Power (kW)	2.5
Measured Sound Power L_{WA} (dB(A))	97
Guaranteed Sound Power L_{WA} (dB(A))	98
Level L_{pA} (dB(A))	85
Uncertainty K_{pA} (dB(A))	2.5
Value a_h (m/s ²)	2.40
Uncertainty K_{ah} (m/s ²)	1.5
Weight (Kg)	33.5
Mains Impedance Z_{max} (Ω)	0.314

Husqvarna AB
561 82
Huskvarna
Sweden

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.

Copyright © 2011 Flymo S.A. All rights reserved. Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.

5051397-03

