

REPAIR PARTS MANUAL MODEL NO. MC20H42YT (96048002700) LAWN TRACTOR



www.mcculloch.biz

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:


- Product "TRACTOR"
- MODEL NUMBER "MC20H42YT (96048002700)"
- Part Number
- · Part Description

TABLE OF CONTENTS


| SCHEMATIC | 3 |
|------------|-------|
| ELECTRICAL | 4-5 |
| CHASSIS | 6-7 |
| DRIVE | 8-9 |
| ENGINE | 10-11 |
| STEERING | 12-13 |
| MOWER DECK | 14-15 |
| MOWER LIFT | 16 |
| SEAT | 17 |
| DECALS | 18 |
| WARRANTY | 20 |

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 SCHEMATIC

SCH11

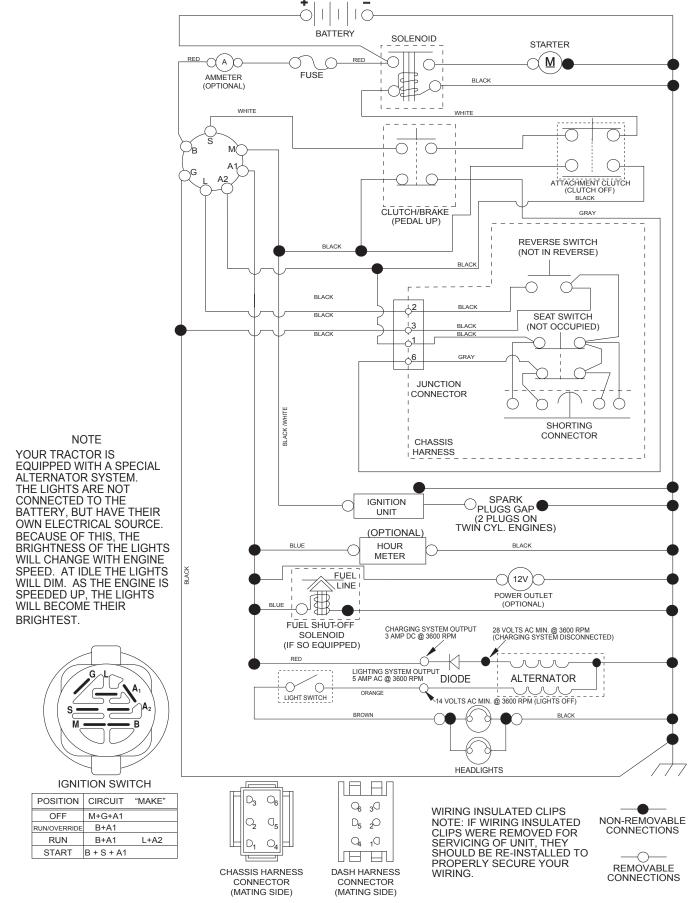

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 ELECTRICAL

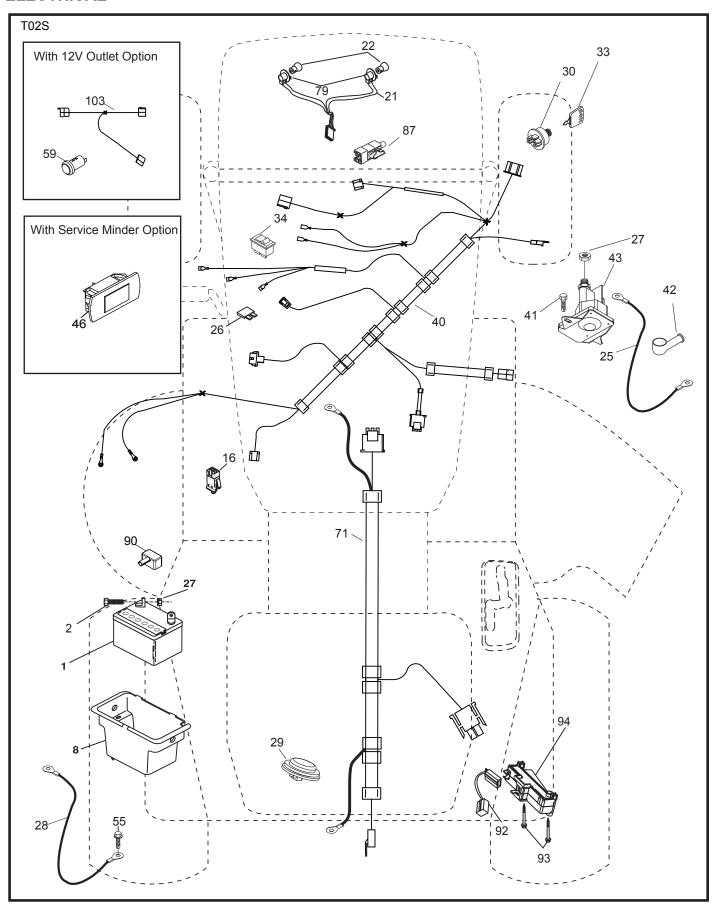


TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 ELECTRICAL

| KEY NO. | PART NO. | DESCRIPTION |
|------------|--------------|---------------------------------|
| | | _ |
| 1 | 532 16 34-65 | Battery |
| 2 | 874 76 04-12 | Bolt Hex Head 1/4-20 x 3/4 |
| 8 | 532 19 32-28 | Box Battery |
| 16 | 532 17 61-38 | Switch Interlock Push-In |
| 21 | 532 18 37-59 | Harness Socket Light w/4152J |
| 22 | | Bulb Light |
| 25 | | Cable Starter |
| 26 | 532 17 51-58 | Fuse |
| 27 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 28 | 532 19 88-85 | Cable, Ground |
| 29 | 532 40 15-45 | Switch, Seat |
| 30 | 532 19 33-50 | Switch, Ignition |
| 33 | 532 41 19-35 | Key/Chain |
| 34 | 532 11 07-12 | Switch Light/Reset |
| 40 | 532 40 10-98 | Harness Ignition Dash/Lift |
| 41 | 817 72 04-08 | Screw Thd Cut 1/4-20 x 1/2 |
| 42 | 532 13 15-63 | Cover, Terminal |
| 43 | 532 19 25-07 | Solenoid |
| 55 | 817 06 05-12 | Screw Thdrol 5/16-18 x 3/4 TYTT |
| 71 | 532 40 04-49 | Harness Ignition Chassis/Lift |
| 79 | 532 17 52-42 | Socket Asm Bulb Twistlock |
| 87 | 532 19 78-02 | Switch Interlock Clutch Cable |
| 90 | 532 43 53-95 | Cover Terminal Battery |
| 92 | 532 19 66-15 | Harness Pigtail Console ROS |
| 93 | 532 19 25-40 | Screw Plastite 10-14 x 2.0 |
| 94 | 532 19 18-34 | Module Reverse ROS |

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 CHASSIS

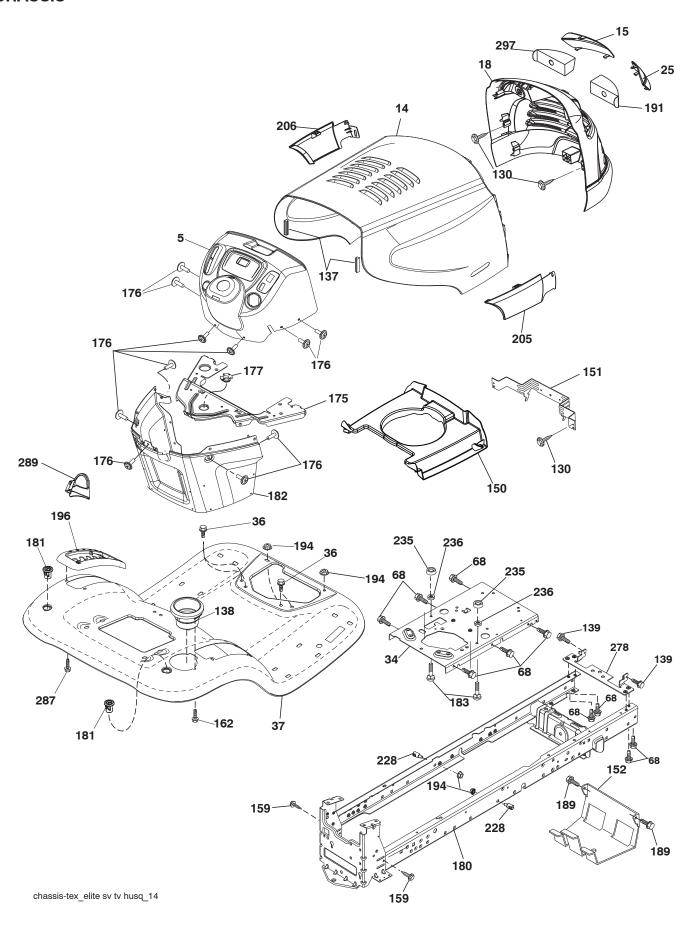


TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 CHASSIS

| KEY | PART | |
|------------|------------------------------|---|
| NO. | NO. | DESCRIPTION |
| 5 | 532 44 68-34 | Dash Upper |
| 14 | 532 43 27-74 | Hood |
| 15 | 532 18 99-82 | Lens Elite-Husq Clear LH |
| 18 | 532 44 52-94 | Grille |
| 25 | 532 18 99-81 | Lens Elite-Husq Clear RH |
| 34 | 532 44 72-53 | Plate Engine Welded Chassis |
| 36 | 817 06 05-12 | Screw 5/16-18 x 3/4 Smgml Tap/R |
| 37 | 532 42 09-86 | Fender |
| 68 | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 tytt |
| 130 | 532 41 63-58 532 18 49-21 | Screw |
| 137 138 | 532 40 97-30 | Bumper Hood Large 1 75" Cupholder TL Tex 428 |
| 139 | 532 40 97-30 | Bolt Shoulder |
| 150 | 532 43 16-32 | Air Duct |
| 151 | 532 40 78-07 | Bracket Pivot Lasr/Elte/Husq LT |
| 152 | 532 19 95-35 | Shield browning w/tex |
| 159 | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 162 | 532 14 24-32 | Screw Hex Wsh Hi-Lo 1/4 x 1/2 unc |
| 175 | 532 19 32-43 | Crossmember LT |
| 176 | 532 40 07-76 | Screw #10-24x5/8 Rnd Qudrx Gim |
| 177 | 532 19 52-27 | Bushing Steering YT/GT |
| 180 | 532 19 54-57 | Chass Wldmt TL 12 Ga. |
| 181 | 532 40 47-96 | Bushing Mnt Fend Crgo Blk Tex |
| 182 | 532 19 30-57 | Dash Lower LT ccs |
| 183 | 874 52 05-20 | Bolt Fin Hex 5/16-18 x 1-1/4 |
| 189 191 | 817 00 05-12 532 18 82-67 | Screw 5/16-18 x 3/4 Smgml Tap/Bl Insert Lens Reflective RH |
| 194 | 873 90 05-00 | Nut, Lock Hex Flange 5/16-18 unc |
| 196 | 532 41 45-79 | Console Asm Decklft Bl/Rbt Tlt |
| 205 | 532 42 47-47 | Skirt Side RH |
| 206 | 532 42 47-48 | Skirt Side LH |
| 228 | 532 19 51-61 | Stud Fastner w/'D'anti-Rotatio |
| 235 | 532 40 61-29 | Spacer Fender |
| 236 | 873 93 05-00 | Nut Center Lock 5/16-18 unc |
| 278 | 532 19 63-94 | Bracket Hood/Muffler |
| 287 | 817 60 04-06 | Screw Hex Washead 1/4-20 x 3/8 |
| 289 | 532 43 27-81 | Plug Cruise Hook Phone |
| 297 | 532 41 65-00 | Insert Lens Reflective LH |

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 DRIVE

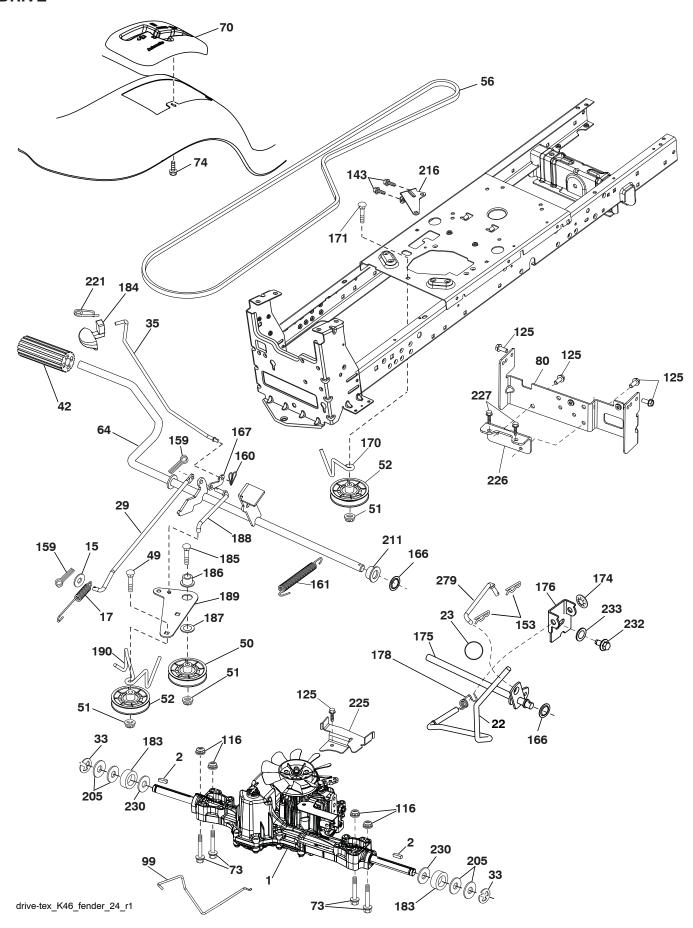

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 DRIVE

| KEY | | DECORIDEION | KEY | | DECODIDATION |
|-----|--------------|--------------------------------|------|---------------|---|
| NO. | NO. | DESCRIPTION | NO. | NO. | DESCRIPTION |
| 1 | | Transaxle, Tufftorq K46 BA | 167 | 532 40 52-57 | Latch Brake Parking |
| | | (408214)(Order parts from | 170 | 532 19 43-22 | Keeper Belt Centerspan |
| | | transaxle manufacturer.) | 171 | 872 11 06-16 | Bolt Rdhd Sqnk 3/8-16 x 2 |
| 2 | 532 12 35-83 | Key Square | 174 | 532 19 72-89 | Nut Push |
| 15 | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga. | 175 | 532 40 62-08 | Shaft Asm Shift |
| 17 | 532 41 36-78 | Spring, Brake | 176 | 532 19 62-14 | Arm Clevis Rod Shift |
| 22 | 532 19 76-60 | Rod Shift | 178 | 532 19 74-56 | Spring Shift |
| 23 | 532 14 08-45 | Knob | 183 | 532 13 70-57 | Spacer, Axle |
| 29 | 532 40 38-06 | Rod, Brake | 184 | 532 44 15-04 | Handle Parking Brake |
| 33 | 812 00 00-01 | Ring E | 185 | 872 11 06-22 | Bolt |
| 35 | 532 19 77-22 | Rod, Brake, Park | 186 | 532 19 43-21 | Spacer Retainer |
| 42 | 532 12 48-72 | Cover, Foot Pedal | 187 | 819 13 32-10 | Washer |
| 49 | 872 11 06-14 | Bolt | 188 | 532 19 43-23 | Link Clutch Ground Drive |
| 50 | 532 19 43-27 | Pulley Idler Flat | 189 | 532 19 43-17 | Bellcrank Ground Drive |
| 51 | 873 90 06-00 | Lock Nut 3/8-16 | 190 | 532 19 43-18 | Keeper Bellcrank Ground Drive |
| 52 | 532 19 43-26 | Idler V-Groove | 205 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 56 | 532 13 09-69 | V-Belt, Drive | 211 | 532 19 62-12 | Bushing Brake Shaft |
| 64 | 532 19 62-00 | Shaft Asm. Pedal Brake Control | 216 | 532 19 61-31 | Bracket Pulley Idler |
| 70 | 532 41 13-29 | Console | 221 | 532 40 31-87 | Retainer Spring Clip Handle |
| 73 | 874 49 05-40 | Bolt 5/16-18 x 2 1/2 | 225 | 532 40 33-19 | Keeper Belt Trans. |
| 74 | 532 14 24-32 | Screw 1/4 x 1/2 | 226 | 532 40 15-64 | Bracket Mount Torque |
| 80 | 532 44 06-19 | Strap Torque | 227 | 817 49 05-12 | Screw Thdrol 5/16-18 x 3/4 |
| 99 | 532 41 57-42 | Rod Asm Bypass | 230 | 532 18 89-67 | Washer Hardened |
| 116 | 873 90 05-00 | Nut Lock Hex Flange 5/16-18 | 232 | 874 78 07-16 | Bolt 7/16-14 x 1 Gr. 5 |
| 125 | 817 00 05-12 | Screw 5/16-18 x 3/4 | 233 | 532 40 52-96 | |
| 143 | 817 49 05-08 | Screw 5/16-18 x 1/2 | 279 | 532 40 62-07 | Link Shift |
| 153 | 532 12 47-88 | Retainer Spring | | | |
| 159 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 | | | |
| 160 | 532 16 94-84 | Retainer Clip | NOT | - All | at diamental and about in 11 O 1 of the |
| 161 | 532 10 57-09 | Spring, Return, Clutch | NOTI | | nt dimensions given in U.S. inches |
| 166 | 532 42 91-64 | Nut Push .625 | | 1 inch = 25.4 | · IIIIII |

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 ENGINE

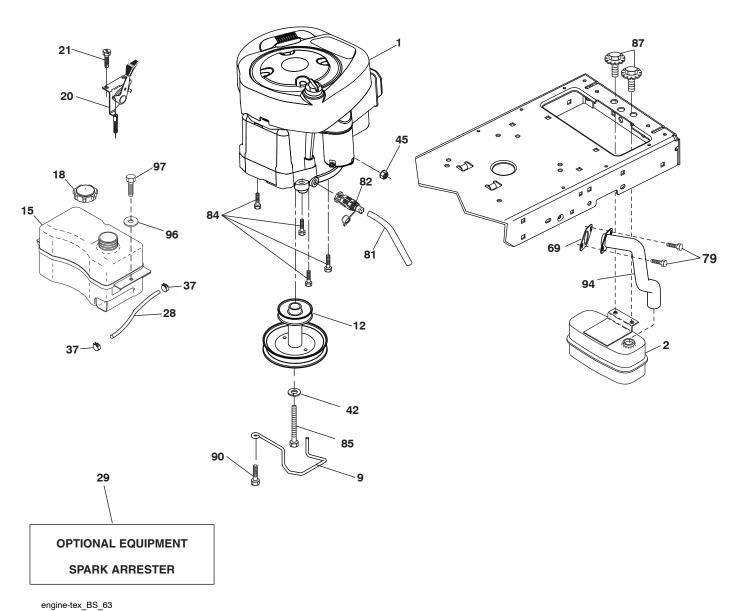

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 ENGINE

| KEY | PART | |
|------------|--------------|--|
| NO. | NO. | DESCRIPTION |
| 1 | | Engine B&S Model No.331777-1523-G5 (442174) (Order parts from engine manufacturer) |
| 2 | 532 18 86-55 | Muffler |
| 9 | 532 19 43-20 | Keeper Belt Engine |
| 12 | 532 40 54-71 | Pulley Engine |
| 15 | 532 43 30-07 | Tank Fuel |
| 18 | 532 43 85-96 | Cap Fuel |
| 20 | 532 18 38-97 | Control Throttle/Choke |
| 21 | 532 41 63-58 | Screw #10 x 0.750 BOS Thread |
| | 532 40 11-37 | |
| 29 | 532 13 71-80 | Spark Arrester Kit |
| 37 | 532 12 34-87 | Clamp Hose |
| | 810 04 07-00 | Washer Lock 7/16 |
| 45 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 69 | 532 16 52-91 | Gasket |
| 79 | 532 19 23-34 | , |
| 81 | 532 14 84-56 | Tube Drain Oil Easy |
| 82 | 532 42 82-87 | Valve Drain Oil |
| 84 | 817 06 06-20 | Screw 3/8-16 x 1-1/4 |
| 85 | 532 17 39-37 | Bolt 7/16-20 x 4 x Gr. 5-1.5 |
| 87 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 |
| 90 | 817 00 06-16 | Screw 3/8-16 x 1 |
| | 532 40 54-50 | Exhaust Tube B&S |
| 96 | | Washer 9/32 x 78 x 16 Ga. |
| 97 | 817 67 04-12 | Screw Thdrl 1/4-20 x 3/4 |

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


For engine service and replacement parts, call the toll free number for your engine manufacturer listed below:

Briggs & Stratton 1-800-233-3723

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 STEERING ASSEMBLY

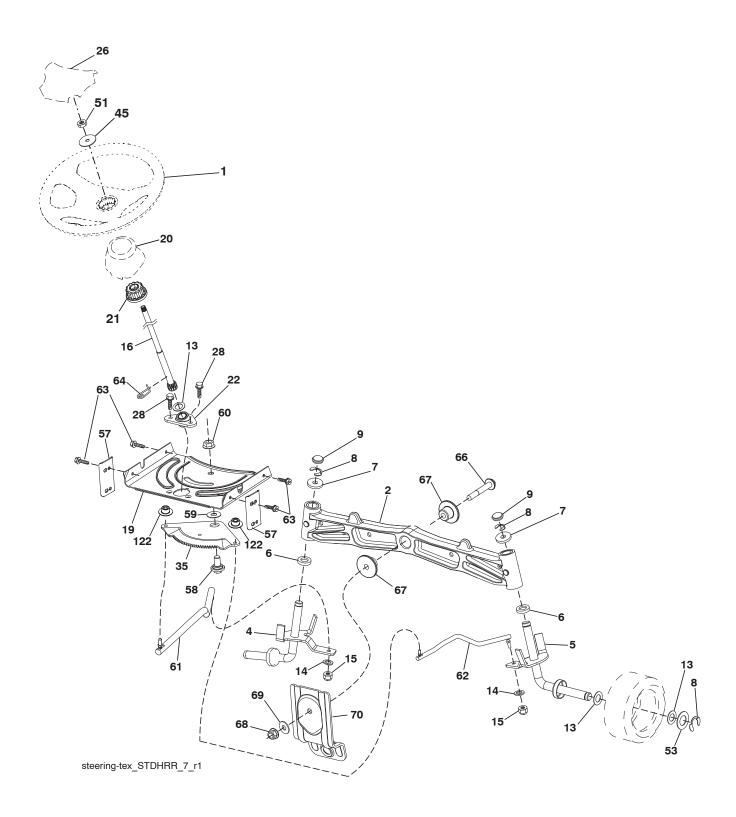


TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 STEERING ASSEMBLY

| KEY NO. | PART NO. | DESCRIPTION |
|------------|------------------------------|--|
| 1 | 532 42 45-43 | Wheel, Steering |
| 2 | 532 19 59-68 | Axle Asm., Front |
| 4 | 532 40 30-87 | Spindle Asm., LH |
| 5 | 532 40 30-88 | Spindle Asm., RH |
| 6 | 532 12 49-31 | Bearing, Race Thrust Harden |
| 7 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 8 | 812 00 00-29 | Ring, Clip #T5304-75 |
| 9 | 532 12 12-32 | Cap, Spindle |
| 13 | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 14 | 810 04 06-00 | Washer, Lock Hvy Hlcl Spr 3/8 |
| 15 | 873 54 06-00 | Nut, Crown Lock 3/8-24 unf |
| 16 | 532 40 82-19 | Shaft Steering |
| 19 | 532 19 47-29 | Plate Steering |
| 20 21 | 532 43 27-84 532 18 67-37 | Boot, Steering |
| 22 | 532 42 05-37 | Adapter, Wheel Steering Steering Support Lower |
| 26 | 532 42 41-47 | Insert, Wheel Steering |
| 28 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 35 | 532 19 47-32 | Gear, Sector Plate |
| 45 | 819 18 38-12 | Washer 9/16 ID x 2-3/8 x 12 Ga. |
| 51 | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf |
| 53 | 532 18 89-67 | Washer Hardened .793 x 1.637 x .060 |
| 57 | 532 40 74-65 | Bracket Upstop |
| 58 | 532 19 47-47 | Bolt Shoulder Sector Pivot CFM |
| 59 | 532 19 47-48 | Washer Thrust Sector Steering |
| 60 | 873 97 10-00 | Nut Flange Lock 5/8-11 |
| 61 | 532 19 47-40 | Draglink, LH |
| 62 | 532 19 47-41 | Draglink, RH |
| 63 | 817 00 05-12 | Screw 5/16-18 x 3/4 |
| 64 | 532 19 98-49 | Retainer Clip Spring Steering |
| 66 | 871 02 07-48 | Bolt Hex Fghd 7/16-14 x 3 Serr |
| 67 | 532 19 47-37 | Bushing PM Front Axle |
| 68 | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5 |
| 69 | 532 19 91-62 | Washer 1.5 x .505 x .118 |
| 70 | 532 19 61-97 | Bracket Deck Susp. Front |
| 122 | 532 44 49-62 | Cap Gear Sector |

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 MOWER DECK

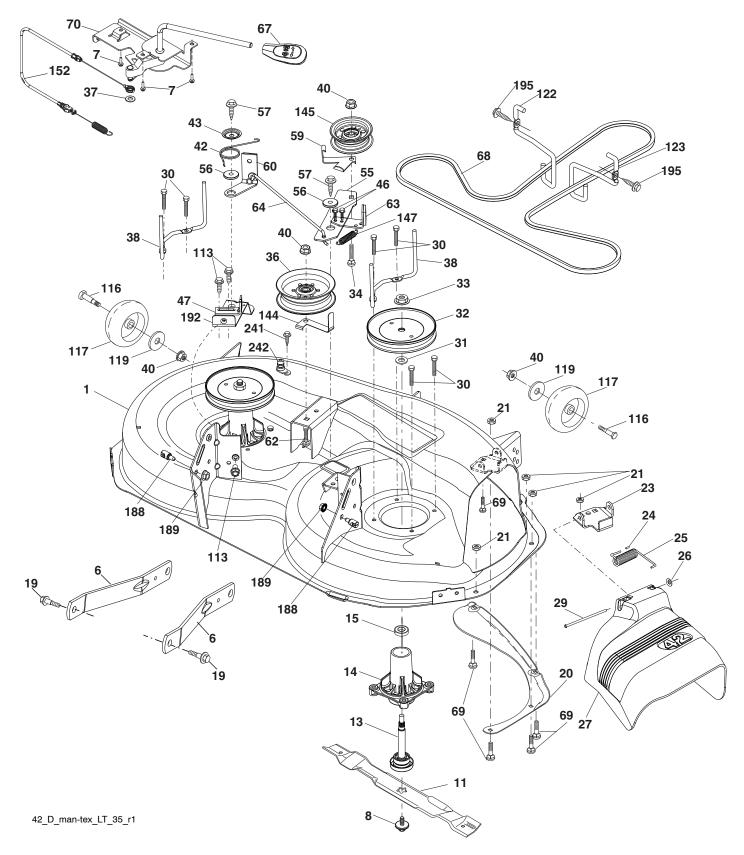

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 MOWER DECK


| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|------------|--------------|------------------------------------|------------|---------------|------------------------------------|
| | | | | | |
| 1 | 532 19 64-95 | Mower Housing | 59 | 532 14 10-43 | Guard, Tuv Idler (94) |
| 6 | 532 19 51-86 | Arm Suspension | 60 | 532 19 72-61 | Arm Brake Mower |
| 7 | 532 41 63-58 | Screw #10 x 0.750 BOS Thread | 62 | 872 11 06-16 | Bolt Rdhd Sqnk 3/8-16 unc x 2 |
| 8 | 532 19 30-03 | Bolt/Washer Asm 7/16-20 unf | 63 | 532 19 94-77 | Arm Brake Mower |
| 11 | 532 13 89-71 | Blade, 42" Hi-Lift | 64 | 532 19 97-90 | Linkage Brake |
| | | (For bagging or discharge) | 67 | 532 40 30-12 | Handle, Clutch Cable |
| | 532 13 41-49 | Blade, 42" Mulching Standard | 68 | 532 42 96-36 | V-Belt |
| | 532 13 97-75 | Blade, 42" Mulching Premium | 69 | 872 14 05-05 | Bolt Rdhd Sqnk 5/16-18 x 5/8 |
| | 532 42 47-52 | Blade, 42SP" 3N1 | 70 | 532 19 97-79 | Clutch Asm. Manual |
| | 532 42 27-19 | Blade 42SP" 3N1 Premium | 113 | 817 00 05-10 | Screw 5/16-18 |
| 13 | 532 19 28-72 | Shaft Assembly, Mandrel | 116 | 532 12 48-42 | Bolt Shoulder "A" 2.41 "B" 1.66 |
| 14 | 532 18 72-81 | Housing, Mandrel | 117 | 532 18 86-06 | Wheel Gage |
| 15 | 532 11 04-85 | Bearing, Ball, Mandrel | 119 | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga. |
| 19 | 532 19 65-39 | Bolt, Shoulder | 122 | 532 19 72-58 | Keeper Belt Eng. LH |
| 20 | 532 15 97-70 | Baffle, Vortex | 123 | 532 19 72-59 | Keeper Belt Eng. RH |
| 21 | 873 68 05-00 | Nut, Crownlock 5/16-18 unc | 144 | 532 19 92-04 | Keeper Belt |
| 23 | 532 19 25-57 | Bracket, Deflector | 145 | 532 19 31-97 | Pulley Idler Primary |
| 24 | 532 10 53-04 | Cap, Sleeve | 147 | 532 40 19-71 | Spring Return |
| 25 | 532 19 70-26 | Spring, Torsion, Deflector | 152 | 532 43 51-11 | Cable Clutch Manual w/Spr. |
| 26 | 532 11 04-52 | Nut, Push | 188 | 532 19 51-61 | Stud Fastener |
| 27 | 532 40 30-04 | Shield, Deflector | 189 | 873 90 05-00 | Nut Lock Hex Flange |
| 29 | 532 13 14-91 | Rod, Hinge | 192 | 532 19 72-60 | Bracket Brake Stand LH |
| 30 | 532 17 39-84 | Screw Thdrol Rolling Wsh Hd | 195 | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 31 | 532 18 76-90 | Washer, Spacer | 241 | 532 15 29-27 | Screw #10-32.5 3/8 Flange |
| 32 | 532 19 74-73 | Pulley, Mandrel | 242 | 532 41 55-98 | Port Washout |
| 33 | 532 40 02-34 | Nut, Toplock, Flanged | | 532 41 64-05 | Coupling Quick Connect |
| 34 | 872 11 06-12 | Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5 | | 532 19 28-70 | Mandrel Assembly (Includes |
| 36 | 532 19 73-79 | Pulley, Idler 4.50 RAW | | | housing, shaft assembly, and |
| 37 | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga. | | | bearing only - pulley/nut/washer |
| 38 | 532 43 25-20 | Keeper Belt Mandrel | | | and blade bolt/washers not in- |
| 40 | 873 90 06-00 | Nut, Lock Flg. 3/8-16 unc | | | cluded) |
| 42 | 532 19 84-10 | Spring Torsion Brake | | 532 43 77-30 | Replacement Mower, Complete |
| 43 | 532 19 72-56 | Spring Torsion Retainer | | | , , |
| 46 | 532 13 77-29 | Screw Thd Roll 1/4-20 x 5/8 | | | |
| 47 | 532 19 72-50 | Bracket Clutch Cable | | | |
| 55 | 532 43 71-10 | Arm, Idler | | | |
| 56 | 532 19 90-92 | Spacer, Retainer | NOTE | | nt dimensions given in U.S. inches |
| 57 | 817 00 06-16 | Screw Hexwsh Thd 3/8-16 x 1 | | 1 inch = 25.4 | mm |

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 MOWER LIFT

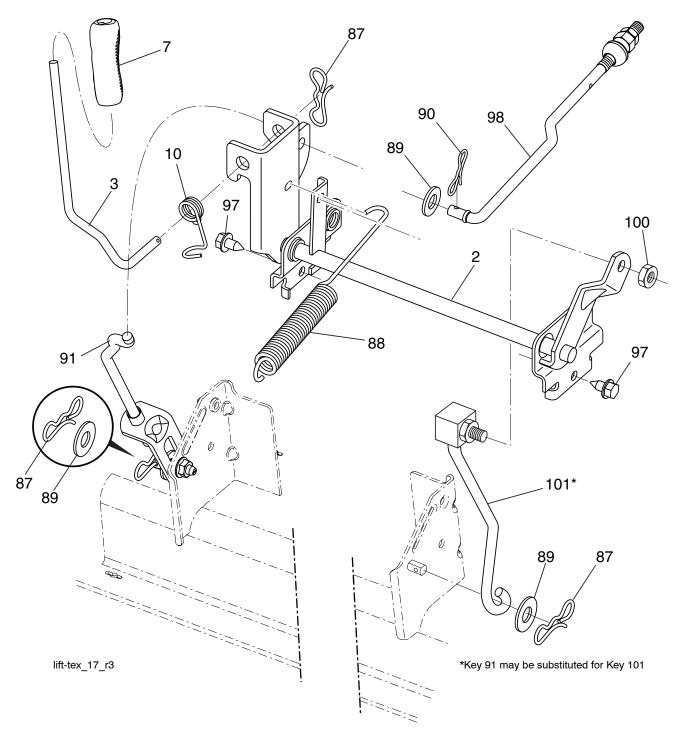


| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|------------|--------------|------------------------------|------------|-----------------|------------------------------------|
| NO. | NO. | DESCRIPTION | NO. | NO. | DESCRIPTION |
| 2 | 532 42 20-27 | Shaft Asm., Lift | 97 | 817 00 06-12 | Screw 3/8-16 x .75 Smgml Tap/R.Z |
| 3 | 532 19 52-31 | Lever Asm., Lift RH | 98 | | Link Lift Susp. Front Mower |
| 7 | 532 41 15-55 | Grip, Lever | 100 | 873 93 06-00 | Nut Centerlock 3/8-16 unc |
| 10 | 532 19 63-14 | Spring Torsion | 101 | 532 40 70-03 | Link Asm. Lift Fixed |
| 87 | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock | | | |
| 88 | 532 41 07-10 | Spring Lift Assist | | | |
| 89 | 819 19 19-12 | Washer Clear Zinc | NOTE | - All compone | nt dimensions given in U.S. inches |
| 90 | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock | 11011 | 1 inch = 25.4 | |
| 91 | 532 19 51-81 | Link Asm. Lift Rear | | 1 111011 - 20.4 | 111111 |

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 SEAT ASSEMBLY

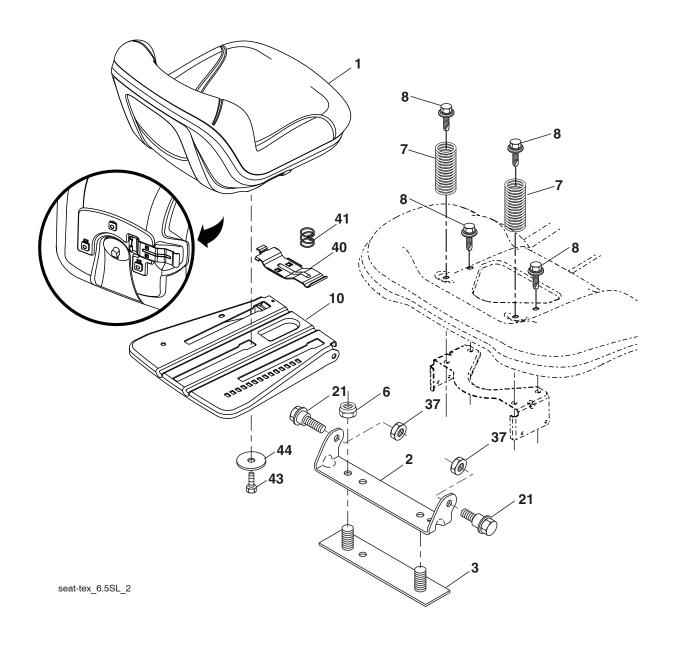


| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|------------|--------------|-------------------------------|------------|-----------------|------------------------------------|
| 1 | 532 19 75-11 | Seat | 37 | 873 80 05-00 | Nut, Lock 5/16-18 unc |
| 2 | 532 18 01-66 | Bracket Pivot Fender | 40 | 532 19 76-61 | Handle Slide Seat |
| 3 | 532 14 06-75 | Strap, Asm Fender | 41 | 532 19 82-00 | Spring Latch Seat |
| 6 | 873 80 06-00 | Nut, Lock w/Ins. 3/8-16 unc | 43 | 874 76 06-12 | Bolt Fin Hex 3/8-16 unc x 3/4 |
| 7 | 532 12 41-81 | Spring, Seat Cprsn | 44 | 819 13 38-12 | Washer 13/32 x 2-3/8 x 12 Ga. |
| 8 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems | | | |
| 10 | 532 19 69-77 | Pan, Seat | NOTI | E: All componer | nt dimensions given in U.S. inches |
| 21 | 532 17 18-52 | Bolt. Shoulder 5/16-18 | | 1 inch = 25.4 | mm |

TRACTOR - MODEL NO. MC20H42YT (96048002700), PRODUCT NO. 960 48 00-27 DECALS

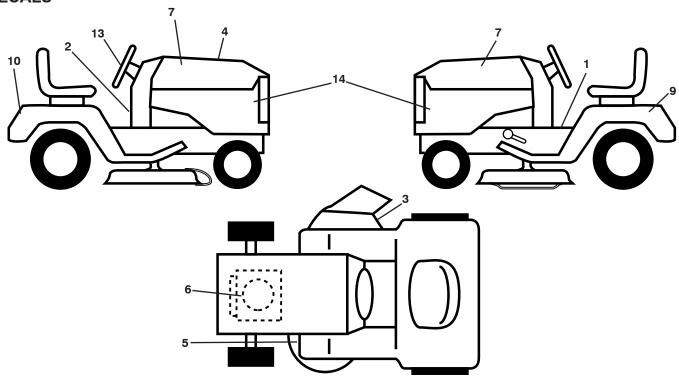

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|------------|--------------|-------------------------|------------|--------------|-------------------------------------|
| 1 | 532 41 16-58 | Decal, Fender Warning | 10 | 532 44 44-52 | Decal, Fender |
| 2 | 532 43 52-86 | Decal, Warning | 13 | 532 43 79-66 | Decal, Steering Wheel |
| 3 | 532 17 05-63 | Decal, Warning | 14 | 532 44 14-24 | Decal, Side Panel |
| 4 | 532 43 88-10 | Decal, Replacement | | 532 16 69-60 | Decal, Bypass |
| 5 | 532 16 03-96 | Decal, Mower Schematic | | 532 41 12-73 | Pad, Footrest RH |
| 6 | 532 42 95-51 | Decal, Eng H.P. | | 532 40 95-05 | Pad, Footrest, LH |
| 7 | 532 43 83-82 | Decal, Hood RH/LH | | 532 44 66-63 | Manual, Operator's (English/French) |
| 9 | 532 14 50-05 | Decal, Battery Dnge/Poi | | 532 44 66-64 | Manual, Parts (English/French) |

WHEELS AND TIRES

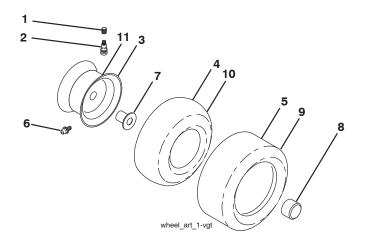

| KEY NO. | PART NO. | DESCRIPTION |
|------------|--------------|------------------------------|
| 110. | 140. | DECOMM HON |
| 1 | 532 05 91-92 | Cap, Valve, Tire |
| 2 | 532 06 51-39 | Stem, Valve |
| 3 | 532 12 51-21 | Rim Assembly, Front |
| 4 | 532 05 99-04 | Tube, Front |
| 5 | 532 10 62-22 | Tire, Front |
| 6 | 532 12 49-57 | Fitting, Grease |
| 7 | 532 12 49-59 | Bearing, Flange |
| 8 | 532 19 32-68 | Cap, Axle (Front Wheel Only) |
| 9 | 532 13 84-68 | Tire, Rear 20 x 8-8 |
| 10 | 532 12 49-26 | Tube, Rear |
| 11 | 532 12 51-22 | Rim Assembly, Rear |
| | 532 14 43-34 | Sealant, Tire (10 oz. Tube) |

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

SERVICE NOTES

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- 1. This warranty does not apply to the engine, transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
- Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by the manufacturer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

HOP Outdoor Products Customer Service Dept. 9335 Harris Corners Parkway Charlotte, NC 28269 USA In Canada contact: HOP 5855 Terry Fox Way Mississauga, Ontario L5V 3E4

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.