 


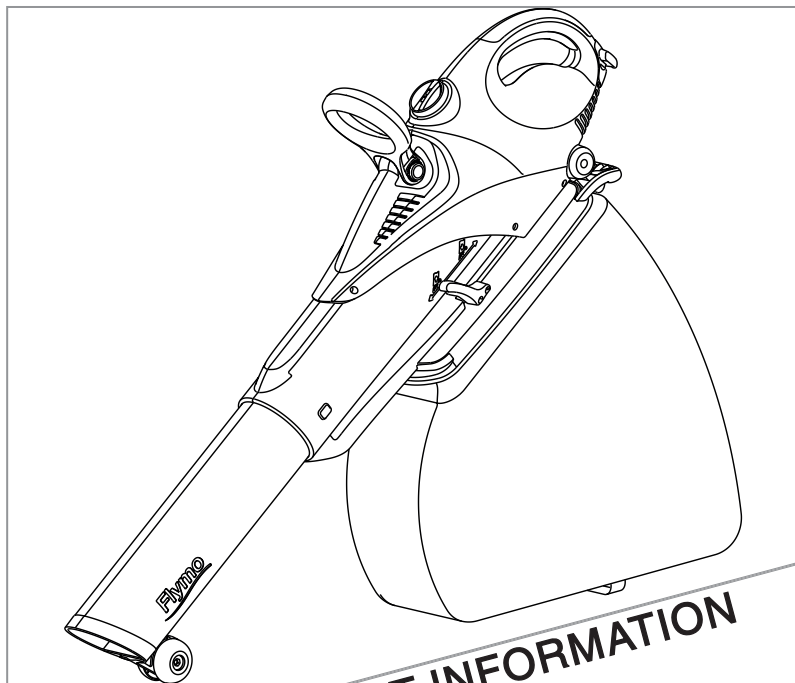


SCIROCCO 2200
SCIROCCO 2500
SCIROCCO 3000



Original Instructions



 IMPORTANT INFORMATION
Read before use
& retain for future reference

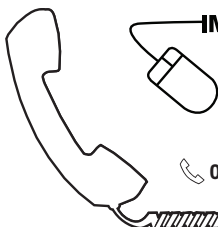

IMPORTANT Please register your product warranty on line.

To register your warranty and for all your parts requirements please visit

 
www.flymo.com

For all other enquiries

0344 844 4558 **UK** 1800 882 350 **ROI**

✉ customer.services@husqvarna.co.uk

Carton Contents

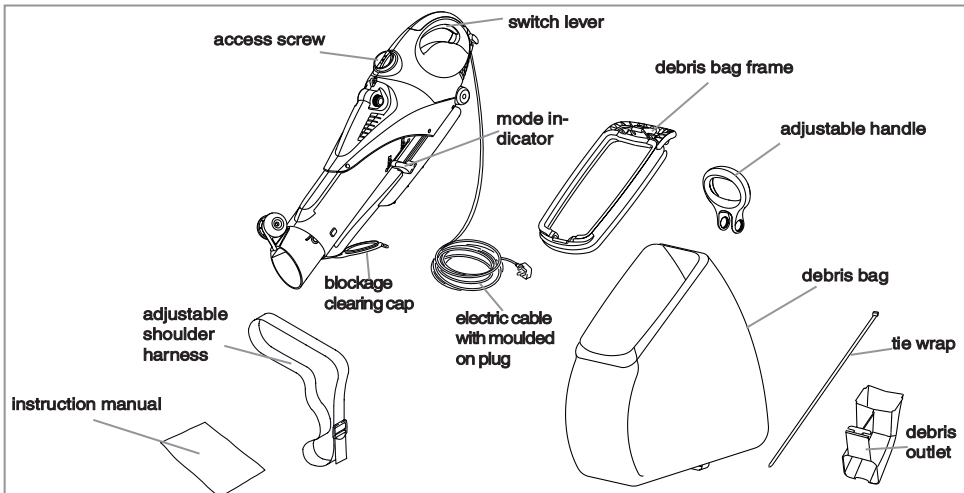

IMPORTANT! Please check the contents of the carton are correct **BEFORE** assembling your new Flymo product.
IF ANY PARTS ARE MISSING CONTACT:- Husqvarna UK Ltd Customer Service Department direct
 Telephone : 0344 844 4558 **UK** 1800 882 350 **ROI** Fax : 01325 302530

Safety



If not used properly this product can be dangerous. The warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warnings and instructions in this manual and on the product. Never use the product unless the guards provided by the manufacturer are in the correct position.

Explanation of Symbols on the product



Warning



Read the user instructions carefully to make sure you understand all the controls and what they do.



Do not operate in the rain or leave the product outdoors while it is raining.



Switch off! Remove plug from mains before adjusting, cleaning or if cable is entangled or damaged.



The use of eye protection is recommended.



Keep bystanders away.

General

1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. Local regulations may restrict the age of the operator.
2. Never allow children or people unfamiliar with the instructions to use the machine.
3. Stop using the machine while people, especially children, or pets are nearby.
4. Read the user instructions carefully to make sure you understand all the controls and what they do.
5. Only use the product in the manner and for the functions described in these instructions.
6. Never operate the product when you are tired, ill or under the influence of alcohol, drugs or medicine.
7. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Electrical

1. We recommend the use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30mA. Even with a R.C.D. installed 100% safety cannot be guaranteed and safe working practice must be followed at all times. Check your R.C.D. every time you use it.
2. Before use, examine the cable for signs of damage or ageing. If the cable is found to be defective, take the product to an Authorised Service Centre and have the cable replaced.
3. Do not use the product if the electric cables are damaged or worn.
4. Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected. Do not repair a cut or damaged cable. Replace it with a new one.
5. Your electric cable must be uncoiled, coiled cables can overheat and reduce the efficiency of the product. Do not pull cable around sharp objects.
7. Always switch off at the mains before disconnecting any plug, cable connector or extension cable.

8. Switch off, remove plug from mains and examine electric supply cable for damage or ageing **before** winding cable for storage. Do not repair a damaged cable, replace it with a new one. Use only genuine replacement cable.
9. Never carry the product by the cable.
10. Never pull on the cable to disconnect any of the plugs
11. Always wind cable carefully, avoiding kinking.
12. Use only on AC mains supply voltage shown on the product rating label.
13. Our products are double insulated to EN60335. Under no circumstance should an earth be connected to any part of the product.

Preparation

1. While using your product always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
2. The use of eye protection is recommended.
3. The use of ear protection is recommended.
4. To prevent dust irritation, the wearing of a face mask is recommended.
5. Do not wear loose clothing or jewellery that can be drawn into the air inlet.
6. Do not wear clothing with attachments, i.e. toggles or drawstrings that can be drawn into the air inlet.
7. Inspect your product before each use.
8. Do not use if any part is damaged or broken or if any of the screws are loose. Have it repaired by an authorised repairer.
9. Always check your product is in a safe operating condition before use.

Use

1. Use the product only in daylight or good artificial light.
2. Do not use the product when it is raining or in damp and wet areas.
3. Never use the product in or near water or ponds.
4. Know how to stop the product quickly in an emergency.
5. On slopes, be extra careful of your footing and

- wear non-slip footwear.
6. Do not walk backwards whilst operating your product, you could trip. Walk, never run.
7. Always direct the cable to the rear, away from the product.
8. Keep children, pets and bystanders at a safe distance when using your product.
9. Keep long hair away from air inlet.
10. Keep all inlets clear of debris.
11. Always remain alert.
12. Do not attempt to use your product without the fully assembled debris bag fitted.
13. Never blow debris in the direction of bystanders.
14. Do not overreach. Keep proper footing and balance at all times.
15. The impeller continues to rotate after your product has been switched off.
16. Remove the plug from the mains :-
 - before removing or replacing fully assembled debris bag;
 - before leaving the product unattended for any period;
 - before clearing a blockage;
 - before checking, cleaning or working on the product;
 - if the product starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the product is in a safe working condition.
2. Replace worn or damaged parts for safety.
3. Use only genuine replacement parts and accessories
4. Inspect the debris bag regularly. If the debris bag becomes worn or damaged, replace.
5. Store in a cool dry place and out of reach of children. Do not store outdoors.
6. Allow the product to cool for at least 30 minutes before stroing.

CABLES - IMPORTANT

If you want to use an extension cable when operating your product, only the following cable dimensions should be used:

- 1.0 mm² : max length 40m
- 1.5 mm² : max length 60m
- 2.5 mm² : max length 100m

Minimum rating :

1.00mm² size cable, 10 amps 250 volts AC.

• YOUR PRODUCT IS SUPPLIED WITH CABLE WIRED DIRECTLY INTO THE PRODUCT.

1. If the supply cord is damaged, it must be replaced by a special cord or assembly available from your local Husqvarna UK Ltd. Approved Service Centre.
2. Flymo Extension Cables are available from your local Husqvarna UK Ltd. Approved Service Centre.
3. Do not wire an extension cable directly to your product yourself. Please contact your local Husqvarna UK Ltd. Approved Service Centre for further information on the connectors and kits available.
4. Only use extension cables specifically designed for outdoor use and which conform to one of the following specifications: Ordinary rubber (60245 IEC 53), Ordinary PVC (60227 IEC 53) or Ordinary PCP (60245 IEC 57)

CONNECTORS

IMPORTANT

- Flymo connectors are suitable for use with 2 core cable only. Under no circumstances should these connectors be used for earthed products.
- All Flymo connectors and cables are of splashproof construction. They are not waterproof and must not be left outside permanently nor should they be submerged or immersed in water. Do not let cable lay or trail through pools of water or splashed with water from hose pipes.

MAINS PLUG REPLACEMENT - IMPORTANT

- If the plug supplied is cut off it should be destroyed. There is an electric shock hazard if a cut off plug is inserted into a 13 amp socket.

1. **No earth required.** Flymo products are double insulated to EN60335 and under no circumstances should an earth be connected to any part of the product.

2. **Ensure the mains voltage suits your product**

3. **IMPORTANT!**

The wires in the mains lead are coloured in accordance with the following code:

BLUE - NEUTRAL
BROWN - LIVE

The wire which is coloured BLUE must be connected to the Terminal which is marked with the letter 'N' or coloured BLACK.

 
The wire which is coloured BROWN must be connected to the Terminal which is marked with the letter 'L' or coloured RED.

4. It is important that the outer sheath is clamped correctly into the 3-pin plug.
5. If in doubt consult your local Service Repairer or qualified electrician before the machine is used.
6. **A 13 Amp fuse must be fitted to the Mains Plug.**
7. The normal plug fuse and household fuse only protect the electrical equipment and are not a safeguard against electrocution.


If the mains cable is damaged, it must be replaced with the correct Flymo assembly from an Flymo Approved Service Dealer (see leaflet enclosed in product)

Assembly Instructions

A1

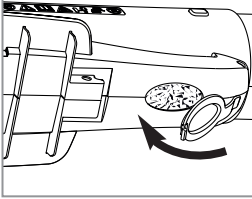

A2

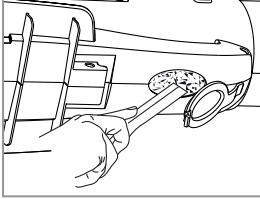 

Blockage Clearing Cap (A1) & (A2)

 
1. Close the Blockage Clearing Cap ensuring it is secure.

Suction Tube Assembly


1. Extend the lower suction tube to its full length, (B1)
2. Turn the lower suction tube anti-clockwise in the direction of the arrow, approximately 1.5 times, until it locks into position (B2)

IMPORTANT When the Suction Tube is locked into the operating position, this is a permanent fixture. The Suction tube cannot be pushed back to its packaged position.

B1

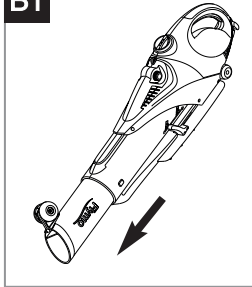

B2

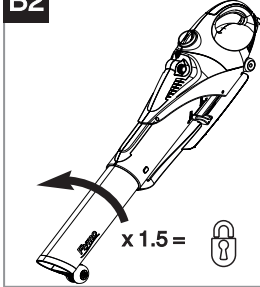 


Debris Outlet Assembly

1. Fit the Debris Outlet to the underside of the product as illustrated in Fig C, until it locks into position.


Steady Handle Assembly (D)

1. Depress the two buttons on the sides of the switch handle.
2. Locate the steady handle over the buttons and release the buttons.
3. Adjust the steady handle to the most comfortable operating position by depressing the buttons and moving the handle.

 C

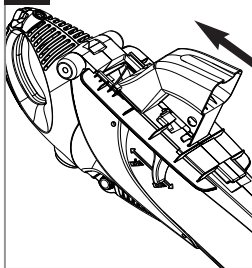

D

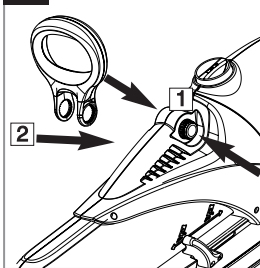 


Debris Bag Assembly

1. Slide the Tie Wrap into the top hem of the Debris bag (E1)
2. Thread the Tie wrap completely round the hem and locate the two ends of the Tie wrap together (E2)


Important:- Do not tighten the Tie Wrap before attaching the Debris Bag to the Debris Bag Frame. If mistakenly done so, use a pointed tool to loosen the Tie Wrap clip.

3. Attach the Debris Bag to the Debris Bag Frame as illustrated in Fig E3, ensuring that the Tie Wrap ends are at the opposite end to the Debris Bag Frame handle.
4. Once the Debris Bag is located onto the Debris Bag Frame, pull the Tie Wrap until the Debris Bag is secure (E4). The excess end of the Tie Wrap can either be removed or tucked into the top hem.

 
E1

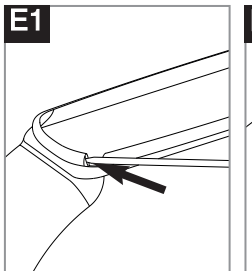


E2

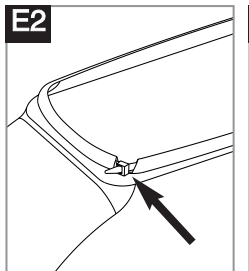 



E3

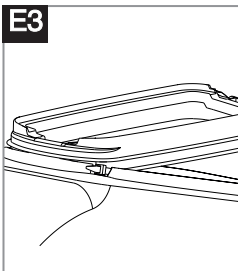 

E4

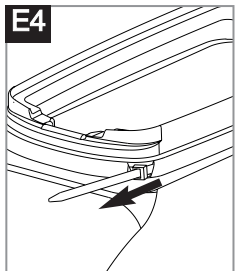 

Assembly Instructions

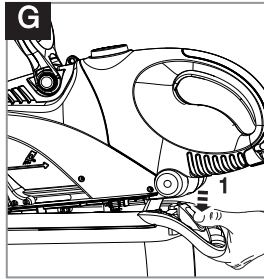 
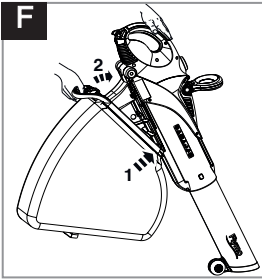 


Attaching Debris Bag to product

1. Locate bag frame into clip on the underside of product. **(F1)**.
2. Lift handle towards product until bag latch locates and click into place. **(F2)**



Removing Debris Bag from Product

  1. Gently press bag latch **(G1)** down.
2. Lower handle of bag frame away from product.
3. Move bag frame forward.

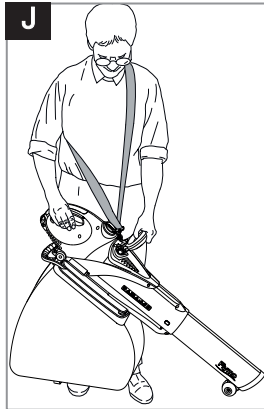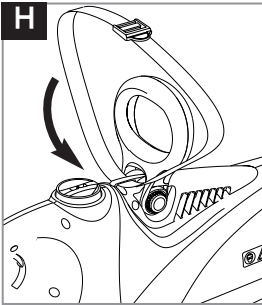



Attaching the Shoulder Harness

  1. Attach the Shoulder Harness to the product as illustrated in **Fig H**
2. Adjust the Shoulder Harness as required to ensure it is in the most comfortable position and the collection tube is positioned slightly above the debris. **(J)**.

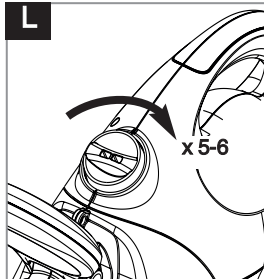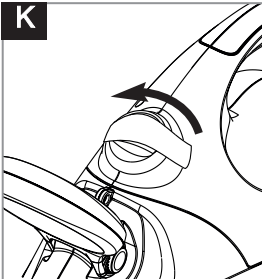

Securing the Access Screw

  1. Remove the label from over the Access Screw **(K)**.
 2. Turn the Access Screw 5-6 times clockwise **(L)** until tight (do not overtighten)
- **Important:- Your product will not operate if the Access Screw is not tightened.**

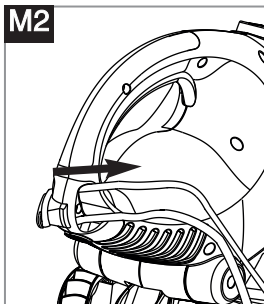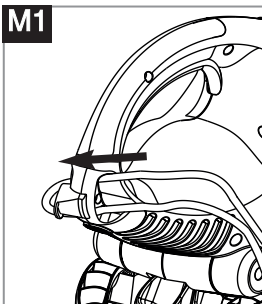

Cable Restraint

1. Form loop in mains cable and push the loop through the slot **(M1)**.
2. To secure, position loop over the hook and pull the cable back through the slot **(M2)**.

How to Use

WARNING

The use of eye protection is recommended. The use of ear protection is recommended. To prevent dust irritation, the wearing of a face-mask is recommended. Never point your product at bystanders.

- The product has 2 modes of operation.
- These can be selected by moving the mode indicator (N) to adjust the nozzle position for blow or vacuum mode.

Using As A Blower

Blow Mode - The product will blow debris from patios, paths, driveways, lawns, bushes, borders etc.

1. Select the blow position on the mode indicator (N1)
2. Point nozzle towards the ground.
3. To start squeeze the switch lever (P).
4. Stand back from debris to be cleared.
5. Point the tube towards the debris and slowly approach.
6. To stop release the switch lever.

 
 
 
 
- If Blow performance is reduced, the tube may be blocked. Open the Blockage Clearing Cap (Q1) and

clear the Blockage with blunt edge implement (Q2)



Using As A Vacuum

Vacuum Mode - In this position your product will pick up leaves, small twigs and garden debris.

1. Select the vacuum position on the mode indicator. (N2).
2. Position the tube slightly above the debris, squeeze the switch lever (P) and move the product slowly back and forth.
3. Do not force the tube into the debris as this will impair performance.
4. To stop release the switch lever.

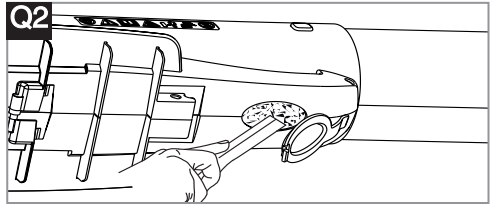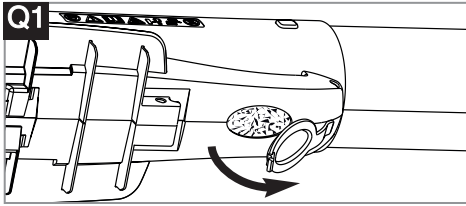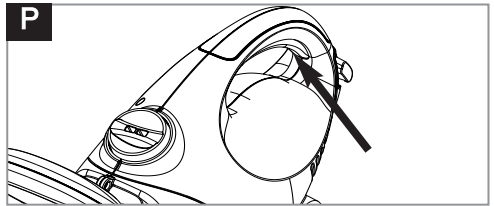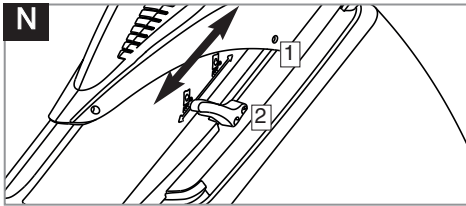







Emptying your Product

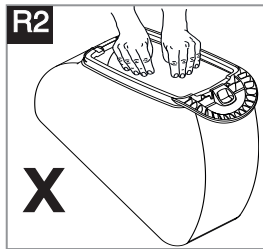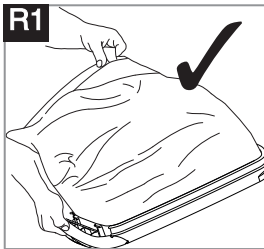  

Emptying Your Product

1. Remove the Debris Bag as described in the Assembly section.
2. Empty debris bag holding the moulded handle at the top of the bag and the fabric handle at the bottom of the bag. (R1)
DO NOT PLACE HANDS IN BAG WHEN EMPTYING
SHARP DEBRIS CAN CAUSE INJURY (R2)
3. Re-fit the Debris Bag as described in the Assembly section.

      Caring for your product

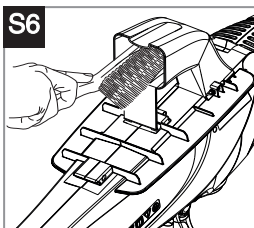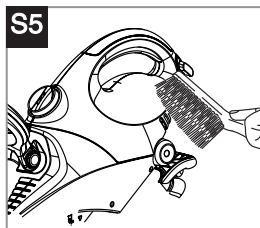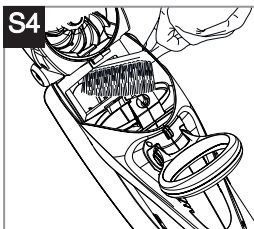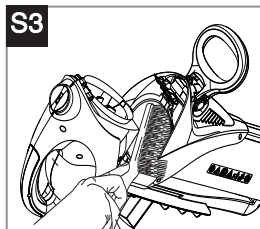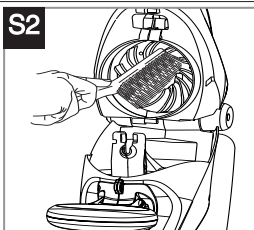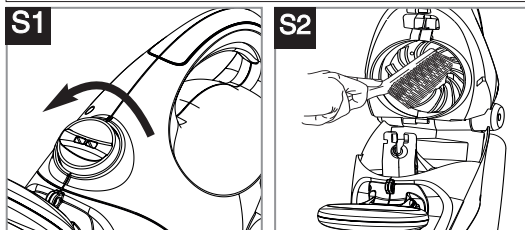

WARNING Never use water for cleaning your product, use only a dry cloth. Do not clean with chemicals or solvents, some can destroy critical plastic parts.

After Using Your Product

1. Switch off and disconnect from the mains electricity supply before cleaning your product.
2. Always empty the debris bag.
3. Unscrew the Access Screw (**S1**) until the motor housing unit pivots open.
4. Inspect the fan for damage and replace if necessary. Clean the fan with a soft brush ensuring it is free from debris (**S2**)
5. Clean the tube with a soft brush. (**S3**)
6. Clean the debris exit hole with a soft brush. (**S4**)
7. Close up the motor housing unit and tighten the Access screw until secure (do not over-tighten).
8. Clean the air vents with a soft brush (**S5**)
9. Turn over the product and clean the Debris Outlet with a soft brush. (**S6**)
10. Refit the debris bag.

 
Storing Your Product

Always store the product in a dry place ensuring the cable is not likely to be damaged on sharp edges etc.

IMPORTANT - ACCESS SCREW - WHEN STORING PRODUCT:

Always ensure Access Screw (**S1**) is unscrewed back from the switching position by approximately 3 full turns prior to storage. Be careful to ensure the motor housing does not pivot open.

Remember to tighten Access Screw before re-using the product.

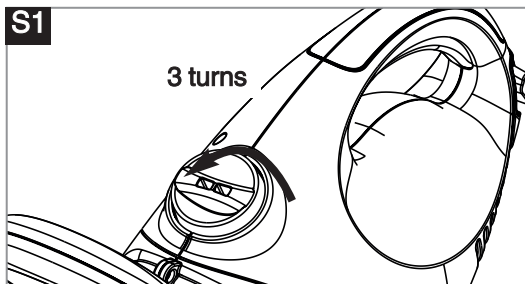

Fault Finding Hints

Fails To Operate

1. Is the power turned on?
2. Check access screw is fully tightened.
3. Check the fuse in the plug, if blown replace.
4. Fuse continues to blow?

Immediately disconnect from the mains electricity supply and consult your local Approved Service Centre

Poor Blowing

1. The air inlets are blocked, clean all air inlets.
2. Mode indicator not in the right position?
3. Tube may be blocked. Open Blockage Clearing Cap and clear blockage with blunt edge instrument
3. If poor blowing persists?

Immediately disconnect from the mains electricity supply and consult your local Approved Service Centre

Poor Vacuum

1. The air inlets are blocked, clean all air inlets.
2. Mode indicator not in the right position?
3. If poor vacuuming persists?

Immediately disconnect from the mains electricity supply and consult your local Approved Service Centre

Excessive Vibration

1. Inspect the fan for damage and replace if necessary
2. If excessive vibration persists?

 
Immediately disconnect from the mains electricity supply and consult your local Approved Service Centre

Environmental Information



Husqvarna UK Ltd are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable

collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Guarantee & Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Husqvarna UK Ltd, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

- (a) The fault is reported directly to the Authorised Repairer.
 - (b) Proof of purchase is provided.
 - (c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
 - (d) The failure has not occurred through fair wear and tear.
 - (e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Husqvarna UK Ltd.
 - (f) The machine has not been used for hire.
 - (g) The machine is owned by the original purchaser.
 - (h) The machine has not been used commercially.
- * This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- * Failures as a result of not reporting an initial fault.
- * Failures as a result of sudden impact.
- * Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- * Machines used for hire are not covered by this guarantee.
- * The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Electric Mains cable, Debris Bag.
- * **Caution!** Husqvarna UK Ltd does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Husqvarna UK Ltd, or by the machine having been modified in any way.

Service Recommendations

1. We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.
2. Always use genuine Flymo Spare Parts.
3. Prepacked spares are available from most Flymo Approved Service Dealers (See enclosed leaflet in product).
4. Your product is uniquely identified by a silver and black product rating label
5. If you have a problem with your machine contact your local Approved Service Centre ensuring you have full details of your product as described on the product rating label.
6. Should it be necessary for work to be carried out by your

Service Centre, it is important to take your complete machine including cable and any extension cables used. A network of specialist dealers can be found in your local Yellow Pages. To obtain service on your Flymo product simply telephone or visit your local Service Centre. Should you require service under the terms of our guarantee the Service Centre will require proof of purchase. All of the centres listed stock genuine Flymo Spare Parts. NOTE: Our Service Repairers act on their own behalf and are not empowered to commit or legally bind Husqvarna UK Ltd in any manner whatsoever.

EC Declaration of Conformity

Husqvarna AB, S-561 82, Huskvarna, Sweden

Declare under our sole responsibility that the product(s);

Designation.....**Leaf Collector**
Designation of Type(s).....**GBV2200, GBV2500, GBV3000**
Identification of Series.....**See Product Rating Label**
Year of Construction.....**See Product Rating Label**

Complies with the essential requirements & provisions of the following EC Directives:

2006/42/EC, 2004/108/EC, 2000/14/EC, 2011/65/EU

based on the following standards applied:

EN60335-1, IEC60335-2-100, EN50366, EN55014-1, EN61000-3-2, EN61000-3-3, IEC60335-1

The maximum A weighted sound pressure level L_{pA} at the operator's position, recorded on a sample of the above product(s) is given in the table.

The maximum hand / arm vibration weighted value a_h measured according to EN ISO 20643 on a sample of the above product(s) is given in the table.

2000/14/EC: The Measured Sound Power L_{WA} & Guaranteed Sound Power L_{WA} values are according to the tabulated figures.

Conformity Assessment Procedure..... Annex V

Husqvarna 22/01/2013

P. Lameli

Chief Technical Officer

Keeper of technical documentation

Type	GBV2200	GBV2500	GBV3000
Power (kW)	2.2	2.5	3.0
Nominal air flow m ³ /s	0.10	0.10	0.10
Measured Sound Power L_{WA} (dB(A))	99	99	99
Guaranteed Sound Power L_{WA} (dB(A))	100	100	100
Sound pressure L_{pA} (dB(A))	84.6	84.6	84.6
Uncertainty K_{pA} (dB(A))	2.5	2.5	2.5
Hand / arm vibration a_h (m/s ²)	2.79	2.79	2.79
Uncertainty K_{ah} (m/s ²)	1.5	1.5	1.5
Weight (Kg)	5.3	5.3	5.3

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.

Copyright © 2014 Flymo S.A. All rights reserved. Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.

Husqvarna AB
S-561 82
Huskvarna
Sweden

5054287-07

09/14 