



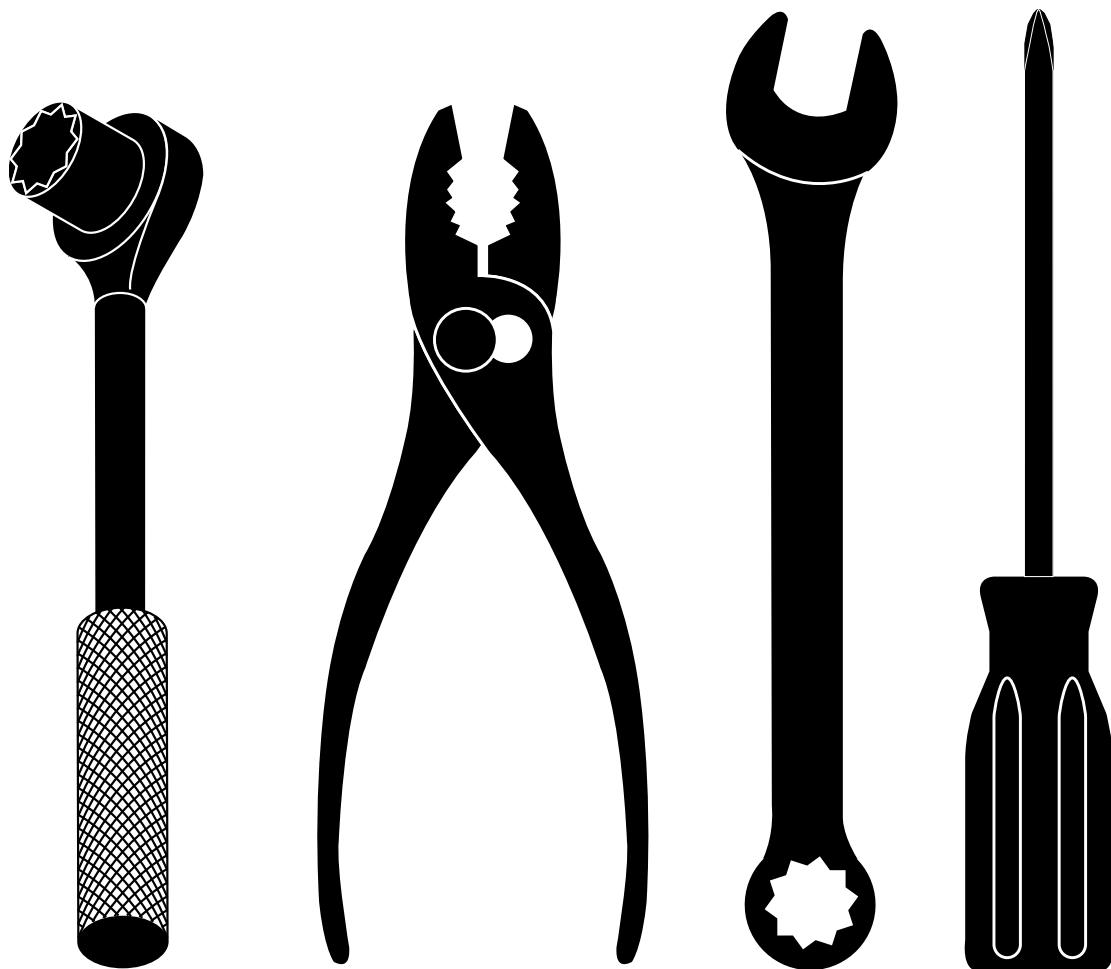

REPAIR PARTS MANUAL

MODEL NO. YT1842 (96041044801)

LAWN TRACTOR

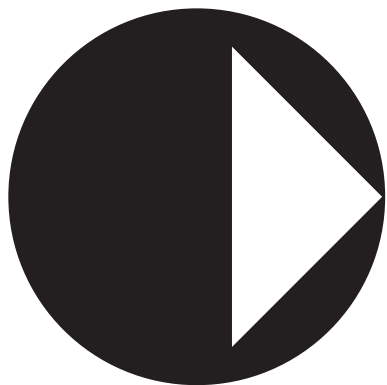

RedMax

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number. The model number for your tractor can be found on the fender under the seat.

Support / Help

If you require assistance or have questions concerning the application, operation, maintenance or parts for your product:

- Visit our website: www.redmax.com
- Call Us Toll Free: 1-800-487-5951

When ordering parts, always give the following information:


- Product - "TRACTOR"
- MODEL NUMBER - "YT1842" (96041044801)"
- Part Number
- Part Description

TABLE OF CONTENTS


SCHEMATIC	3
ELECTRICAL.....	4-5
CHASSIS	6-7
DRIVE.....	8-9
ENGINE.....	10-11
STEERING	12-13
MOWER DECK	14-15
MOWER LIFT.....	16
SEAT	17
DECALS.....	18

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48
SCHEMATIC

SCH12

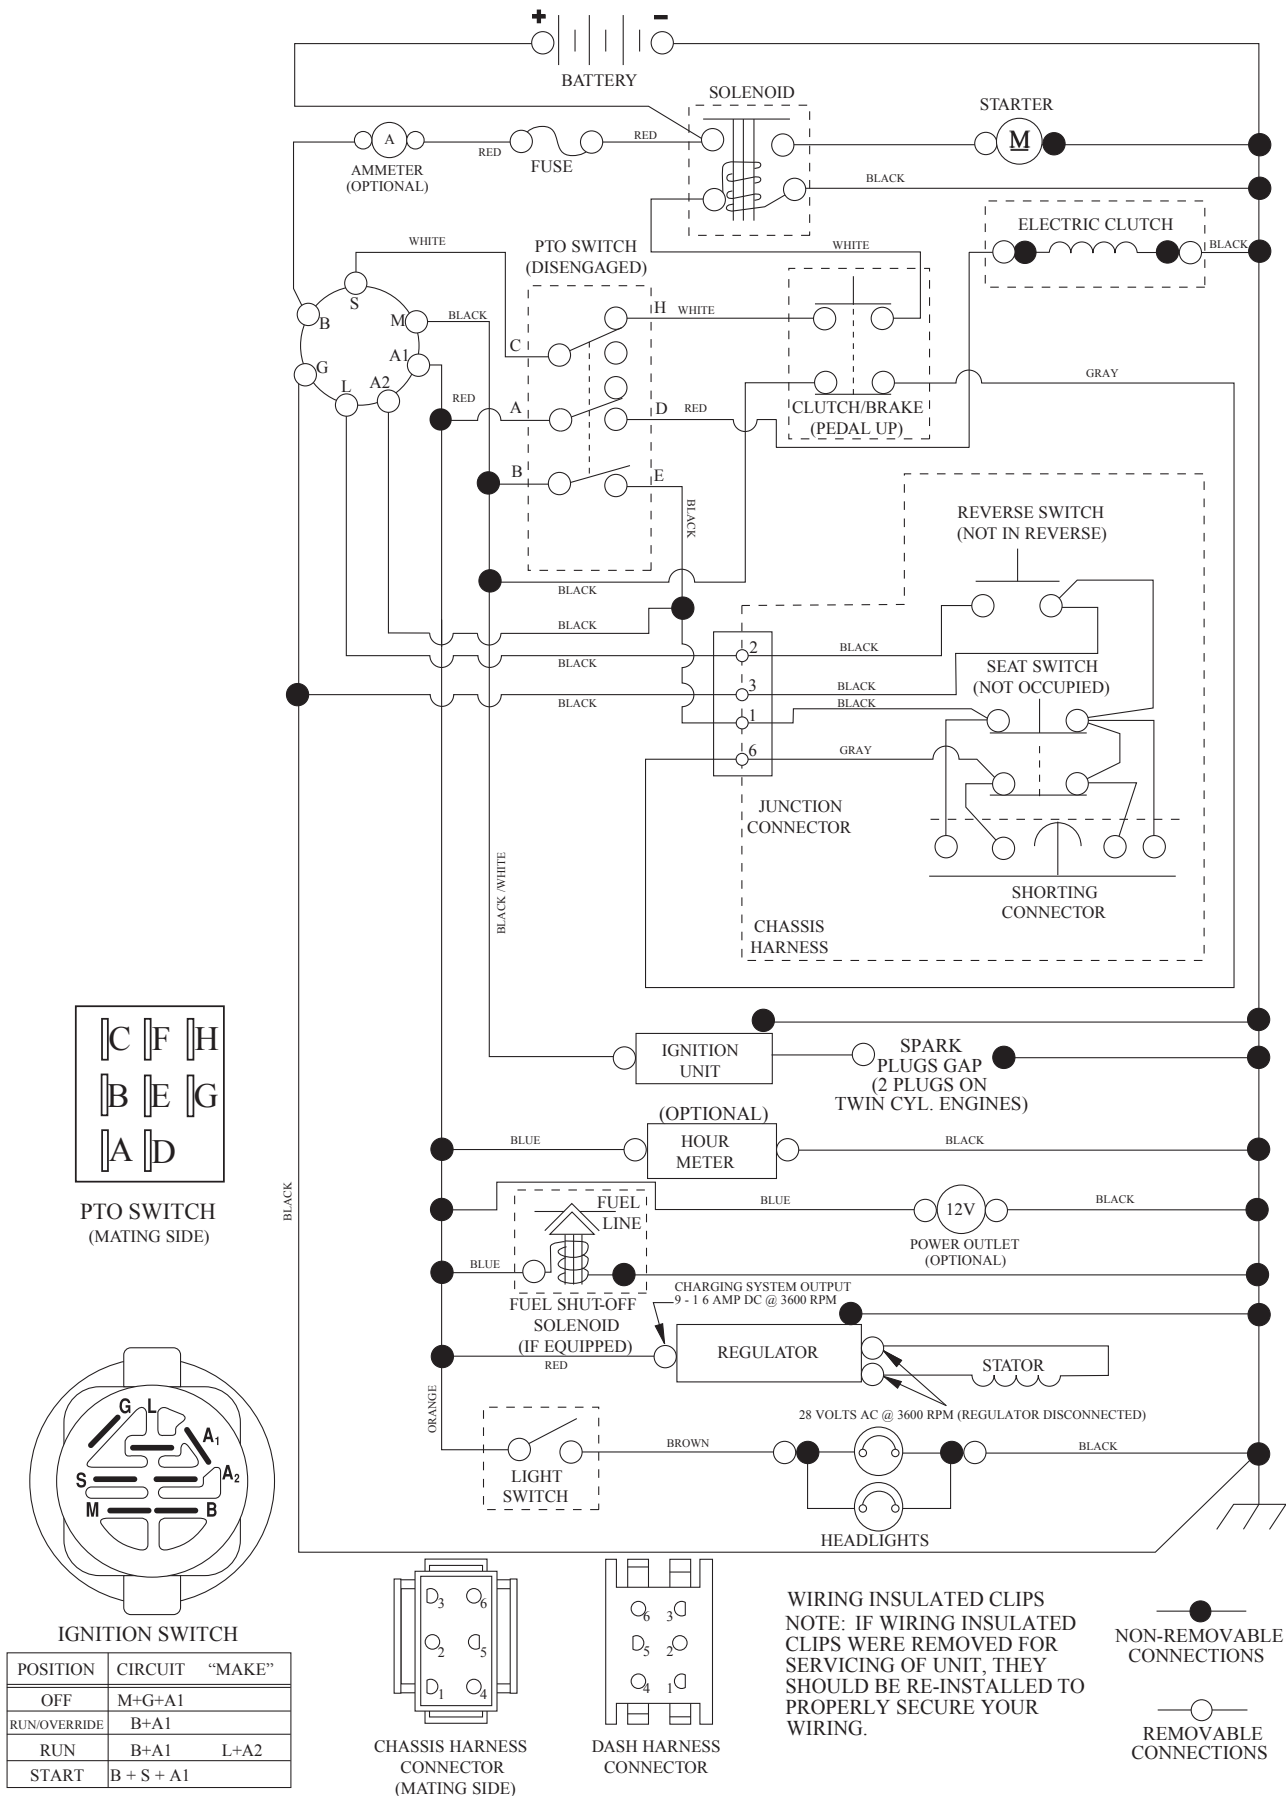

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 ELECTRICAL

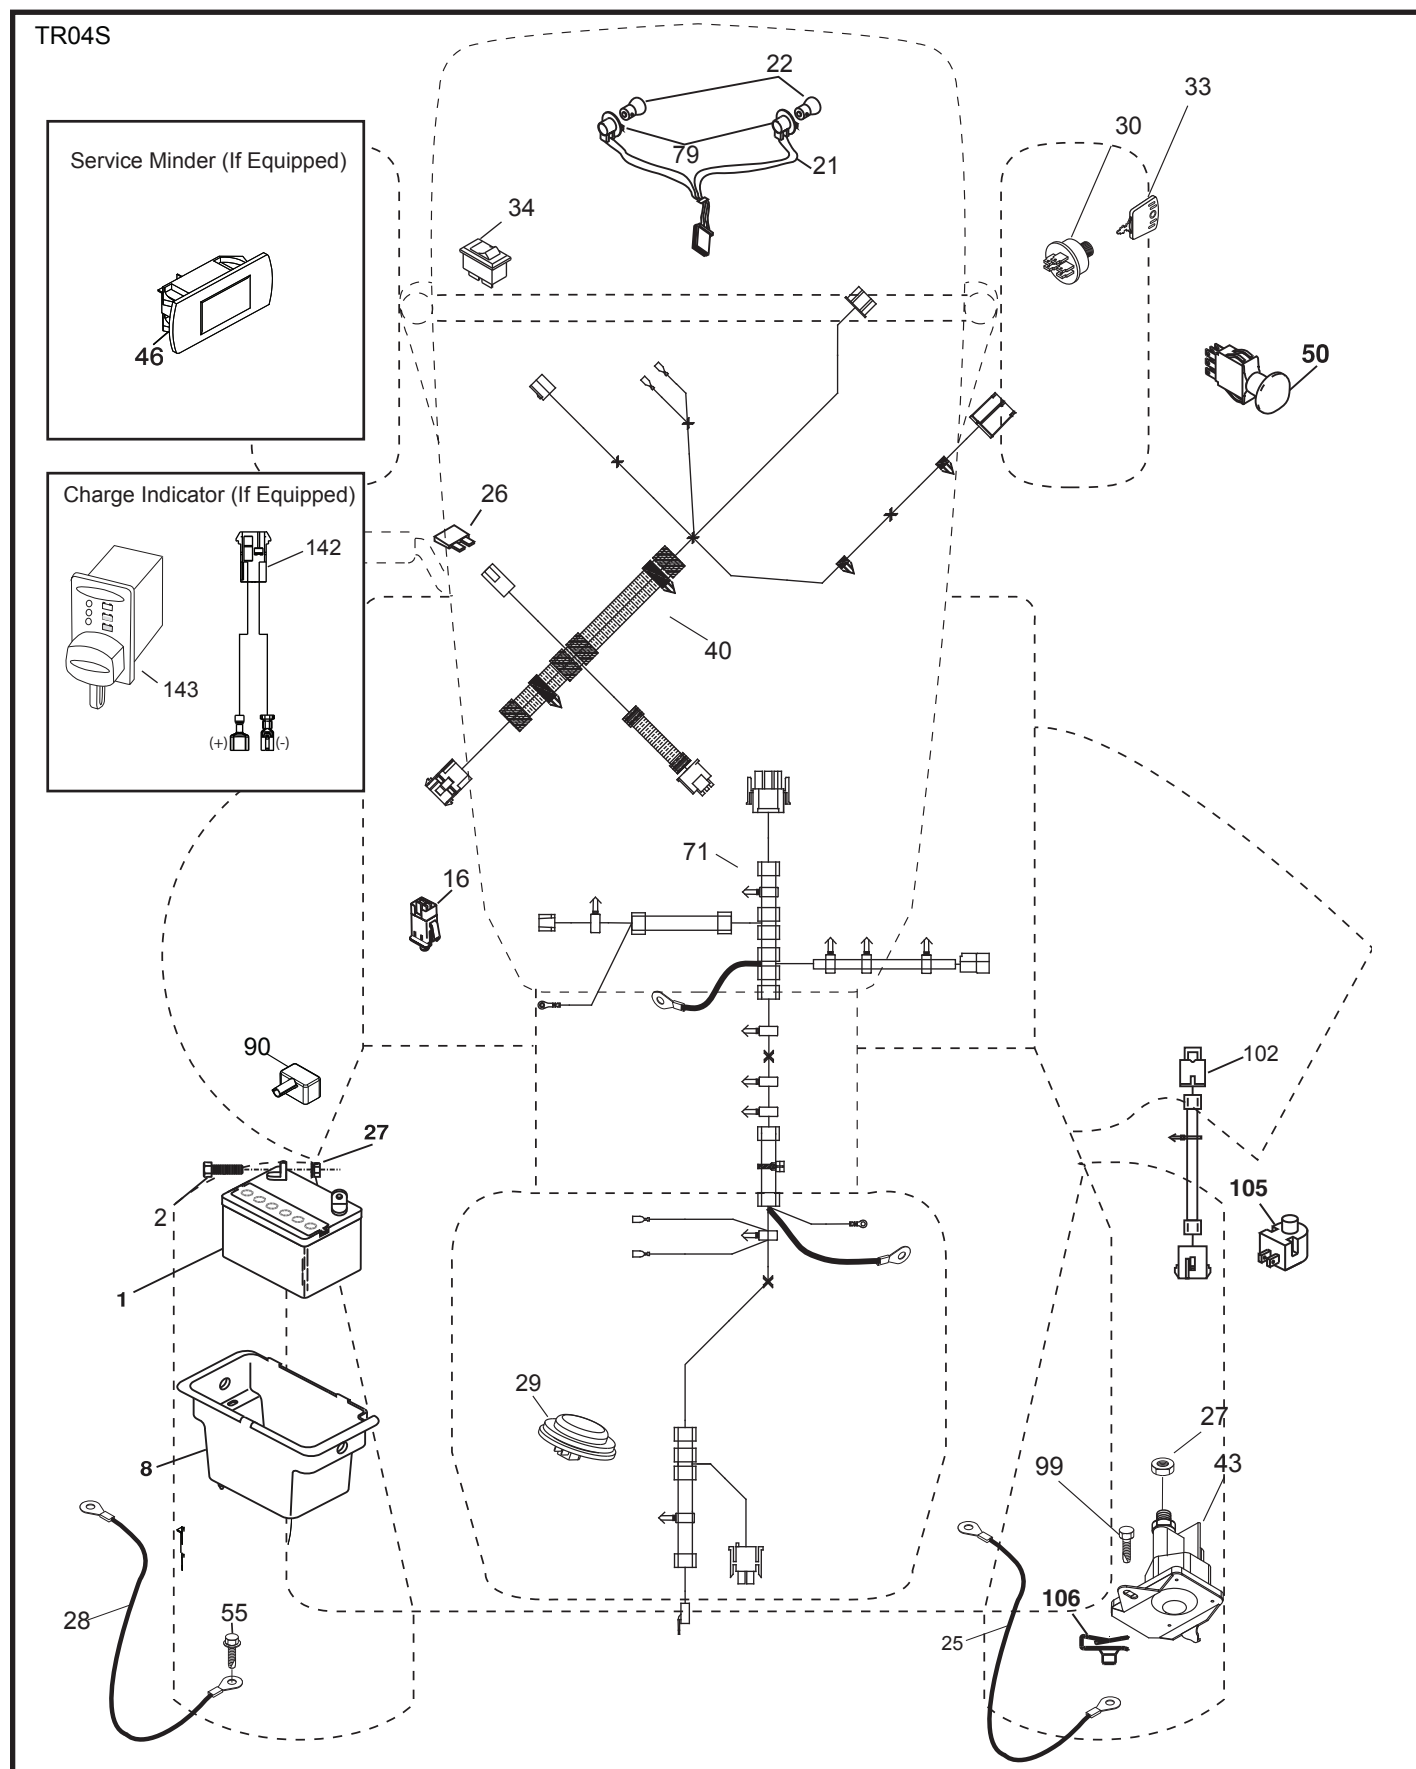


**TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48
ELECTRICAL**

KEY NO.	PART NO.	DESCRIPTION
1	532 16 34-65	Battery
2	874 76 04-12	Bolt Hex Head 1/4-20 x 3/4
8	532 19 32-28	Box Battery
16	532 17 61-38	Switch Interlock Push-In
21	532 40 02-52	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
25	581 49 80-01	Cable, Batt, Red 8 Ga. 17
26	532 17 51-58	Fuse
27	596 13 36-01	Nut Keps Hex 1/4-20 unc
28	532 42 16-86	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	581 02 32-01	Harness, Dash, Rbatt, Elec
43	582 04 28-02	Solenoid
46	594 91 91-01	Hourmeter, Srvminder, Rect
50	582 10 76-01	Switch PTO
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4 TYTT
71	501 13 37-01	Harness, Chas, Rearbatt, Rearsol
79	532 17 52-42	Socket Asm. Bulb
90	532 43 53-95	Cover Terminal
99	817 67 04-12	Screw, Hexwsh, Thdrol, 1/4-20 x 3/4
102	532 40 44-54	Harness Pigtail
105	532 40 75-68	Switch Reverse
106	532 17 48-14	Palnut, 1/4 Lugs

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 CHASSIS

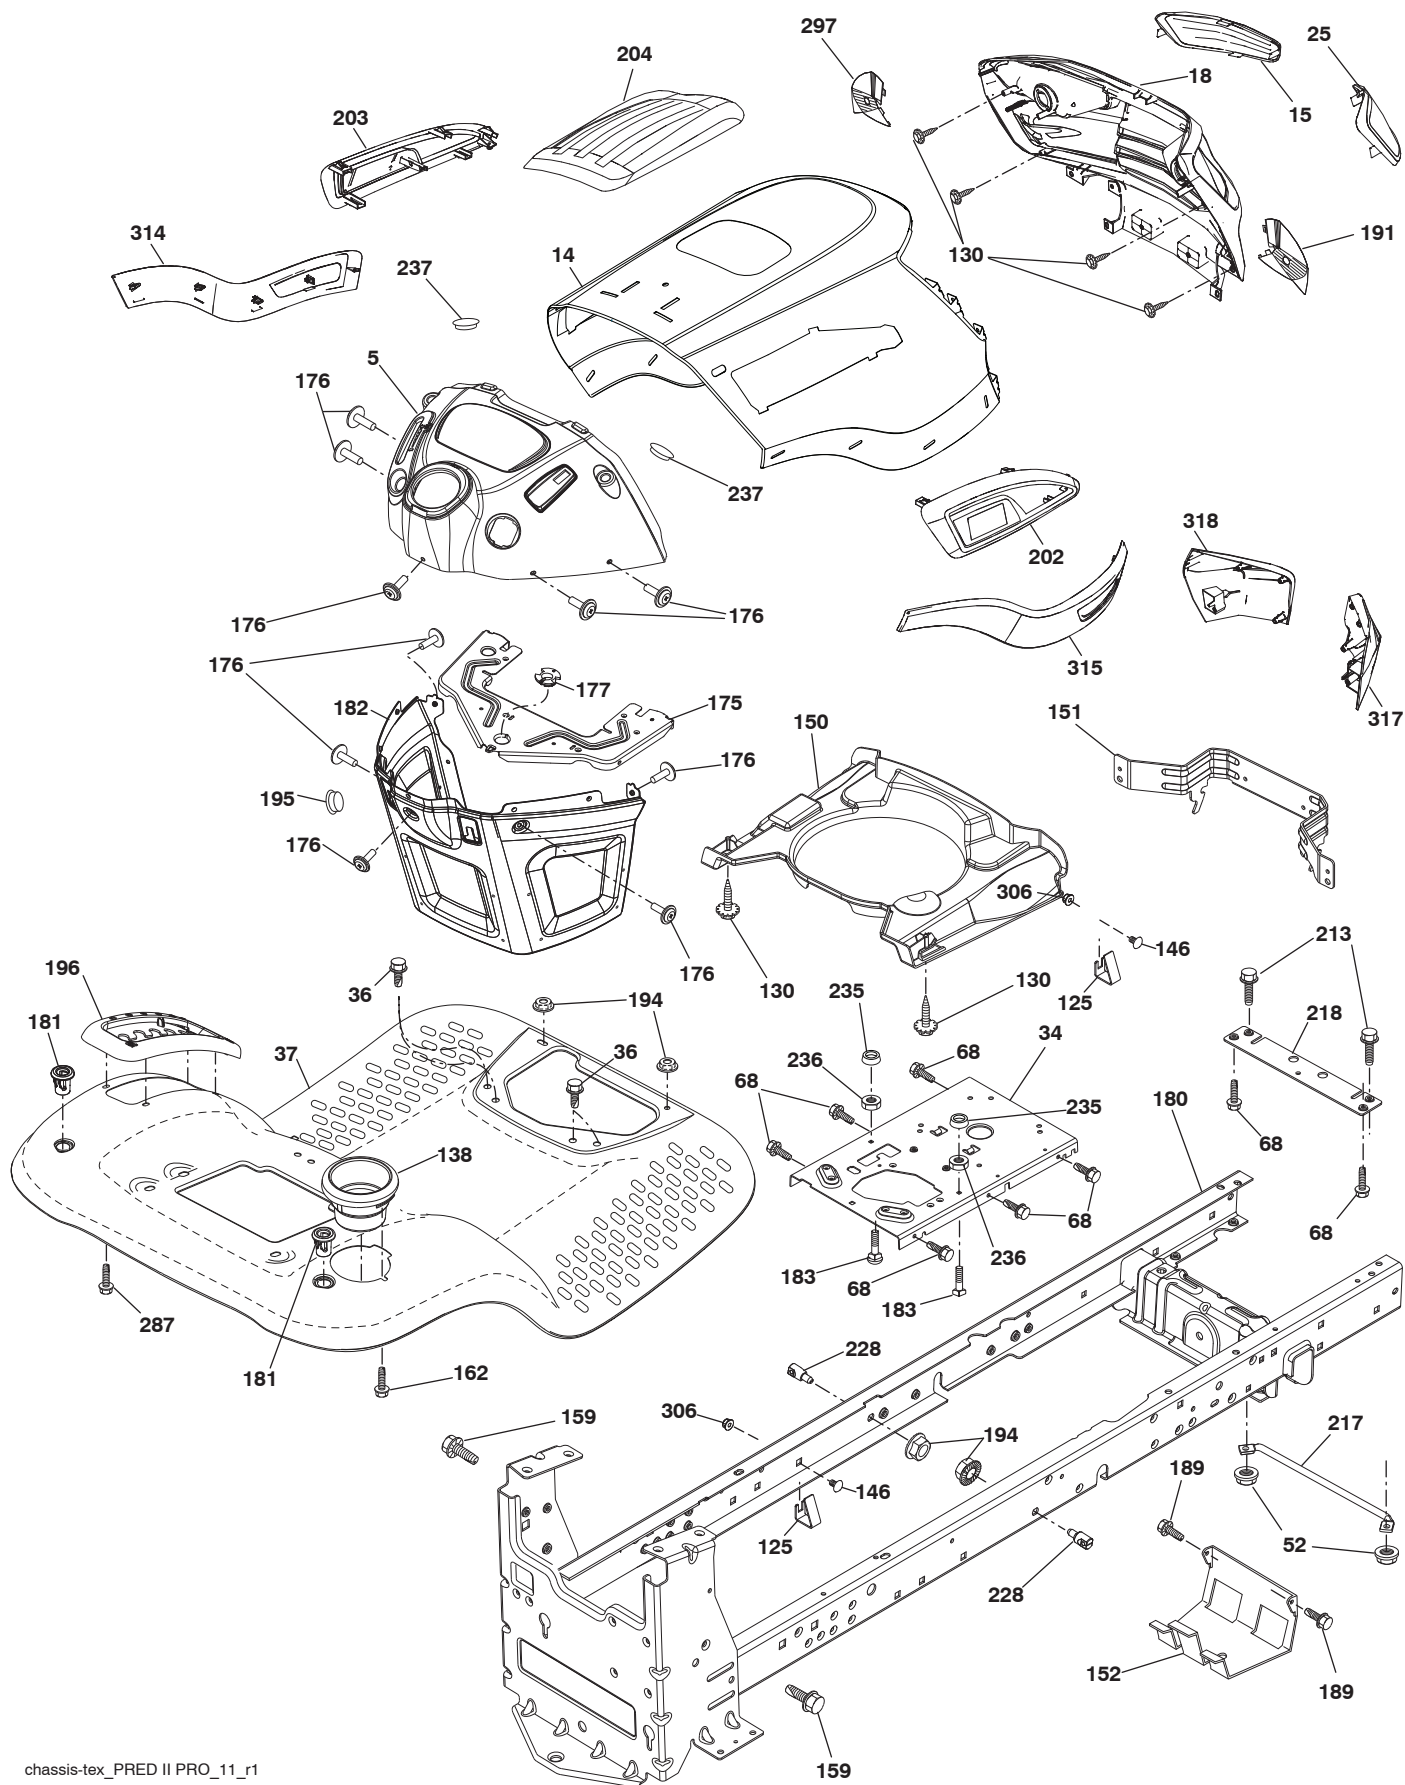


TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 CHASSIS

KEY NO.	PART NO.	DESCRIPTION
5	532 42 47-38	Dash
14	591 14 43-01	Hood
15	587 89 86-01	Lens LH
18	591 04 50-01	Grille
25	587 89 84-01	Lens RH
34	580 91 08-01	Plate Engine
36	817 06 05-12	Screw 5/16-18 x 3/4
37	585 88 59-01	Fender
52	596 04 05-01	Nut, Lock, Hex, Prvl, 5/16-18
68	596 03 07-01	Screw, Hexagon, 5/16-18 x 1/2
125	581 68 48-01	Clip Fuel Line
130	596 32 17-01	Screw, #10 x 0.750, Bos, Thread
138	532 40 97-30	Cupholder
146	581 85 79-01	Bolt
150	584 86 29-01	Air Duct
151	532 44 54-94	Bracket Pivot
152	532 19 95-35	Shield Browning
159	817 00 06-12	Screw Hexwsh Thrd 3/8-16 x 3/4
162	596 13 41-01	Screw, Hex, Tap, 1/4-15 x 1/2
175	590 60 77-02	Crossmember
176	532 40 07-76	Screw 10-24 x 5/8
177	532 19 52-28	Bushing Steering
180	532 19 54-57	Chassis
181	532 40 47-96	Bushing Mtg. Fender Crgo
182	532 40 68-59	Dash Lower
183	595 30 57-01	Screw, Hexagon, 5/16-18 x 1-1/4

KEY NO.	PART NO.	DESCRIPTION
189	817 00 05-12	Screw 5/16-18 x 3/4
191	532 42 54-07	Insert Reflective RH
194	596 13 57-01	Nut, Lock, Prvl, Torq, 5/16-18 x .68
195	532 40 41-37	Plug Hole Dash Lower
196	532 41 45-79	Console Asm. Deck Lift
202	591 04 54-01	Vent Side Hood RH
203	591 04 54-02	Vent Side Hood LH
204	587 96 32-01	Vent Top Asm.
213	596 03 05-01	Bolt, Hex, Hd, 5/16-18 unc x 3/4
217	532 40 91-67	Rod Pivot
218	532 19 63-95	X-Piece Hood Stop
228	532 19 51-61	Stud Fastner
235	596 56 42-01	Spacer, Fender, Clr, Zn
236	873 93 05-00	Nut Lock 5/16-18 unc
237	532 40 37-04	Plug Mount Cargo
287	817 60 04-06	Screw 1/4-20 x 3/8
297	532 42 54-06	Insert Reflective LH
306	873 90 06-00	Nut Lock
314	598 60 38-02	Trim Pred. LH
315	598 60 38-01	Trim Pred. RH
317	591 04 23-01	Bumper Corner RH
318	591 04 36-01	Bumper Corner LH

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 DRIVE

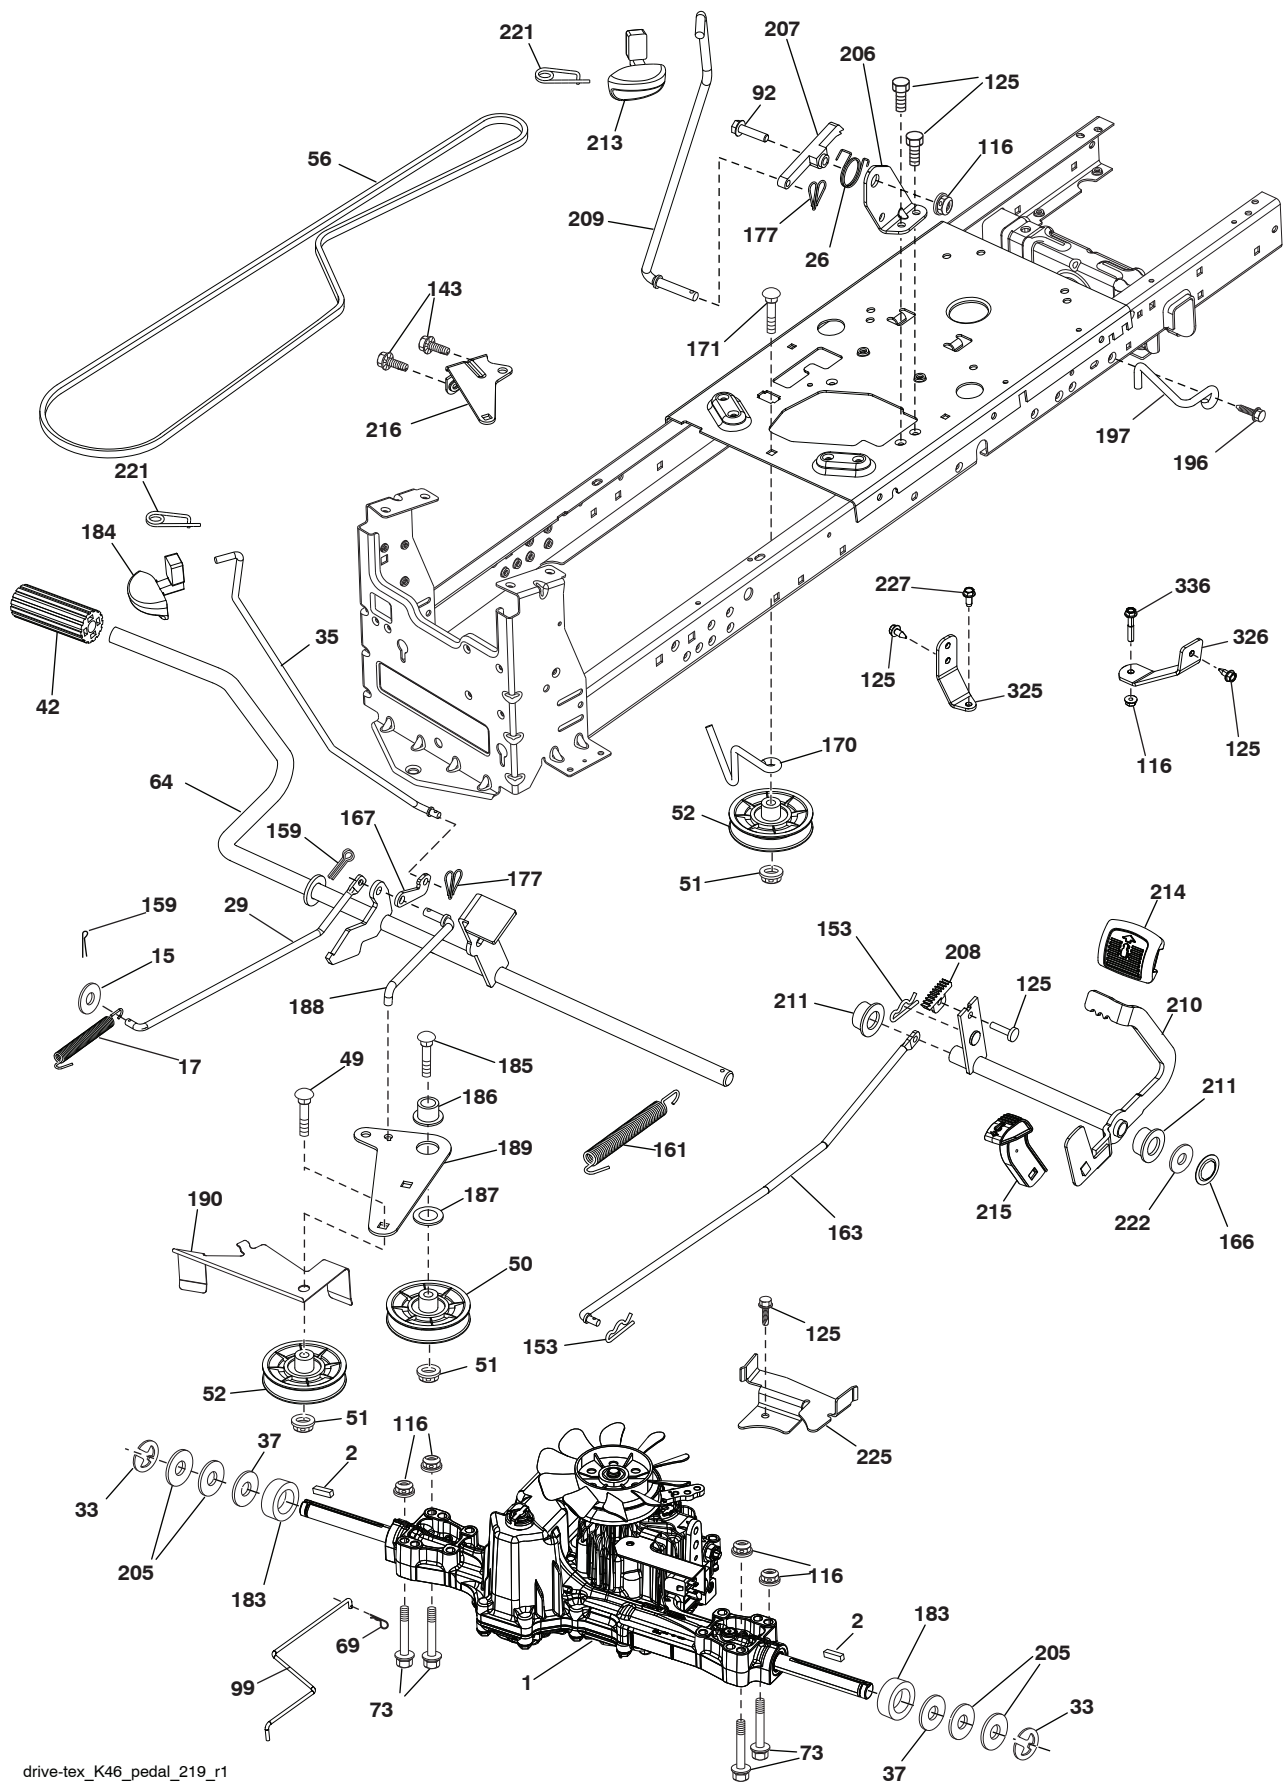

drive-tex_K46_pedal_219_r1

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Transaxle, Tufftorq K46BT (426120) (Order parts from transaxle manufacturer.)	177	587 22 53-01	Pin Cotter, Locking, Bowtie, 1in.
2	532 12 35-83	Key Square	183	532 13 70-57	Spacer Axle
15	596 56 53-01	Washer 3/8 x 0.08 in., ST, CLR, ZN	184	587 65 37-01	Handle Parking Brake
17	532 41 36-78	Spring, Brake	185	872 11 06-22	Bolt, RDHD, 3/8-16 unc x 2-3/4, Gr
26	532 19 96-79	Spring Return Cruise	186	532 19 43-21	Spacer Retainer
29	532 40 38-06	Rod, Brake	187	596 13 55-01	Washer, 13/32 x 2, Clear, Zinc
33	812 00 00-01	Ring E	188	582 21 70-01	Link Clutch Ground Drive, Long
35	583 86 45-02	Rod, Brk, Parking, GT, Husq	189	532 19 43-17	Bellcrank Ground Drive
37	532 18 89-67	Washer .793 x 1.637 x .060	190	532 19 43-18	Keeper Bellcrank Ground Drive
42	532 00 88-83	Cover, Foot Pedal	196	817 00 06-16	Screw 3/8-16 x 1 Smgl
49	596 13 62-01	Bolt, Cup Head, 3/8-16 x 3/4	197	585 65 86-02	Clutch Antirotation
50	532 19 43-27	Pulley Idler Flat	205	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
51	873 90 06-00	Lock Nut 3/8-16	206	532 44 85-96	Bracket Mount Latch Cruise
52	532 19 43-26	Idler V-Groove	207	587 03 14-02	Latch Control Cruise
56	592 85 52-01	Belt, Drive, Tex, K46	208	596 56 41-01	Gear
64	532 19 78-65	Shaft Asm. Pedal Brake Control	209	596 86 98-01	Rod, Control, Cruise, Husq, Tex
69	532 42 33-03	Hairpin Soft Zinc .059 x 1.125	210	532 40 09-80	Rocker Asm. Pedal Control
73	596 13 65-01	Bolt, Hex Head, 5/16-18 x 1-1/2	211	532 12 01-83	Bearing Nylon
92	595 30 57-01	Screw, Hexagon, 5/16-18 x 1-1/4	213	532 40 31-19	Knob Control Cruise
99	582 40 45-01	Rod Bypass LTv K46, K57	214	532 42 12-63	Pedal Forward
116	596 13 57-01	Nut, Lock, Prvl, Torq, 5/16-18 x .68	215	586 60 65-02	Pedal Reverse
125	817 00 05-12	Screw 5/16-18 x 3/4	216	532 19 61-31	Bracket Pulley Idler
143	596 03 07-01	Screw, Hexagon, 5/16-18 x 1/2	221	532 40 31-87	Retainer Spring Clip Handle
153	532 00 44-97	Retainer Spring 1"	222	879 21 20-10	Washer 21/32 x 1-1/4 10 Ga.
159	596 02 95-01	Pin, Cotter, 1/8 Dia x 3/4	225	532 40 33-19	Keeper Belt Transaxle
161	532 10 57-09	Spring, Return, Clutch	227	596 13 59-01	Bolt, Hex, 5/16-18 X 3/4, Clr, Znc
163	593 86 10-01	Rod, Control, K46/K57R	325	585 66 85-02	Torque Strap K46 LT RH
166	532 42 91-64	Nut Push	326	585 67 08-02	Bracket TRQ STP 46 20" Tire RH
167	532 40 52-57	Latch Brake Parking	336	587 25 96-02	Bolt 5/16 - 18 x 1-3/4 Flanged
170	532 19 43-22	Keeper V-Idler			
171	596 13 63-01	Bolt, Cup, Head, 3/8-16 x 2			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

1

2

15

20

21

22

28

29

37

41

42

45

90

92

96

97

102

62

69

70

71

81

85

86

111

12

18

11

9

10

14

16

17

19

23

24

25

26

27

30

31

32

33

34

35

36

38

39

40

43

44

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

63

64

65

66

67

68

72

73

74

75

76

77

78

79

80

82

83

84

87

88

89

91

93

94

95

98

99

100

101

103

104

105

106

107

108

109

110

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310

311

312

313

314

315

316

317

318

319

320

321

322

323

324

325

326

327

328

329

330

331

332

333

334

335

336

337

338

339

340

341

342

343

344

345

346

347

348

349

350

351

352

353

354

355

356

357

358

359

360

361

362

363

364

365

366

367

368

369

370

371

372

373

374

375

376

377

378

379

380

381

382

383

384

385

386

387

388

389

390

391

392

393

394

395

396

397

398

399

400

401

402

403

404

405

406

407

408

409

410

411

412

413

414

415

416

417

418

419

420

421

422

423

424

425

426

427

428

429

430

431

432

433

434

435

436

437

438

439

440

441

442

443

444

445

446

447

448

449

450

451

452

453

454

455

456

457

458

459

460

461

462

463

464

465</

10

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	— — — — —	Engine Kawa Model No. FR600V-AS11 (581477001) (Order parts from engine manufacturer.)
2	589 81 87-01	Muffler
9	501 83 26-02	Keeper Belt Engine
11	587 24 15-01	Clutch Ogura
12	532 40 50-97	Pulley Engine
15	597 95 45-01	Tank Fuel
18	587 38 29-01	Fuel Cap
20	532 41 21-65	Control Throttle
21	596 32 17-01	Screw, #10 x 0.750, Bos, Thread
22	532 18 95-41	Choke Control
28	532 40 11-37	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
41	532 12 61-97	Washer
42	596 23 89-01	Washer, 7/16 In, Clr, Zn
45	596 13 36-01	Locknut, Keps, 1/4-20
62	532 43 40-17	Shield Heat Muffler
69	532 17 81-51	Gasket
70	583 95 57-01	Tube Exhaust RH
71	583 95 56-01	Tube Exhaust LH
81	532 14 84-56	Tube Drain Oil
85	581 33 28-04	Bolt, Clutch, 7/16-20 x 3.5, Grade 5
86	532 18 43-62	Nut Hex Flange Toplock M8-1.25
90	817 00 06-16	Screw 3/8-16 x 1
92	817 12 06-16	Screw 3/8-16 x 1
96	596 13 53-01	Washer, Plain, 9/32 x 7/8, Clr, Zn
97	817 67 04-12	Screw 1/4-20 x 3/4
102	817 00 05-12	Screw 5/16-18 x 3/4
111	596 94 15-01	Tube, Purge, Fuel, 1875"


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

For engine service and replacement parts, call the toll free number for your engine manufacturer listed below:

Kawasaki 1-949-460-5688

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48

STEERING ASSEMBLY

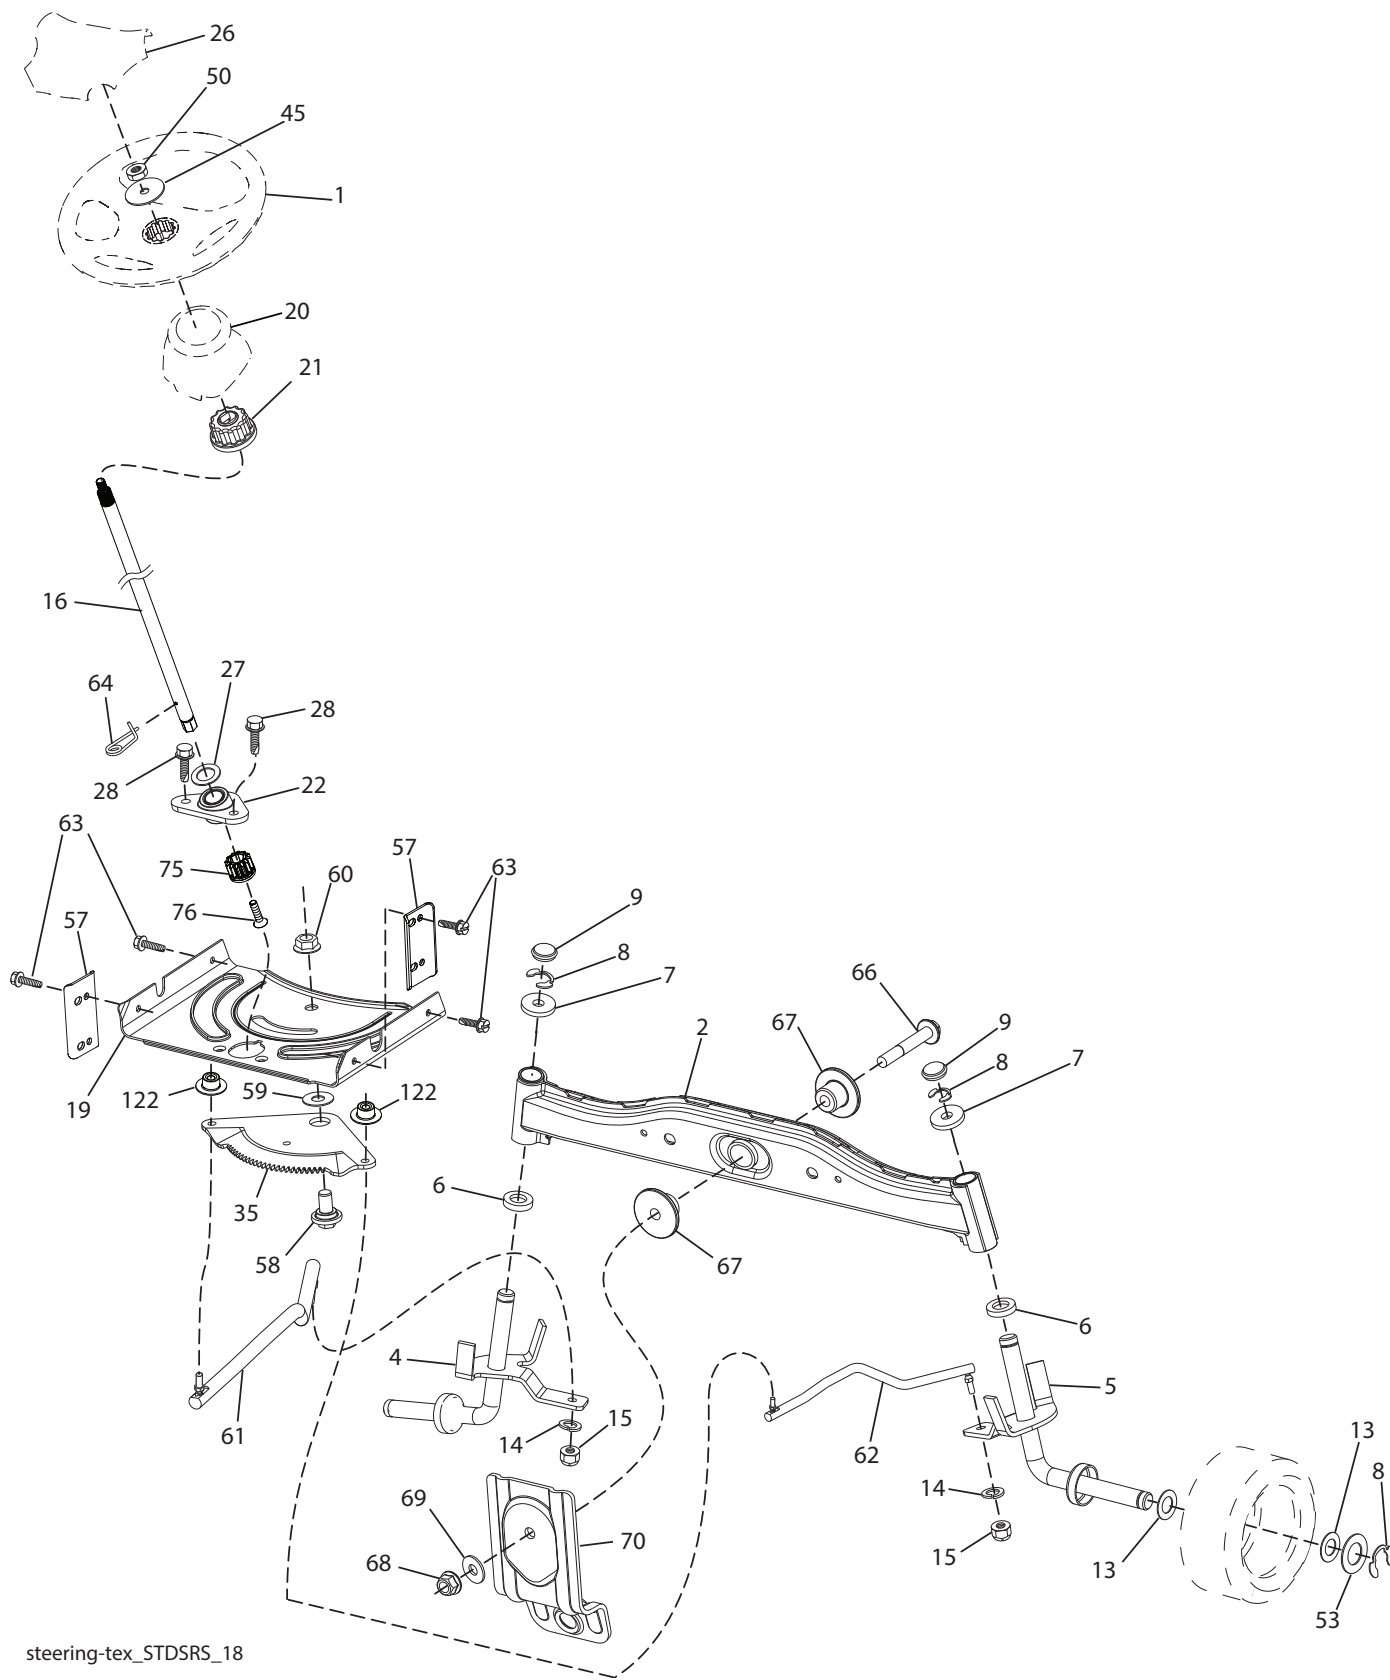

steering-tex_STDSRS_18

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48
STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532 42 41-46	Wheel, Steering
2	532 19 59-68	Axle Cast Iron
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 00 62-66	Washer, Thrust
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Klip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	596 23 87-01	Washer, Spring, Lock., 8ID x .680
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	587 01 60-02	Steering Shaft
19	532 19 47-29	Plate Steering
20	532 42 47-40	Boot Steering
21	586 84 02-01	Adapter Wheel Steering
22	585 02 98-02	Bearing
26	532 42 46-91	Insert, Wheel Steering
27	596 93 34-01	Washer, Plain
28	817 00 06-12	Screw 3/8-16 x 3/4
35	532 19 47-32	Gear, Sector Plate
45	587 01 64-01	Washer 3/8 ID 2-3/8 OD 12 Ga. PLTD
50	873 90 06-00	Nut Lock Flg 3/8-16 unc
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	597 07 02-02	Draglink, LH
62	597 07 03-02	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd 7/16-14 x 3 Serr
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	585 33 88-01	Bracket Deck Susp. Front
75	580 68 37-01	Pinion
76	580 68 36-01	Screw Head Sock
122	532 44 49-62	Cap Gear

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48
MOWER DECK**




TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48 MOWER DECK

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 598 60 28-01	Kit, SVC Deck	59 532 14 10-43	Guard, Tuv Idler (94)
6 532 19 51-86	Arm Suspension	62 596 13 63-01	Bolt, Cup, Head, 3/8-16 x 2
11 532 13 89-71	Blade, Mower, 42" Hi Lift Premium	68 532 14 49-59	V-Belt, Secndry, 42/46, Kevlr, Blk
12 584 30 93-01	Screw 7/16-20 x 1 Hex	69 596 13 64-01	Bolt, Cup, Head, 5/16-18 x 5/8
14 587 81 97-01	Kit, Mandrel, Non Greaseable, Tall (includes mandrel and bolts)	116 596 43 44-04	Bolt, Shoulder, 3/8-16 x 3-5/8"
19 532 19 65-39	Bolt, Shoulder	117 589 52 73-01	Wheel, Gauge
20 532 15 97-70	Baffle, Vortex, 42, Std/Heavy Dty	119 596 13 49-01	Washer, Plain, 3/8 x 7/8
21 596 04 05-01	Nut, Lock, Hex, Prvl, 5/16-18	145 532 19 31-97	Pulley Idler
23 532 19 25-57	Bracket, Deflector	145 532 19 72-51	Spring Return
24 532 10 53-04	Cap, Sleeve	188 532 19 51-61	Stud Fastener
25 532 19 70-26	Spring, Torsion, Deflector	189 596 13 57-01	Nut, Lock, Prvl, Torq, 5/16-18 x .68
26 532 11 04-52	Nut, Push	190 532 19 72-51	Spring, Mower, Drive, Electric
27 532 40 30-04	Shield, Deflector, Mower 42" Blk	241 532 15 29-27	Screw
29 595 29 70-01	Rod, Hinge	242 532 41 55-98	Washout Port
32 532 15 35-35	Mandrel, Pulleys, 42, 44, 50	254 585 31 68-05	Plate, Reinforc, Frt, 42"
33 596 13 48-01	Nut, Hex, 9/16-18 x 1.010	255 585 31 70-05	Plate, Reinforc, 42"
34 596 13 61-01	Bolt, Cup, Head, 3/8-16 x 1-1/2"	256 592 80 78-01	Bolt 1/4-20 x 1 ZN SQN
36 532 19 73-79	Pulley, Idler, Flat	257 873 90 04-00	Nut Hex Flange 1/4-20 unc
40 873 90 06-00	Nut, Lock Flg. 3/8-16 unc	-- 532 41 64-05	Quick Connect Coupling
41 584 95 39-01	Bolt Hex Wshrd 313-18 x 1.19	-- 598 64 50-01	Deck, SVC, 42B
55 532 43 71-10	Idler, Arm, 42"		
56 532 19 90-92	Spacer, Retainer		
57 817 00 06-16	Screw Hexwsh Thd 3/8-16 x 1		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48
MOWER LIFT

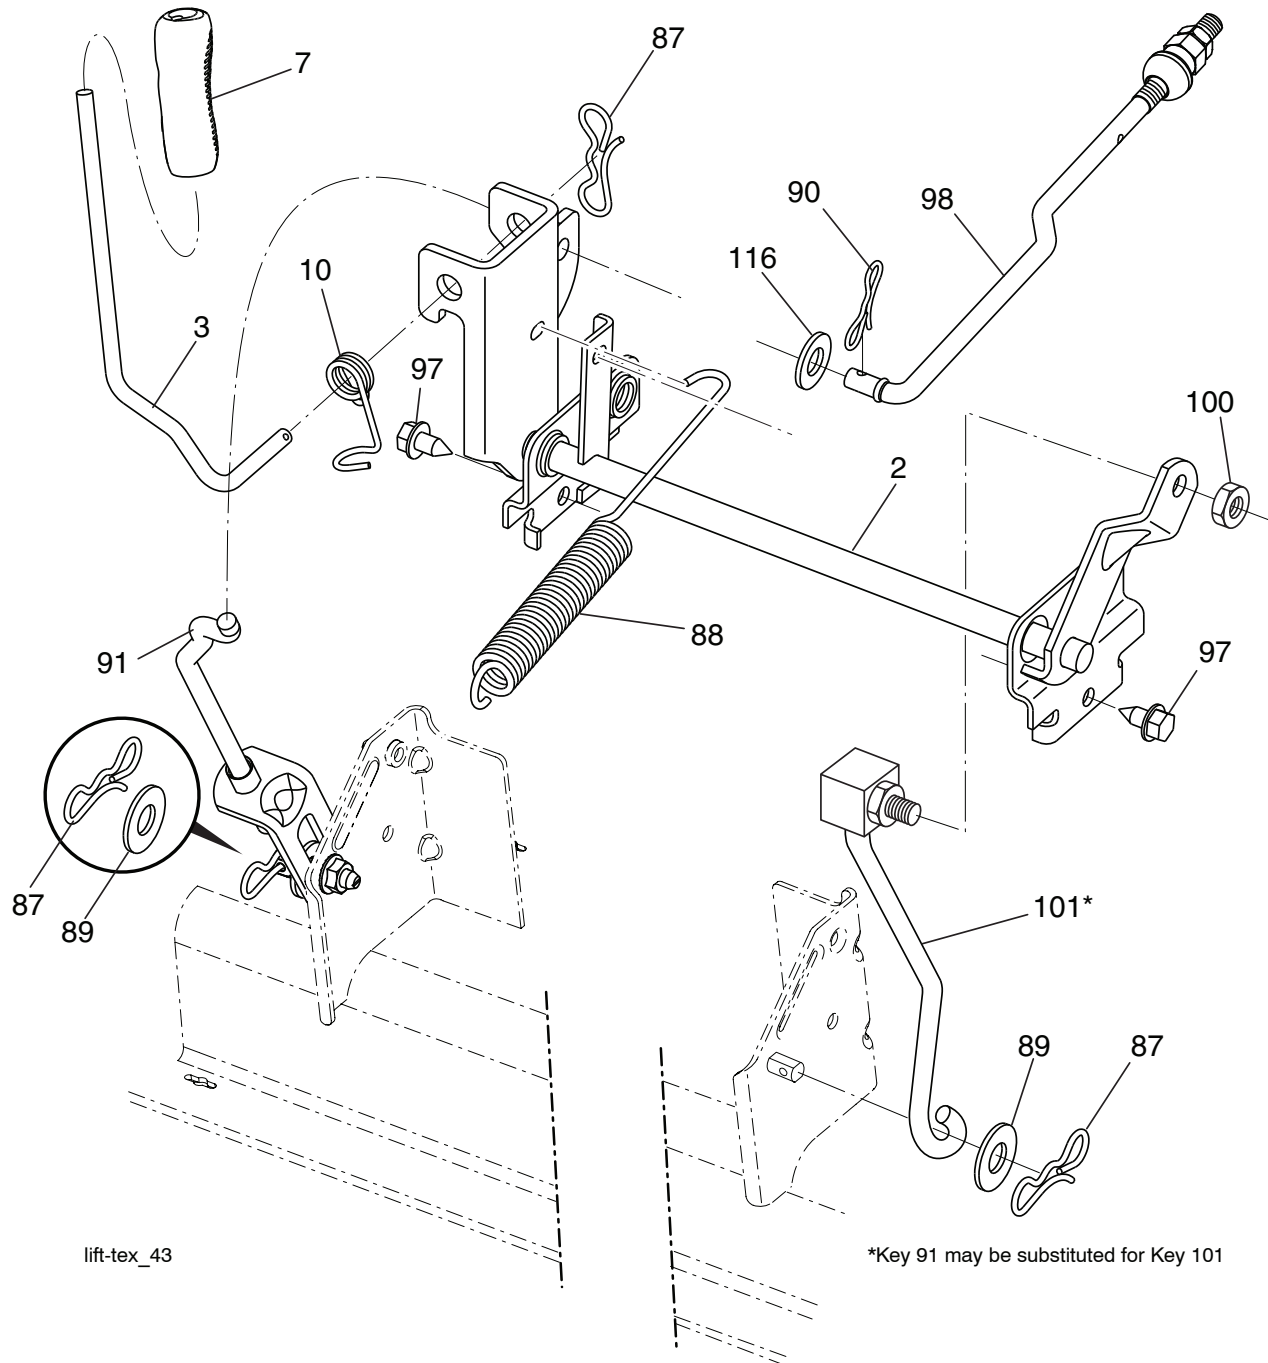


KEY NO.	PART NO.	DESCRIPTION
2	532 42 20-27	Shaft Asm., Lift
3	594 01 80-01	Lever, Lift, Handle
7	580 96 23-01	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 41 07-10	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	589 46 48-03	Link Asm., Lift, Rear 10.540

KEY NO.	PART NO.	DESCRIPTION
97	817 00 06-12	Screw 3/8-16 x .75 Smgml Tap/R.Z
98	581 50 69-03	Link Assy, Front, Mwr, Susp
100	595 30 59-01	Nut, Hex, Locknut, 3/8-16
101	532 40 70-03	Link Asm Lift Fixed
116	819 15 15-16	Washer 15/32 x 15/16 x 16 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48

SEAT ASSEMBLY

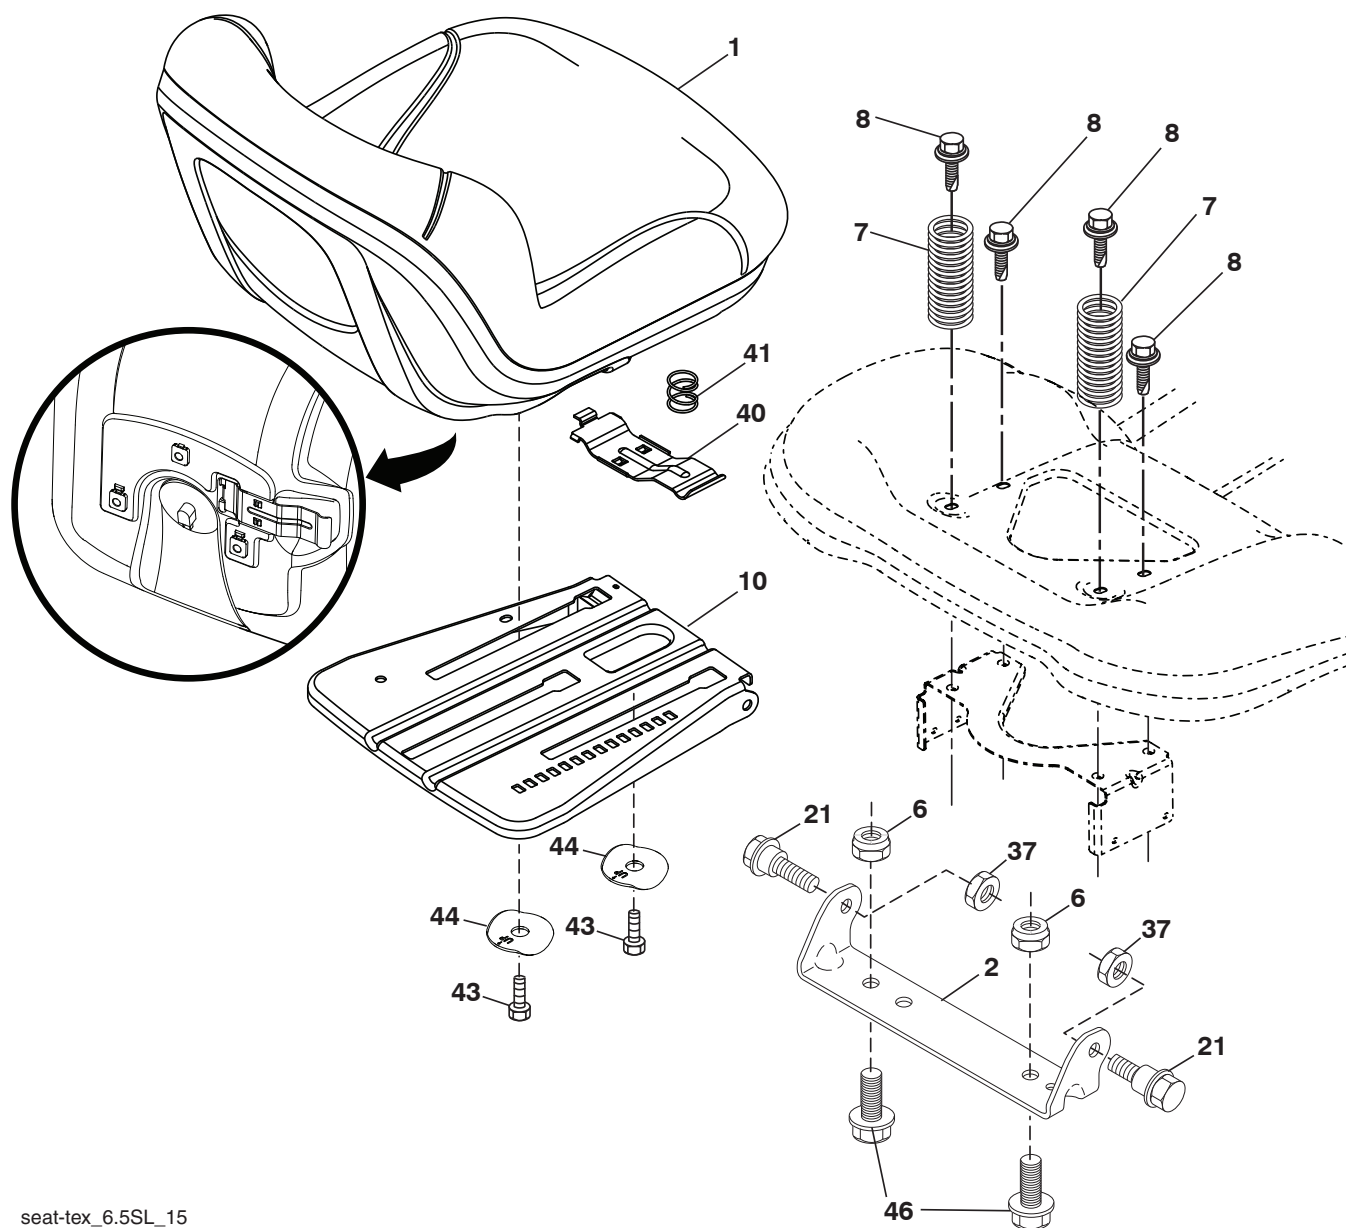


seat-tex_6.5SL_15

KEY NO.	PART NO.	DESCRIPTION
1	532 40 66-25	Seat
2	532 18 01-66	Bracket Pivot Fender
6	873 80 06-00	Nut, Lock W/Ins. 3/8-16 unc
7	589 48 35-01	Spring, Seat Cprsn
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	596 65 74-02	Pan, Seat
21	587 90 78-01	Bolt, Shoulder 5/16-18 x 5/8
37	596 58 37-02	Nut w/Nonmetal, Ins, Blk, Zinc

KEY NO.	PART NO.	DESCRIPTION
40	595 08 81-02	Handle Slide Seat
41	532 19 82-00	Spring Latch Seat
43	874 76 06-12	Bolt 3/8-16 x 3/4
44	501 05 18-01	Washer Winged
46	588 09 04-01	Bolt 3/8-16 x 1, 1 25 OD


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - MODEL NO. YT1842 (96041044801), PRODUCT NO. 960 41 04-48
DECALS

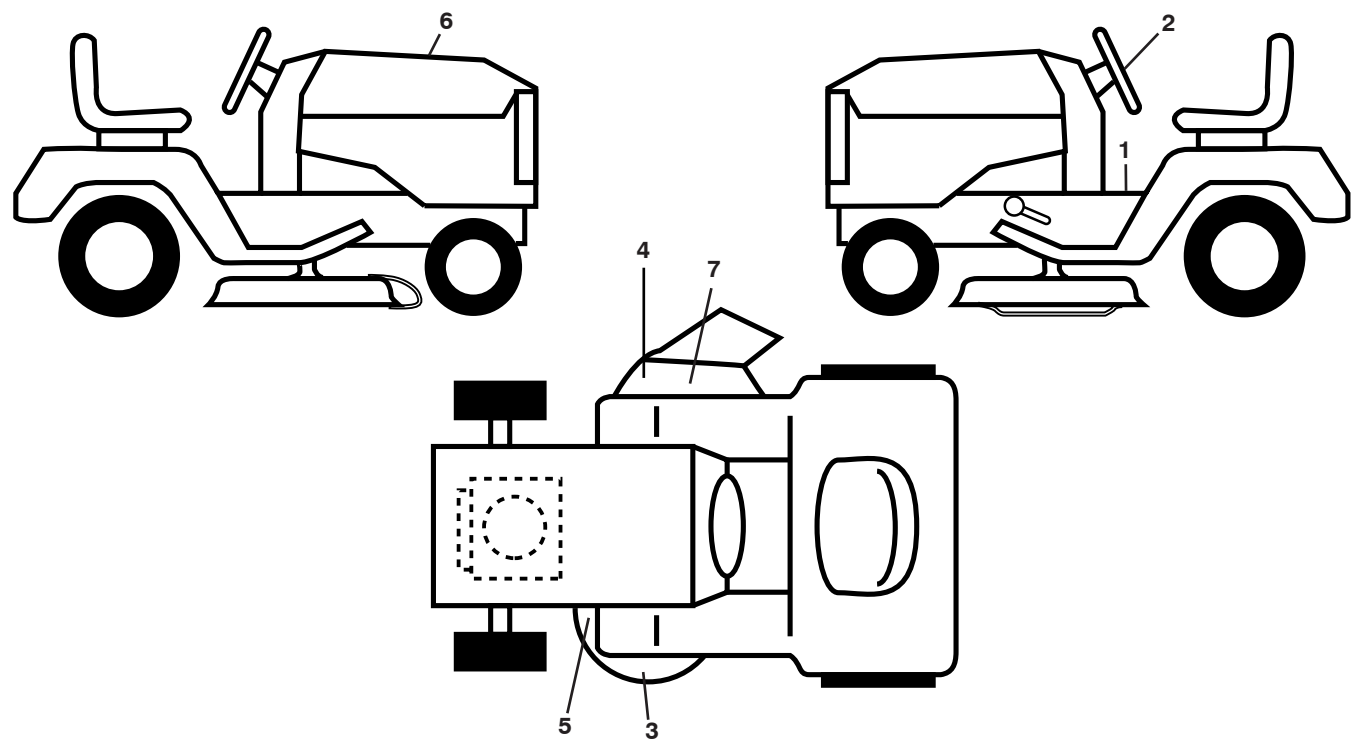

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	586 04 73-02	Decal, Fender Warning	--	532 40 95-05	Pad, Footrest, LH
2	590 99 47-01	Decal, Steering Whl.	--	532 40 95-07	Pad, Footrest, RH
3	587 56 08-01	Decal, Deck Steel	--	114 19 61-49	Manual Operator's (English/Spanish)
4	581 57 92-01	Decal, Dflctr, Warn	--	114 19 60-32	Manual Operator's (French)
5	581 58 00-01	Decal, Mower V-Belt Schematic	--	114 19 59-28	Manual Repair Parts (English)
6	590 41 20-01	Decal, Replacement			
7	584 90 46-01	Decal, Deflect. Warning			
--	581 72 48-01	Decal, Bypass			

WHEELS AND TIRES

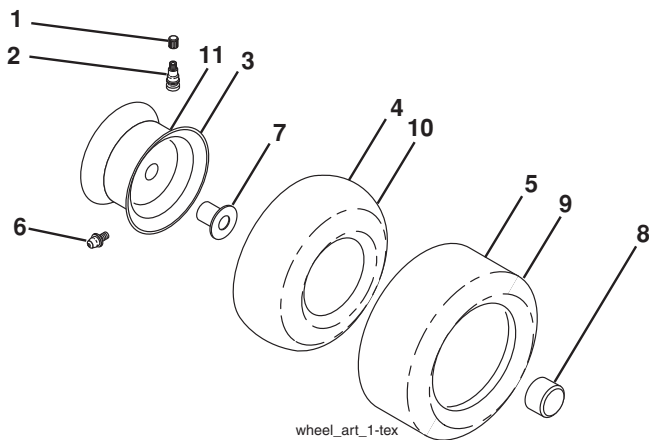

KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 42 47-53	Rim Front
4	532 05 99-04	Tube Front (Service Item Only)
5	532 10 62-22	Tire Front 15 x 6-6
6	532 00 02-78	Fitting Grease (Front Wheel Only)
7	532 00 90-40	Bearing Flange (Front Wheel Only)
8	532 17 50-39	Cap Axle Blk 1 50 x 1 00
9	532 13 84-68	Tire Rear 20 x 8-8
10	532 00 71-52	Tube Rear (Service Item Only)
11	532 42 47-54	Rim Asm 8" Rear
--	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

SERVICE NOTES

