


SEARS
REPAIR
PARTS
MANUAL

**MODEL NO.
944.604350**

**IMPORTANT:
Read and follow
all Safety Rules
and Instructions
Before Operating
This Equipment**

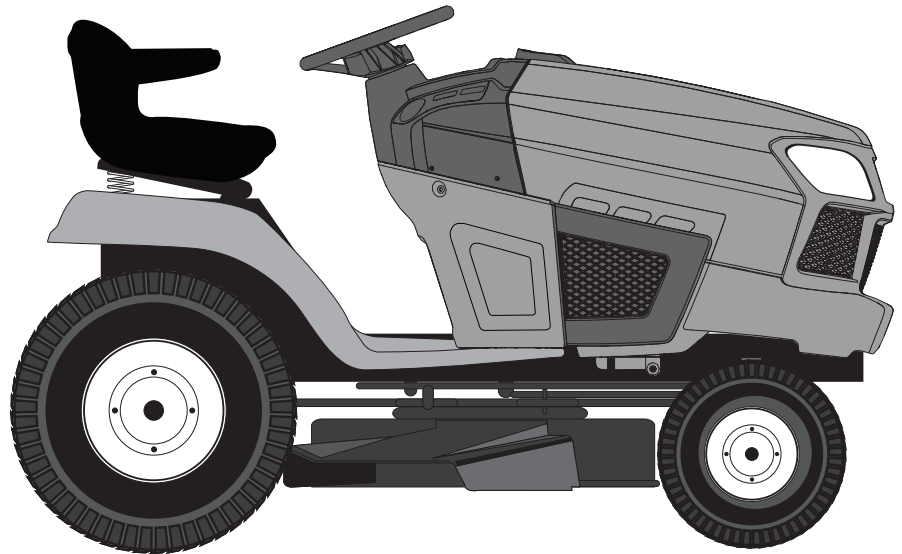

CRAFTSMAN®

**23.0 HP*
ELECTRIC START
54" MOWER
AUTOMATIC TRANSMISSION
LAWN TRACTOR**

* The power rating as declared by the engine manufacturer is the average gross power output at the specified RPM of a typical production engine for the engine model measured using SAE Standards for engine gross power. Please refer to the engine manufacturer for details.

Sears Canada, Inc., Toronto, Ontario M5B 2B8

587756024 Rev. 14

10.06.17 JSE
Printed in the U.S.A.

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product - “Tractor”
- MODEL NUMBER - “944.604350”
- Part Number
- Part Description

TABLE OF CONTENTS

SCHEMATIC 3

ELECTRICAL..... 4-5

CHASSIS 6-7

DRIVE..... 8-9

ENGINE..... 10-11

STEERING 12-13

MOWER DECK 14-15

MOWER LIFT..... 16

SEAT 17

DECALS..... 18

ENGINE BREAKDOWN..... 19-23

TRANSAXLE BREAKDOWN 24-25


WARRANTY..... 26

SEARS SERVICE 28

TRACTOR - - MODEL NUMBER 944.604350

SCHEMATIC

SCH12

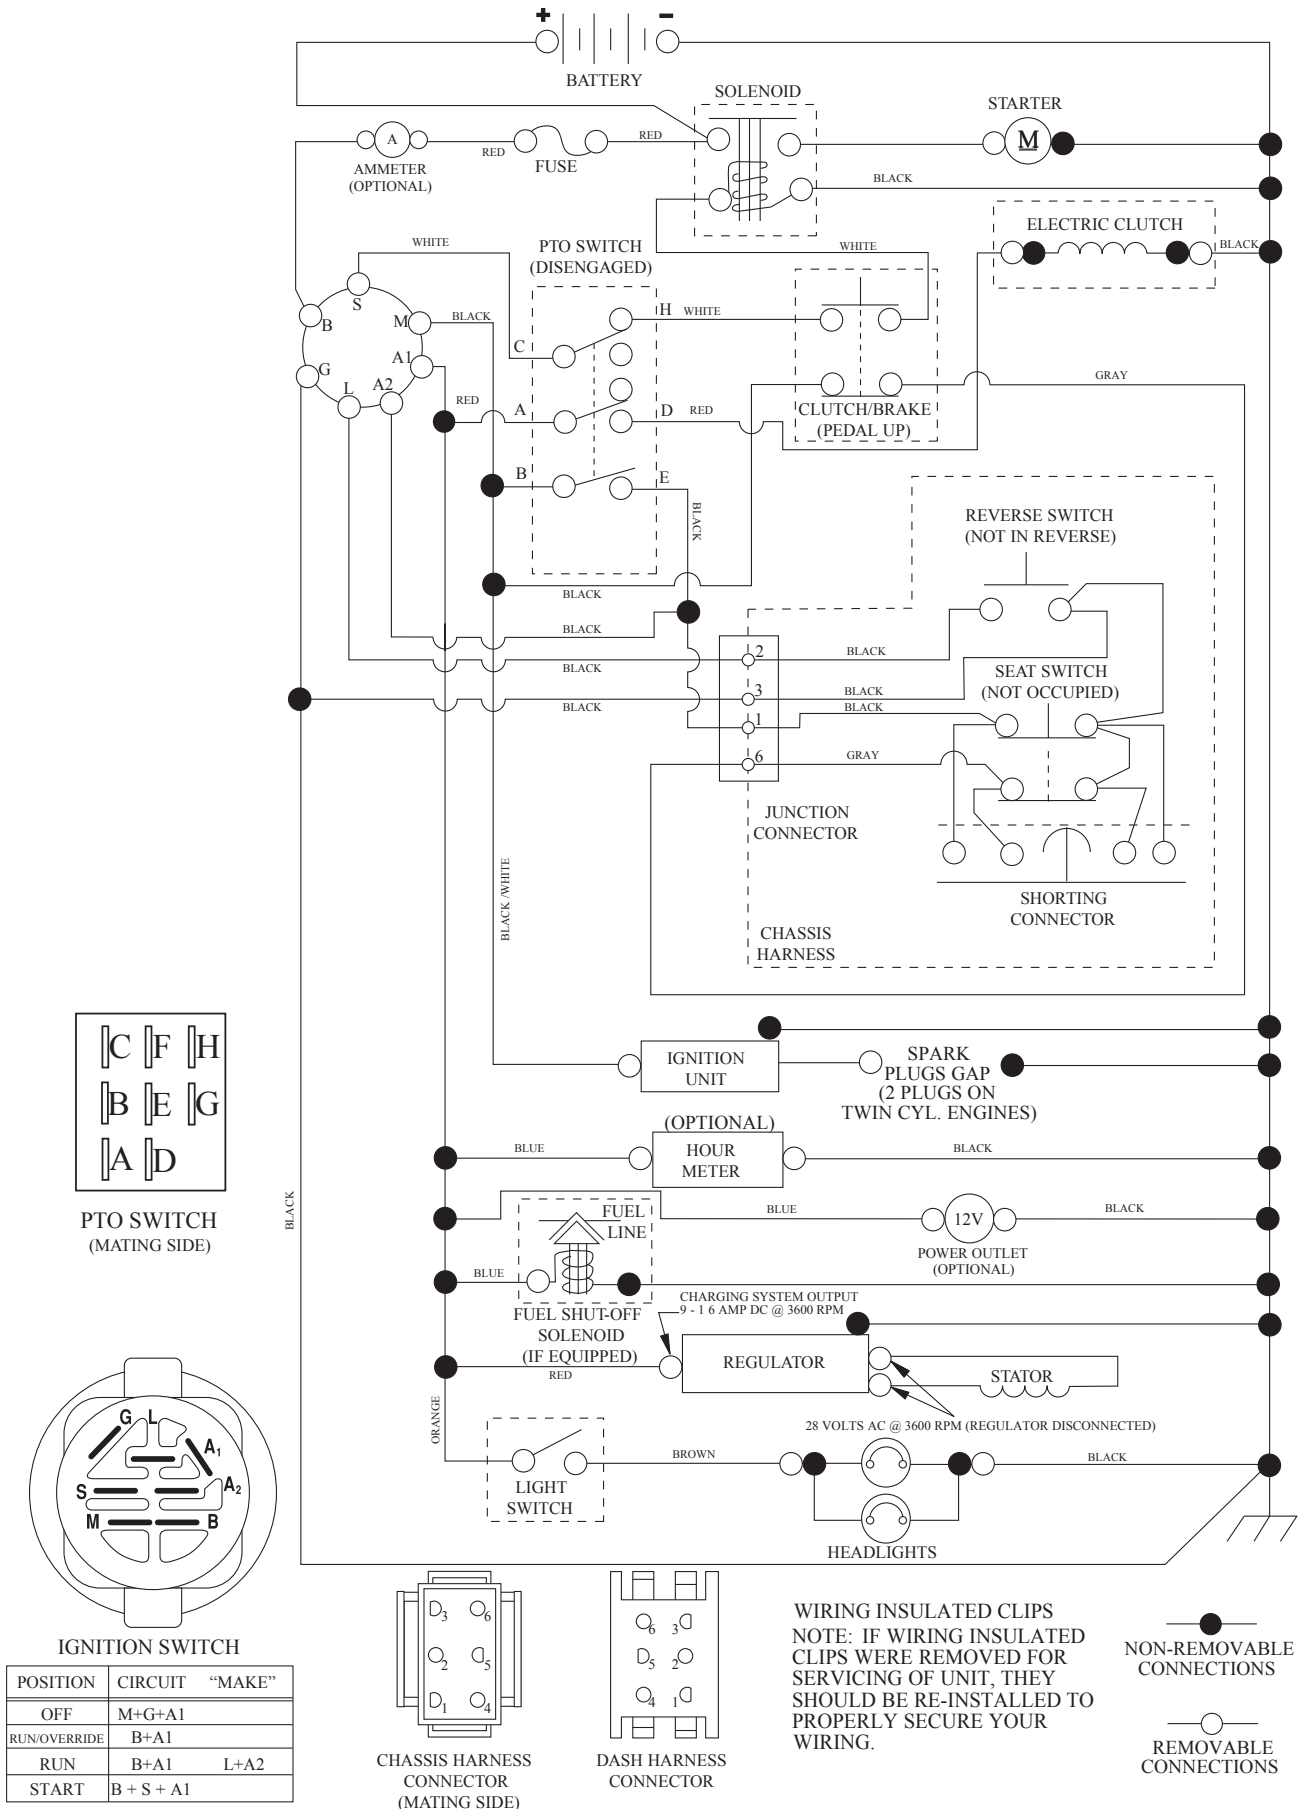

ELECTRICAL

This diagram illustrates the electrical system for a vehicle, showing the battery, alternator, and various components. The components are numbered as follows:

- Battery:** 1
- Alternator:** 2
- 12V Outlet (If Equipped):** 103
- Service Minder (If Equipped):** 46
- Charge Indicator (If Equipped):** 143
- Other components:** 2, 8, 9, 16, 21, 22, 24, 25, 26, 27, 28, 29, 30, 33, 34, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200.

The diagram shows the following connections:

- The battery (1) is connected to the alternator (2) and the 12V outlet (103).
- The alternator (2) is connected to the battery (1) and the 12V outlet (103).
- The 12V outlet (103) is connected to the battery (1) and the alternator (2).
- The service minder (46) is connected to the battery (1) and the alternator (2).
- The charge indicator (143) is connected to the battery (1) and the alternator (2).
- The alternator (2) is connected to the battery (1) and the 12V outlet (103).
- The 12V outlet (103) is connected to the battery (1) and the alternator (2).
- The service minder (46) is connected to the battery (1) and the alternator (2).
- The charge indicator (143) is connected to the battery (1) and the alternator (2).

TRACTOR - - MODEL NUMBER 944.604350


ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	163465	Battery
2	74760412	Bolt Hex Hd. 1/4-20 unc x 3/4
8	587205101	Box Battery
16	176138	Switch Interlock Push-In
21	400252	Harness Socket Light w/4152J
22	4152J	Bulb Light
24	585555601	Cable Battery
25	585555501	Cable Starter
26	175158	Fuse
27	73510400	Nut Keps Hex 1/4-20 unc
28	416588	Cable, Ground
29	401545	Switch, Seat
30	193350	Switch, Ign.
33	411934	Key/Chain
34	110712X	Switch Light/Reset
40	401104	Harness Ign. Dash/Lift
41	17720408	Screw Thd. Cut 1/4-20 x 1/2
42	131563	Cover, Terminal
43	192507	Solenoid
50	582107602	Switch PTO
55	17060512	Screw Thdrol. 5/16-18 x 3/4 TYTT
71	194276	Harness Ign. Chassis/Lift
79	175242	Socket Asm. Bulb Twistlock
90	435395	Cover Terminal Battery
99	17670412	Screw Hexwsh. Thdrol. 1/4-20 x 3/4
100	19091416	Washer 9/32 x 7/8 x 16 Ga.
102	404454	Harness Pigtail Tex ROS Tufftorq
105	407568	Switch Reverse TT Pedal Control

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350

CHASSIS

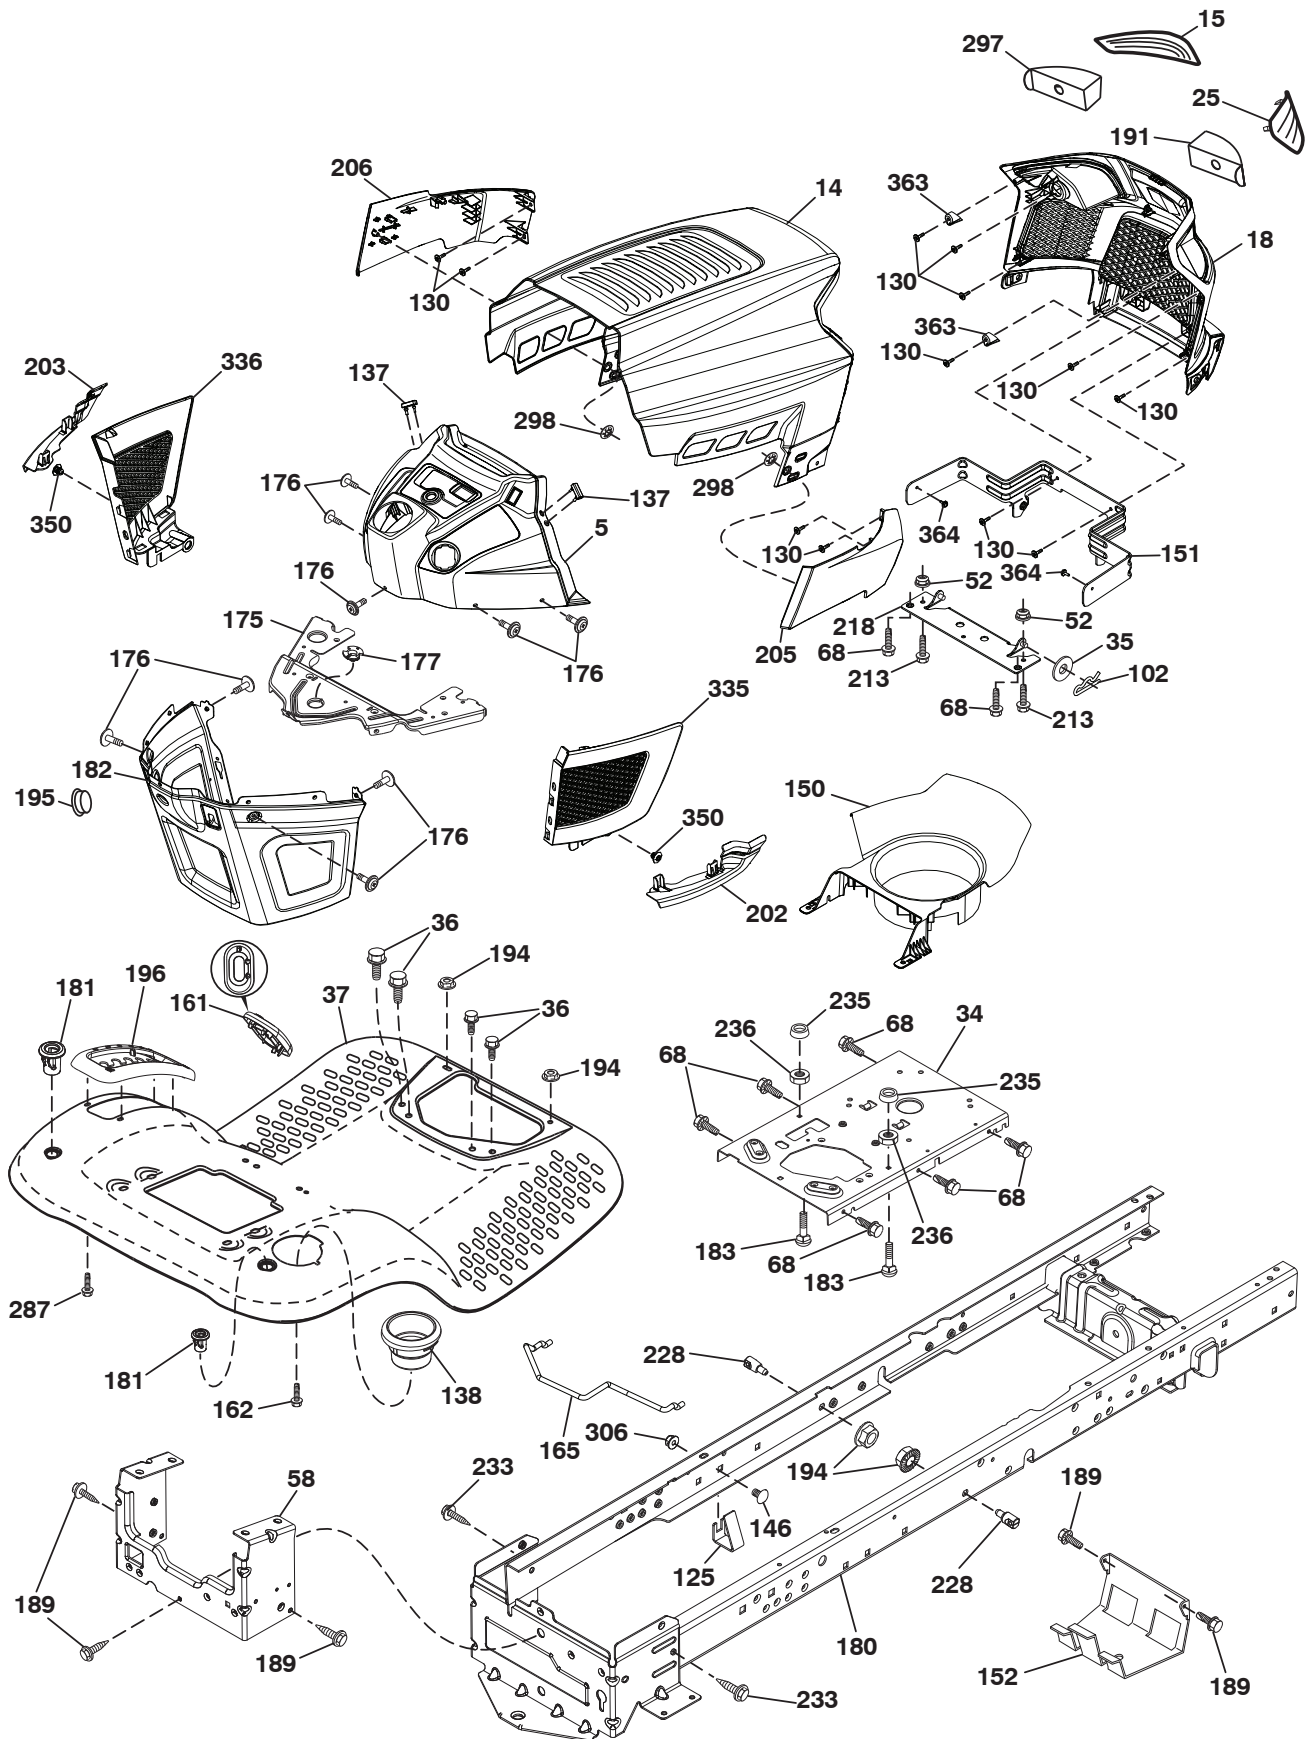

TRACTOR - - MODEL NUMBER 944.604350

CHASSIS

KEY NO.	PART NO.	DESCRIPTION
5	580485806	Dash
14	580354407	Hood
15	580485601	Lens LH
18	580485302	Grille
25	580484501	Lens RH
34	580910801	Plate engine
35	19111116	Washer 11/32 x 11/16 x 16 Ga.
36	17060512	Screw 5/16-18 x 3/4
37	414878X428	Fender
52	73680500	Nut Crown lock 5/16-18
58	412280	Drawbar
68	17490508	Screw Thdrol 5/16-18 x 1/2
102	4497H	Retainer Spring 1"
125	581684801	Clip Fuel Line
130	416358	Screw # 10 x .750 BOS Thread
137	407590	Bumper Dash
138	193224X428	Cupholder
146	581 85 79-01	Bolt
150	588238002	Duct Heat Hood
151	580663302	Bracket Pivot
152	199535	Shield Browning/Debris
159	17000612	Screw Hexwsh Thdrl 3/8-16 x 3/4
161	193229X428	Window Fuel
162	142432	Screw Hex Wsh Hi-Lo 1/4 x 1/2
165	196826	Support Tank Rear
175	196304	Crossmember
176	400776	Screw 10-24 x 5/8 Wshd Qdrx
177	195228	Bushing Steering
180	415063	Chassis
181	193102X428	Bushing Mtg. Fender Crgo.
182	406859	Dash Lower
183	74520520	Bolt 5/16-18 x 1-1/4
189	17000512	Screw 5/16-18 x 3/4
191	580485101	Mylar Headlight RH
194	73900500	Nut Lock Hex Flange 5/16-18
195	401556X428	Plug Hole Dash 12V Adapter
196	431658	Console Asm. Deck Lift
202	580485002	C-Closeout Lwr Trm RH
203	580484802	C-Closeout Lwr Trm LH
205	580843707	Assembly Corner RH
206	580843807	Assembly Corner LH
213	74760512	Bolt hex HD 5/16-18 unc x 3/4
218	580897301	Pivot Hood Assy
228	195161	Stud Fastener
233	196359	Bolt Shoulder
235	406129	Spacer Fender
236	73930500	Nut Center Lock 5/16-18
287	17600406	Screw Hex Washead 1/4-20 x 3/8
297	580484901	Mylar Headlights LH
298	580851001	Nut Push
306	73900600	Nut Lock
335	580484602	C-Side Closeout RH
336	580484402	C-Side Closeout LH
350	445143	Clip X-Mass Tree
363	580724501	Cap Talon Grille
364	17060408	Screw

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

DRIVE



TRACTOR - - MODEL NUMBER 944.604350


DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	— — — —	Transaxle, TUFFTORQ K57R (437814) (See Transaxle Breakdown.)	185	72110622	Bolt 3/8-16 x 2-3/4 Gr. 5
2	123583X	Key	186	194321	Spacer Retainer
15	19131316	Washer 13/32 x 13/16 x 16 Ga.	187	19133210	Washer
17	413678	Spring, Brake	188	582217001	Link Clutch Ground Drive, Long
26	199679	Spring Return Cruise	189	194317	Bellcrank Ground Drive
29	403806	Rod, Brake	190	194318	Keeper Bellcrank Ground Drive
33	12000001	Ring E	196	17000616	Screw 3/8-16 x 1
35	583864501	Rod, Brake, Park	197	585658601	Bracket Clutch Anti-Rotation
42	8883R	Cover, Foot Pedal	205	121748X	Washer
49	72110614	Bolt	206	448596	Bracket Mount Latch Cruise
50	194327	Pulley Idler Flat	207	197868	Latch Control Cruise
51	73900600	Lock Nut 3/8-16	208	197869	Gear Sector Control Cruise
52	194326	Idler V-Groove	209	199592	Rod Control Cruise
56	130969	V-Belt, Drive	210	400980	Rocker Asm. Pedal Control
64	197865	Shaft Asm. Pedal Brake Control	211	120183X	Bearing Nylon
73	74490540	Bolt 5/16-18 x 4.5 Gr. 5	213	196441X428	Knob Control Cruise
92	74760520	Bolt Fin Hex 5/16-18 unc x 1.25	214	421263	Pedal Forward
99	415742	Rod Spring Bypass	215	197301X428	Pedal Reverse
116	73900500	Nut Lock Hex Flange 5/16-18	216	196131	Bracket Pulley Idler
125	17000512	Screw 5/16-18 x 3/4	221	403187	Retainer Spring Clip Handle
143	17490508	Screw 5/16-18 x 1/2	222	79212010	Washer 21/32 x 1-1/4 x 10 Ga.
153	4497H	Retainer Spring	225	403319	Keeper Belt Trans.
159	76020412	Pin Cotter 1/8 x 3/4	227	17490512	Screw Thdrol 5/16-18 x 3/4
160	169484	Retainer Clip	230	188967	Washer
161	105709X	Spring, Return, Clutch	231	407287	Idler V-Groove Pulley
163	448275	Rod Pedal Control	325	585668502	Bracket
166	429164	Nut Push .625	326	585670802	Bracket
167	405257	Latch Brake Parking	334	585882202	Bracket
170	413430	Keeper Belt Centerspan	336	587259601	Bolt
183	137057	Spacer Split			
184	196439X428	Handle Parking Brake			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350

ENGINE

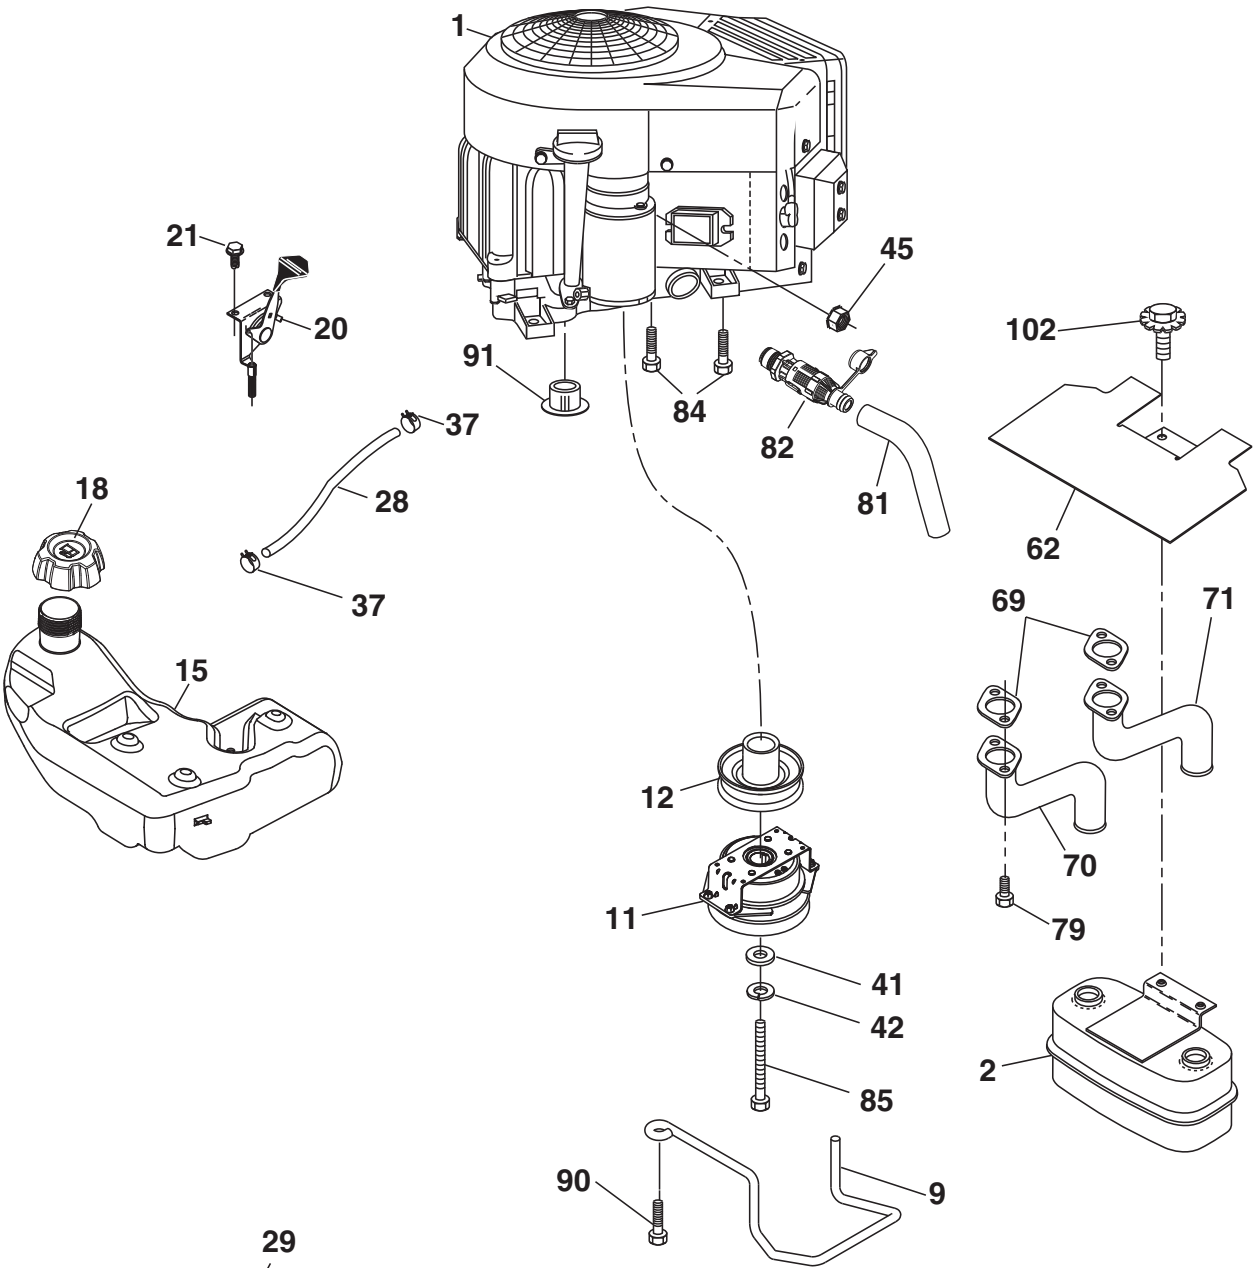

SPARK ARRESTER KIT

engine-tex_bs-2cyl_118_r1

TRACTOR - - MODEL NUMBER 944.604350

ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	— — — —	Engine B&S Model No. 44S777-0013-G1 (586640401) (See engine breakdown.)
2	149723	Muffler
9	584908001	Keeper Belt Engine
11	587241601	Clutch Electric
12	405097	Pulley Engine
15	532438025	Tank Fuel
18	430214	Cap Asm. Fuel
20	421473X428	Control Throttle
21	416358	Screw #10 x 0.750 BOS Thread
28	8543R	Fuel Line
29	137180	Spark Arrester Kit
37	123487X	Clamp Hose
41	126197X	Washer 1-1/2 OD x 15/32 TD x.250
42	10040700	Washer Lock 7/16
45	73510400	Nut Keps Hex 1/4-20
62	434017	Shield Heat Muffler
69	165391	Gasket Muffler
70	581881101	Pipe Exhaust LH
71	581881001	Pipe Exhaust RH
79	183906	Screw Socket Head 5/16-18 x 1
81	148456	Tube Drain
82	428287	Valve Oil Drain
84	17060620	Screw 3/8-16 x 1-1/4
85	179953	Bolt Hex 7/16-20 x 3.75 Gr
90	17000616	Screw 3/8-16 x 1.0
91	187495	Bushing 1.375 OD
102	17000512	Screw 5/16-18 x 3/4


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

TRACTOR - - MODEL NUMBER 944.604350

STEERING ASSEMBLY

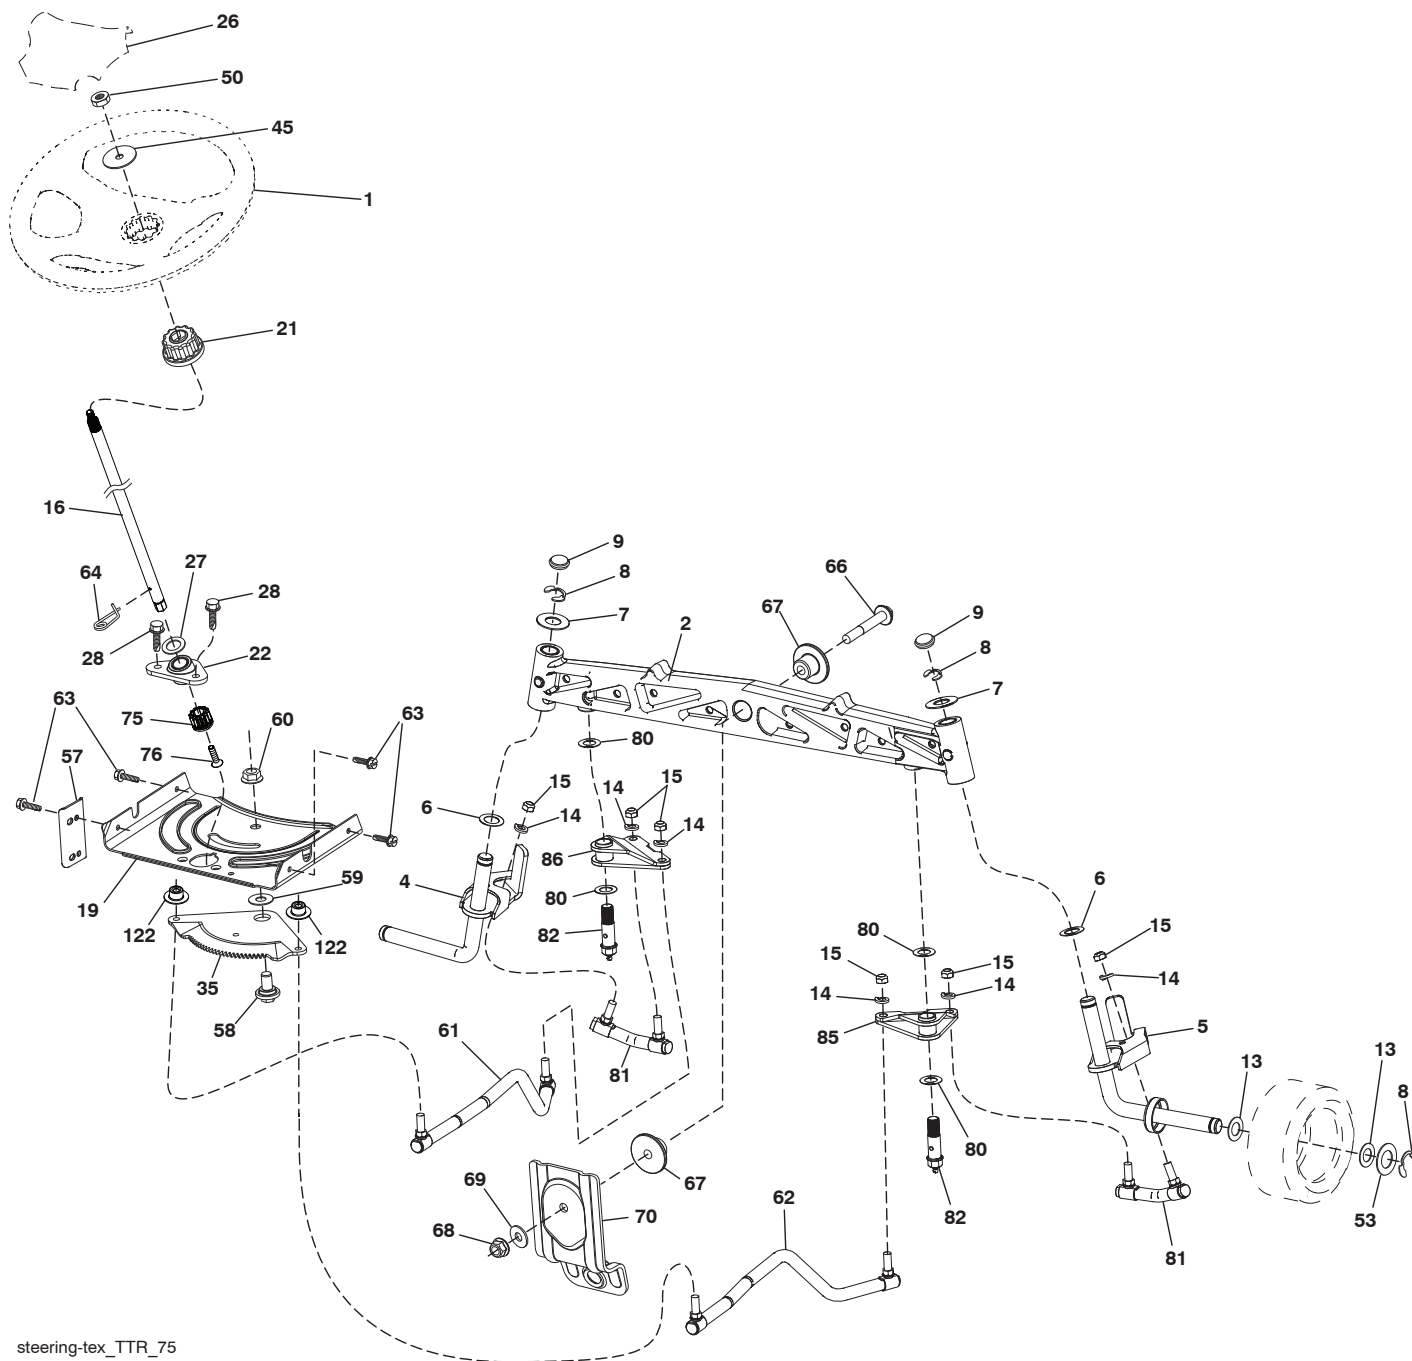

steering-tex_TTR_75

TRACTOR - - MODEL NUMBER 944.604350


STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	414851X428	Wheel, Steering
2	436870	Axle Asm., Front
4	436873	Spindle Asm., LH
5	436874	Spindle Asm., RH
6	6266H	Bearing, Race Thrust Harden
7	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
8	12000029	Ring, Clip #T5304-75
9	184946X667	Cap, Spindle
13	121749X	Washer 25/32 x 1-1/4 x 16 Ga.
14	10040600	Washer, Lock Hvy Hlcl Spr 3/8
15	73540600	Nut, Crown Lock 3/8-24 unf
16	587016002	Shaft Steering
19	194729	Plate Steering
21	586840201	Adapter, Wheel Steering Splnd Alum
22	585029901	Bearing Subasm Shaft Steer Low
26	414852X428	Insert, Wheel Steering
27	19211616	Washer 21/32 x 1 x 16 Ga.
28	17000612	Screw 3/8-16 x 3/4
35	440770	Gear, Sector Plate
45	587016401	Washer 3/8 ID 2-3/8OD 12 Ga. PLTD
50	73900600	Nut Lock Flg. 3/8-16 unc
53	188967	Washer Hardened .793 x 1.637 x .060
57	197246	Bracket Upstop
58	194747	Bolt Shoulder Sector Pivot CFM
59	194748	Washer Thrust Sector Steering
60	73971000	Nut Flange Lock 5/8-11
61	436884	Draglink, LH
62	436885	Draglink, RH
63	17000512	Screw 5/16-18 x 3/4
64	199849	Retainer Clip Spring Steering
66	71020748	Bolt Hex Fghd 7/16-14 x 3 Serr
67	194737	Bushing PM Front Axle
68	73900700	Nut Lock Flange 7/16-14 Gr. 5
69	199162	Washer 1.5 x .505 x .118
70	196197	Bracket Deck Susp. Front
75	580683701	Pinion
76	580683601	Screw Head Sock
80	1370H	Washer Thrust 5/8 x 1.10 x 1/32
81	436887	Link Cross
82	442147	Pivot Bolt
85	441873	Pivot Weldment RH
86	441872	Pivot Weldment LH
122	444962	Cap Gear Sector Tex

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350

MOWER DECK

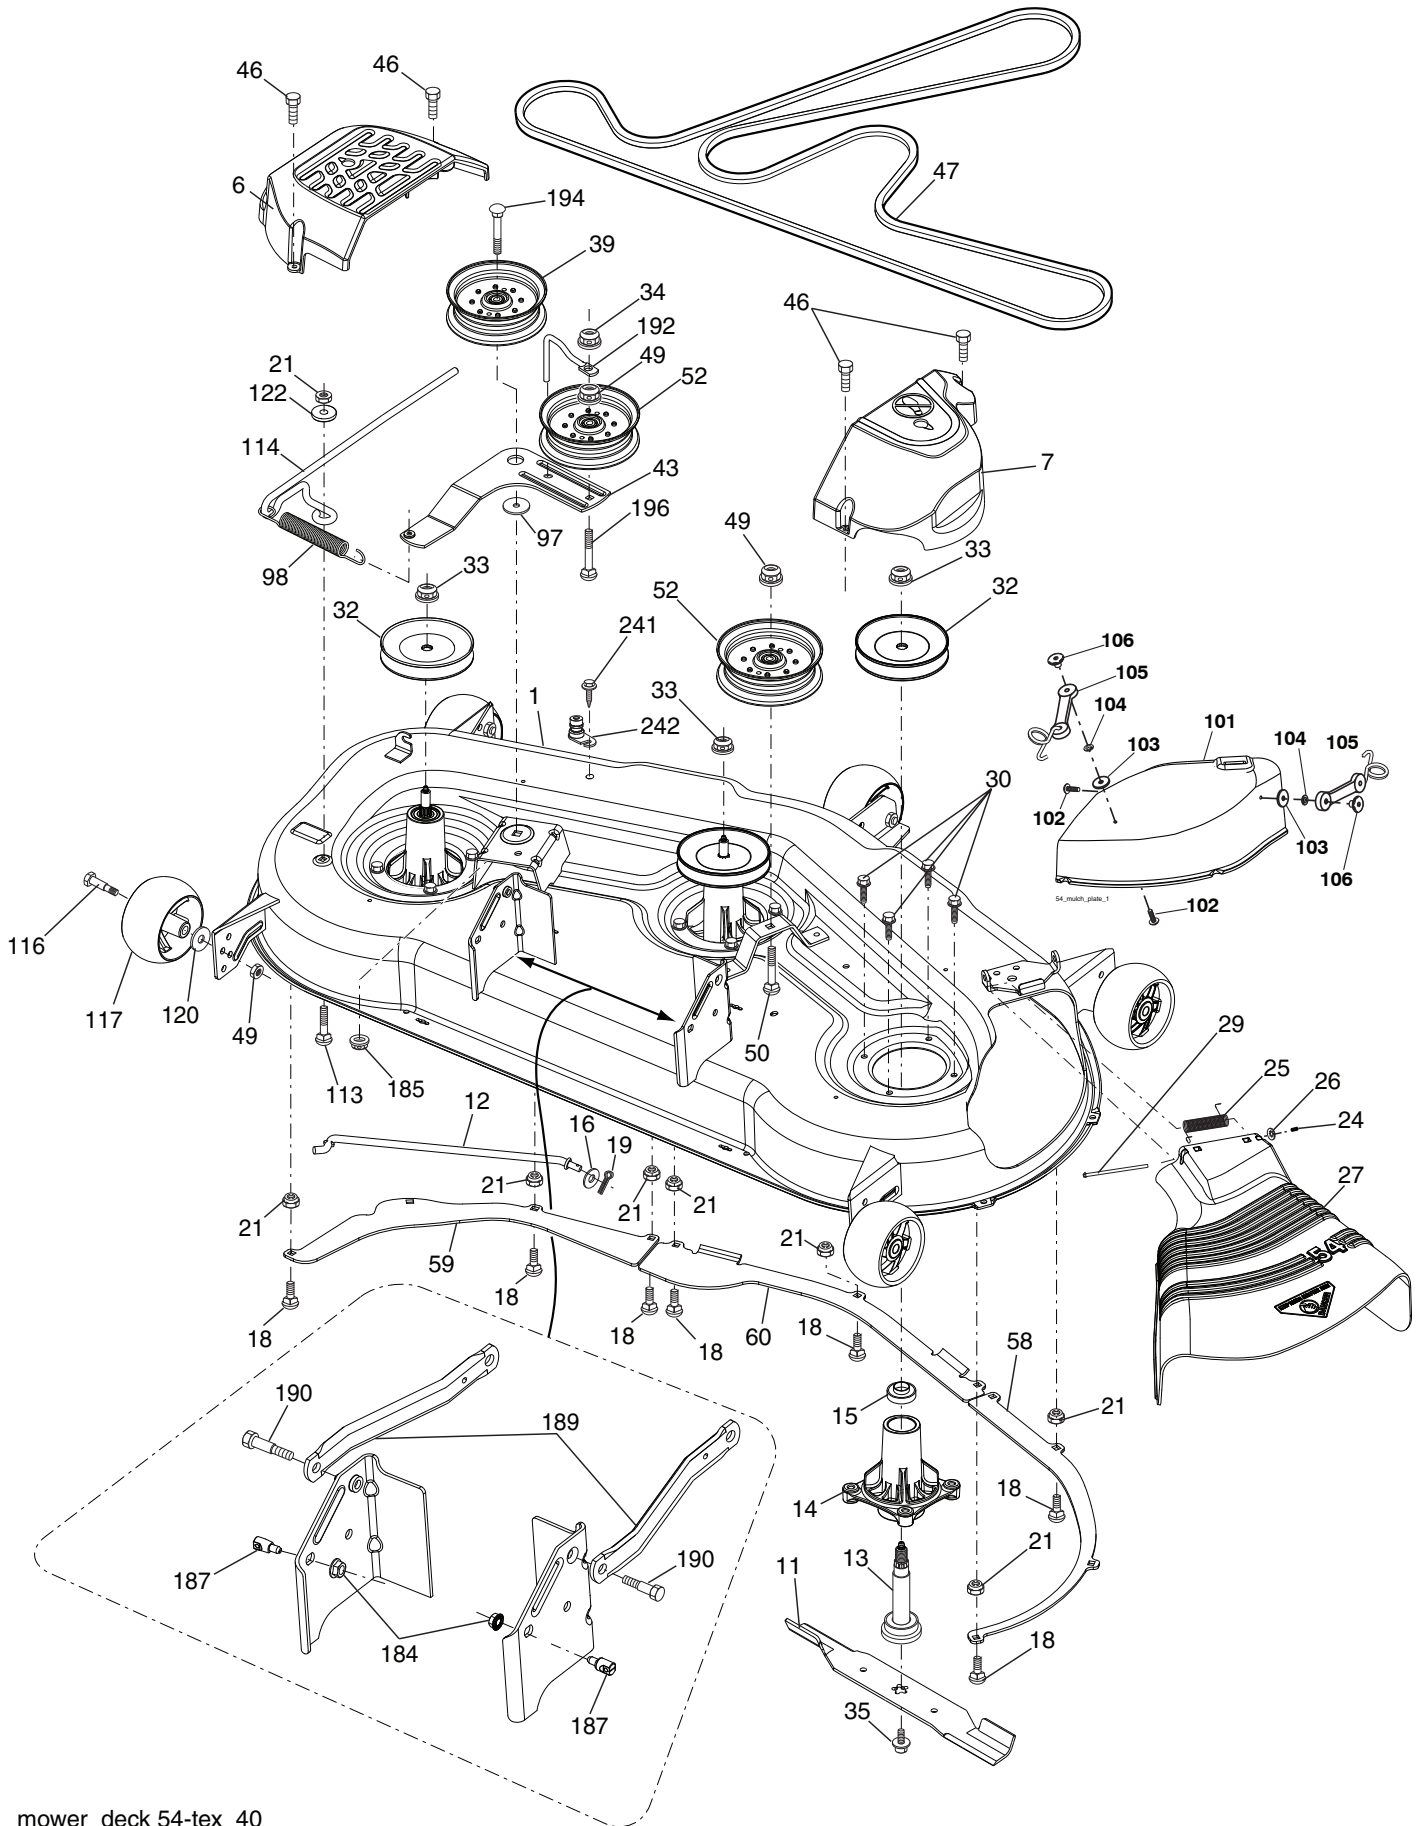

TRACTOR - - MODEL NUMBER 944.604350


MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	195632X613	Deck Weldment Mower	101	187298	Cover Mulch
6	196066	Cover Mandrel LH	102	71081010	Screw Pan
7	197181	Cover Mandrel RH	103	19061216	Washer #10
11	187256	Blade Mulching	104	10071000	Washer Lock #10
12	404851	Rod Anti-Sway	105	160793	Latch Asm.
13	587256401	Shaft Asm.	106	2029J	Nut Weld
14	187281	Housing, Mandrel	113	72110508	Bolt Rdhd. Sqnk. 5/16-18 x 3/4
15	585323901	Bearing, Mandrel	114	187556	Rod Tension Relief
16	19131312	Washer 13/23 x 13/16 x 1 2 Ga.	116	193406	Bolt, Shoulder
18	72140505	Bolt Rdhd. 5/16-18 unc x 5/8	117	174873	Gauge Wheel
19	194208	Pin Cotter 5/16 Bowtie Lock	120	19132012	Washer 13/32 x 1-1/4 x 12 Ga.
21	73680500	Nut, Crownlock 5/16-18 unc	122	187557	Bushing Tension Relief
24	105304X	Cap Sleeve	184	73900500	Nut Lock Hex Flange 5/16-18
25	178102	Spring, Torsion	185	73900700	Nut Lock Flange 7/16-14 Gr. 5
26	110452X	Nut, Push	187	195161	Stud Fastener w/"D" Anti-Rotation
27	187257X428	Deflector Shield	189	195185	Arm Susp. Mower Rear
29	131491	Rod, Hinge	190	196539	Bolt Shoulder
30	173984	Screw, Thdrol. Washer Head	192	198468	Keeper Belt Idler
32	153535	Pulley, Mandrel	194	74490736	Bolt Hex Wsh HD 7/16-24
33	400234	Nut, Flg. Top Lock	196	72140620	Bolt Rdhd 3/8-16 x 2-1/2 Gr. 5
34	73680600	Nut Crownlock 3/8-16 unc	241	152927	Screw
35	584309301	Screw	242	415598	Port Washout
39	197380	Pulley, Idler	--	416405	Coupling Quick Connect
43	196065	Arm, Idler	--	587125401	Mandrel Assembly (Includes housing(key #14), Shaft Assembly (key #13), And Bearing Only (key #15) - Pulley/Nut/Washer And Blade Bolt/Washers Not Included)
46	137729	Screw, Thdrol. 1/4-20 x 5/8	--	403349	Replacement Mower, Complete
47	587686701	Belt Drive Deck			
49	73900600	Nut, Lock Flg. 3/8-16 unc			
50	72110616	Bolt Rdhd. Sqnk. 3/8-16 unc x 2			
52	197379	Pulley Idler			
58	187342	Baffle Right			
59	187344	Baffle Left			
60	187607	Baffle Center			
97	178515	Washer Hardened			
98	196105	Spring Drive			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350

MOWER LIFT

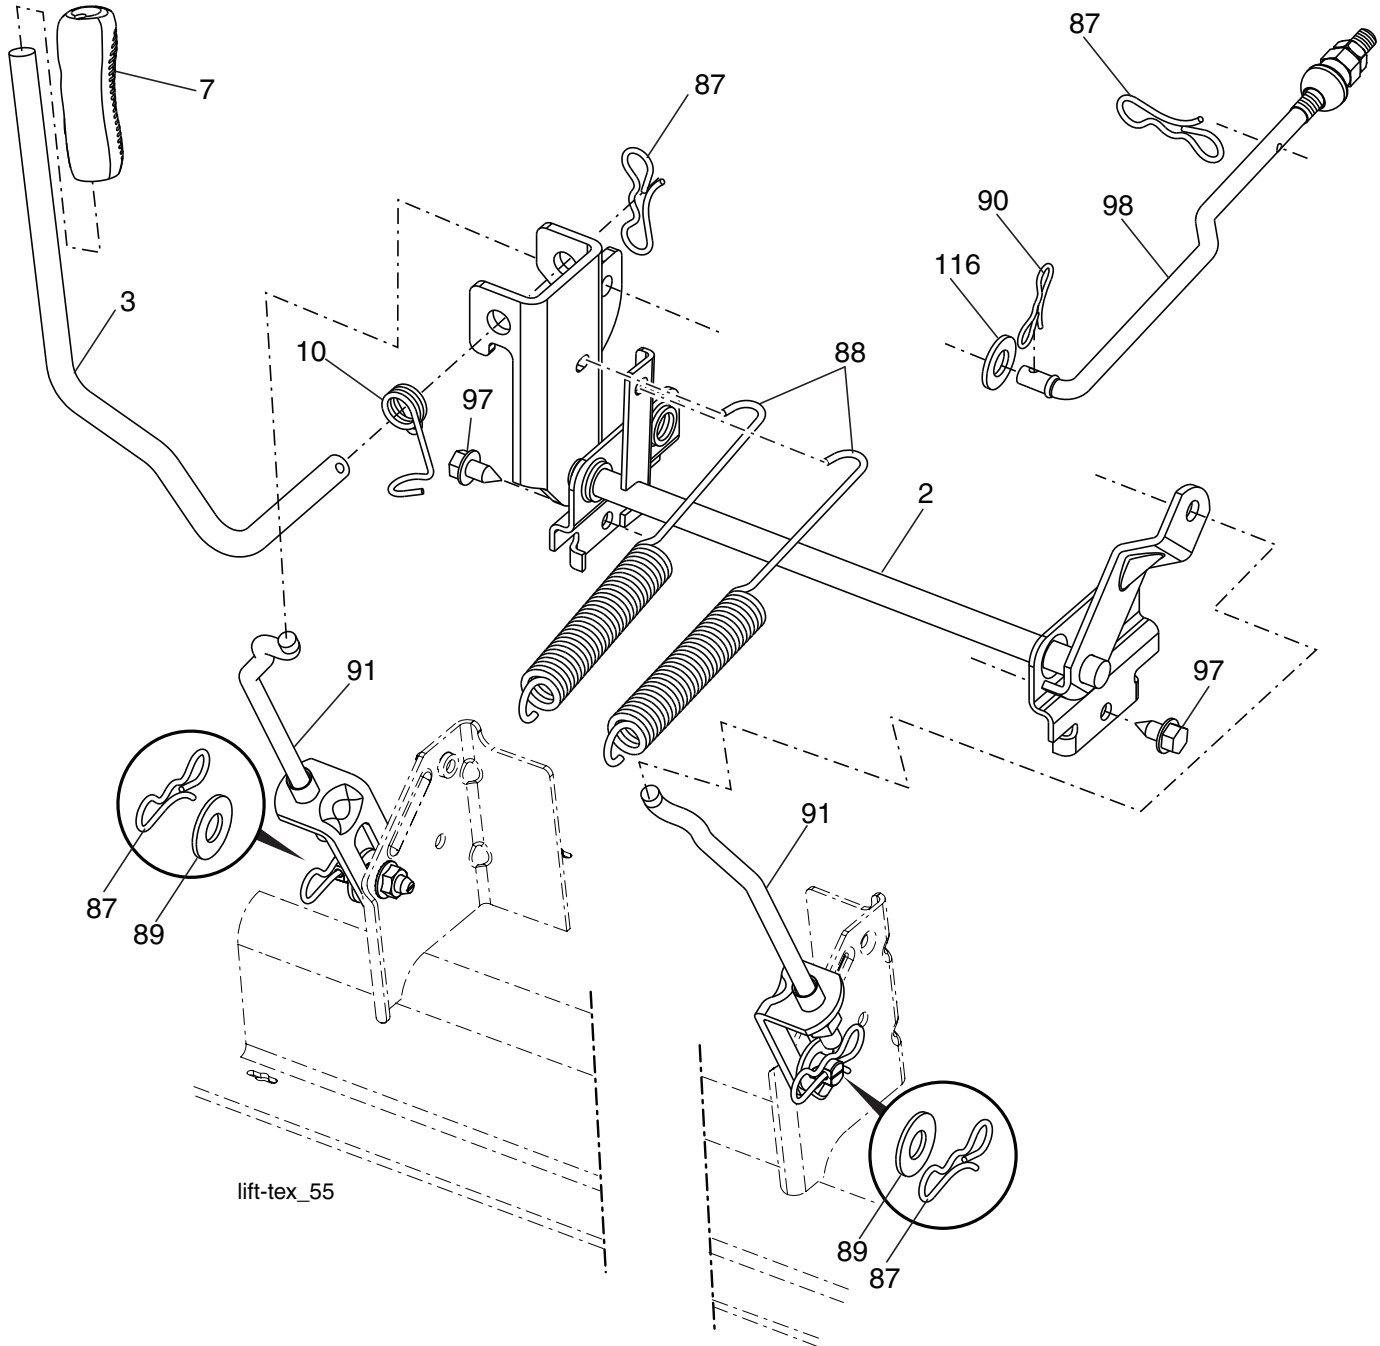


KEY NO.	PART NO.	DESCRIPTION
2	422027	Shaft Asm., Lift
3	426896	Lever Asm., Lift RH
7	445060X428	Grip, Lever
10	196314	Spring Torsion
87	194209	Pin Cotter 7/16 Bow Tie Lock
88	410710	Spring Lift Assist
89	19191912	Washer Clear Zinc
90	194208	Pin Cotter 5/16 Bow Tie Lock

KEY NO.	PART NO.	DESCRIPTION
91	403407	Link Lift Susp. Mower Rear
97	17000612	Screw 3/8-16 x .75 R.Z
98	195264	Link Lift Susp. Front Mower
116	19151516	Washer 15/32 x 15/16 x 16 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350

SEAT ASSEMBLY

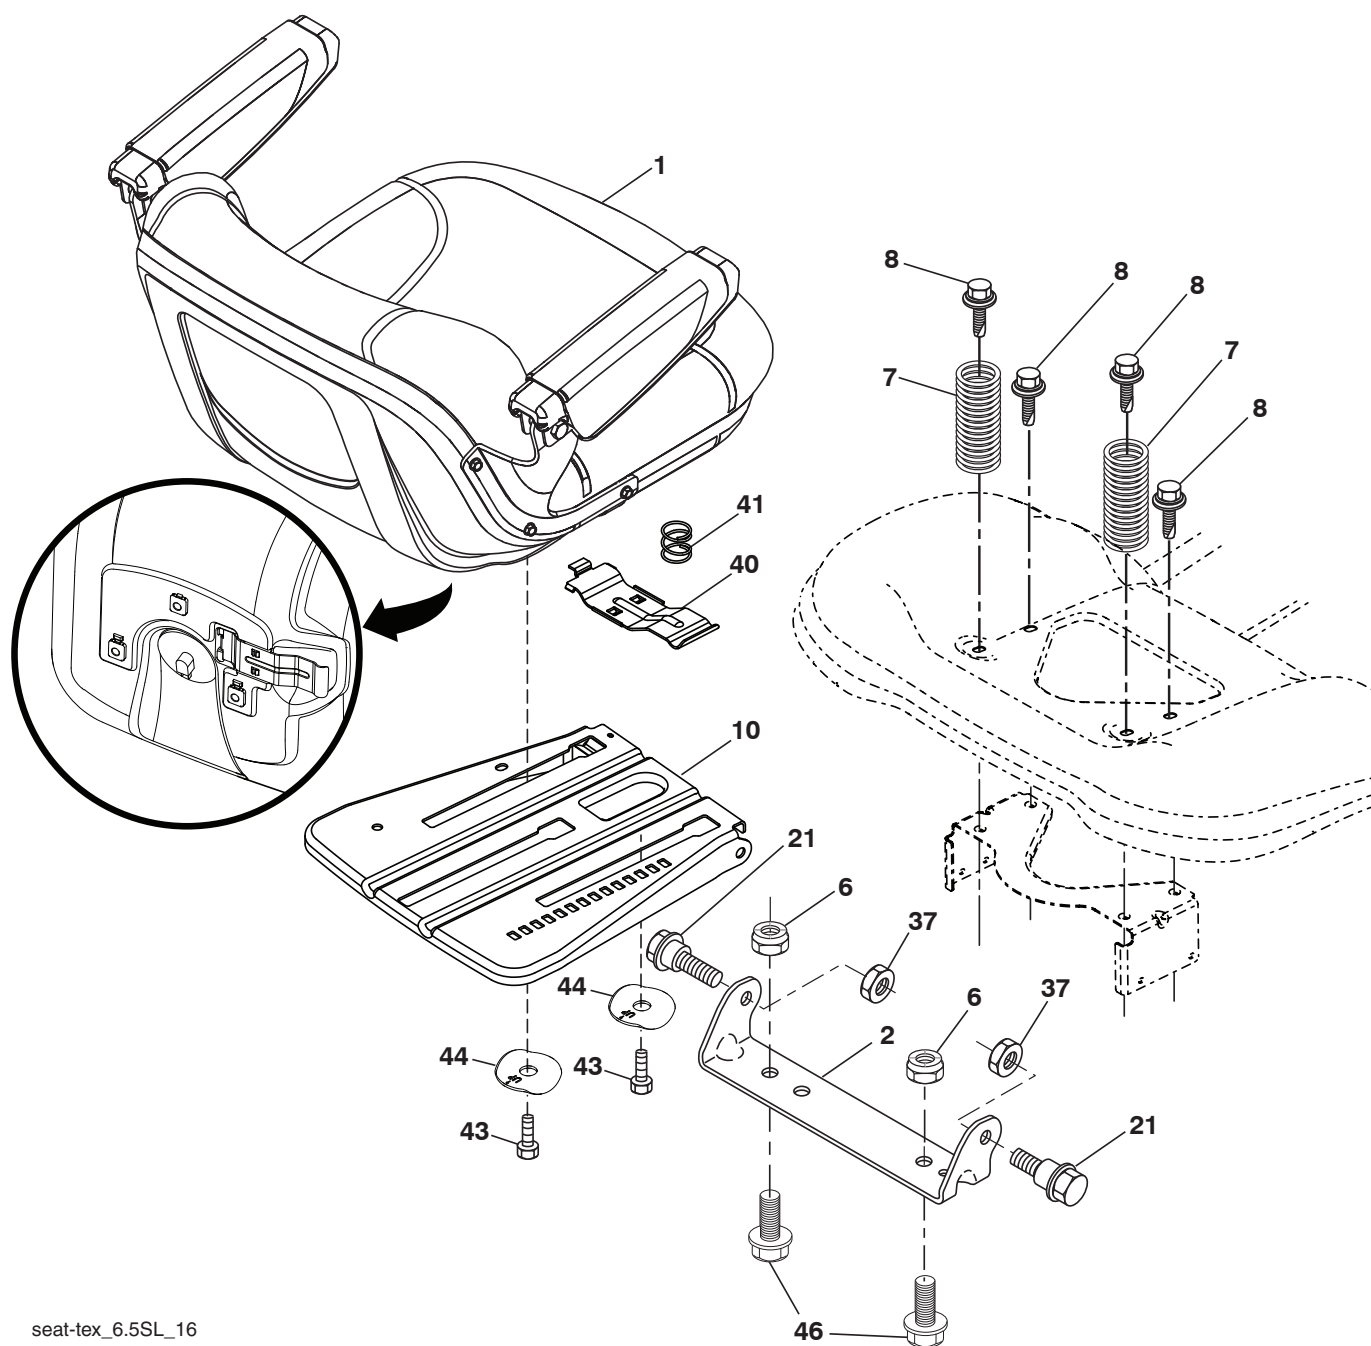

seat-tex_6.5SL_16


KEY NO.	PART NO.	DESCRIPTION
1	586507702	Seat
2	180166	Bracket Pivot Fender
6	73800600	Nut, Lock w/Ins. 3/8-16 unc
7	589483501	Spring, Seat Cprsn.
8	171877	Bolt 5/16-18 unc x 3/4 w/Sems.
10	587232002	Pan, Seat
21	587907801	Bolt, Shoulder 5/16-18 x 5/8
37	73800500	Nut, Lock 5/16-18 unc

KEY NO.	PART NO.	DESCRIPTION
40	197661	Handle Slide Seat
41	198200	Spring Latch Seat
43	74760612	Bolt 3/8-16 x 3/4
44	501051801	Washer Winged 3/8 ID 1.5 OD
46	588090401	Bolt 3/8-16 x 1; 1.25 OD

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350


DECALS

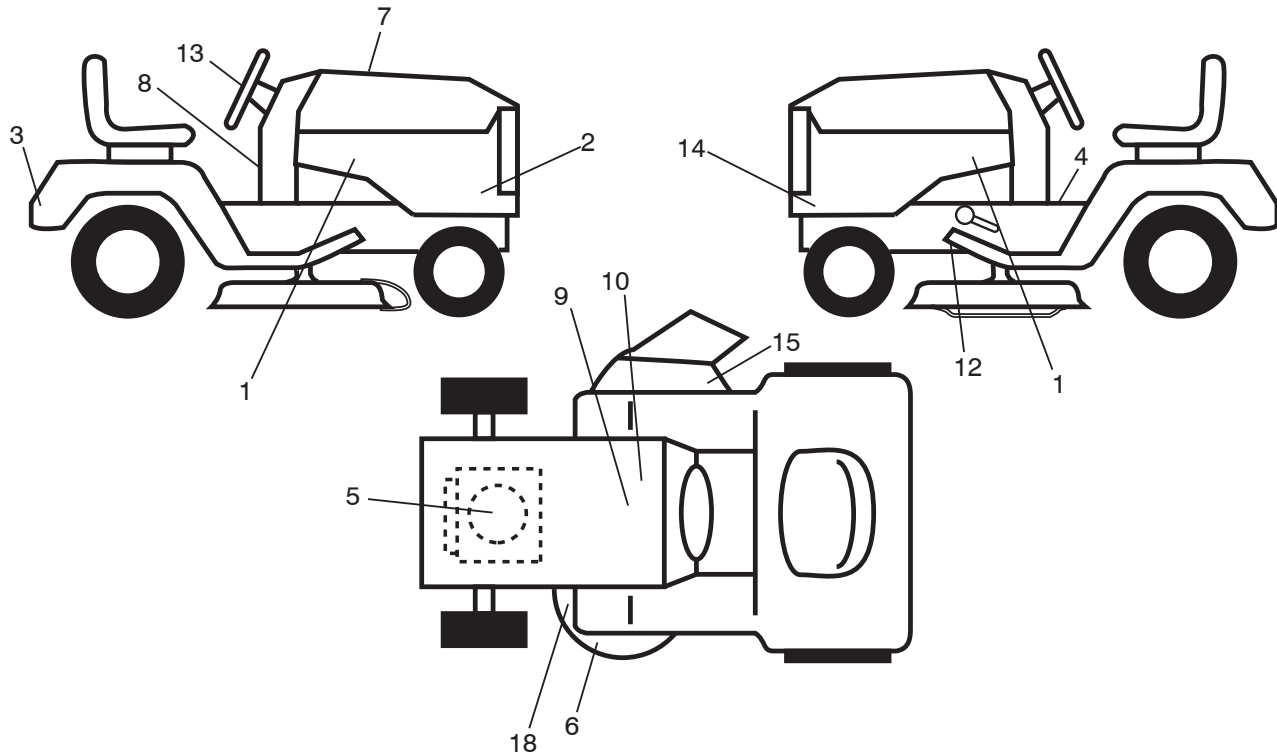

KEY NO.	PART NO.	DESCRIPTION
1	585767601	Decal, Hood
2	586393801	Decal, Sideskirt RH
3	441122	Decal, Fender
4	581579001	Decal, Warning
5	586620701	Decal, Engine
6	581580002	Decal, B-Belt Schematic
7	580385801	Decal, RPL
8	581579901	Decal, Warning
9	149517	Decal, Battery Warning
10	448709	Decal, Battery
12	421534	Decal, Mower V-Belt Schematic

KEY NO.	PART NO.	DESCRIPTION
13	581894601	Decal, Steering Wheel
14	586393802	Decal, Sideskirt LH
15	584904601	Decal, Deck/Deflect Warning
18	581724501	Decal, Mower Caution
--	581724801	Decal, Bypass
--	193226X428	Pad, Footrest, LH
--	400981X428	Pad, Footrest, RH
--	586655124	Manual, Operator's (English/French)
--	587756024	Manual, Parts (English/French)

WHEELS AND TIRES

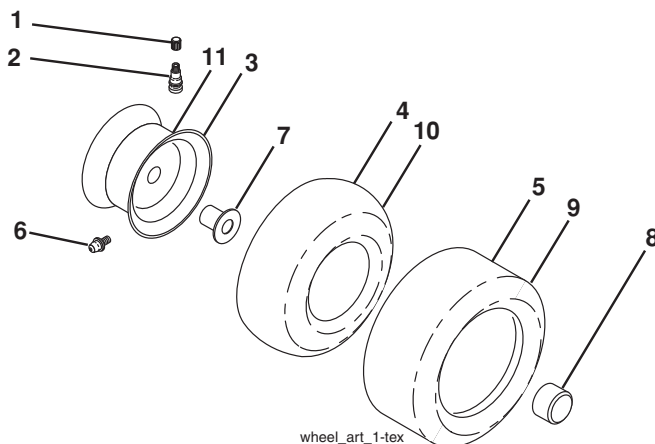

KEY NO.	PART NO.	DESCRIPTION
1	59192	Cap, Valve, Tire
2	65139	Stem, Valve
3	106732X613	Rim Assembly, Front
4	59904	Tube, Front
5	106222X	Tire, Front 15 x 6-6
6	278H	Fitting, Grease
7	9040H	Bearing, Flange
8	104757X428	Cap, Axle (Front Wheel Only)
9	138468	Tire, Rear 20 x 8-8
10	7152J	Tube, Rear
11	106108X613	Rim Assembly, Rear
--	144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350

BRIGGS & STRATTON ENGINE - - MODEL NUMBER 44S777, TYPE NUMBER 0013-G1

48 SHORT BLOCK


1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL


1329 REPLACEMENT ENGINE

1330 REPAIR MANUAL










121 CARBURETOR OVERHAUL KIT

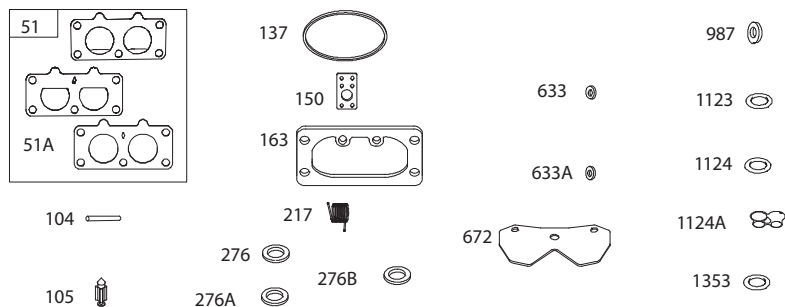

358 ENGINE GASKET SET










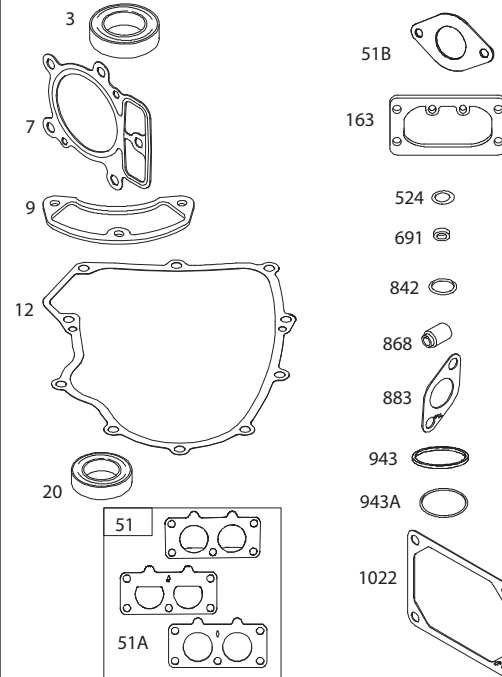


1095 VALVE GASKET SET

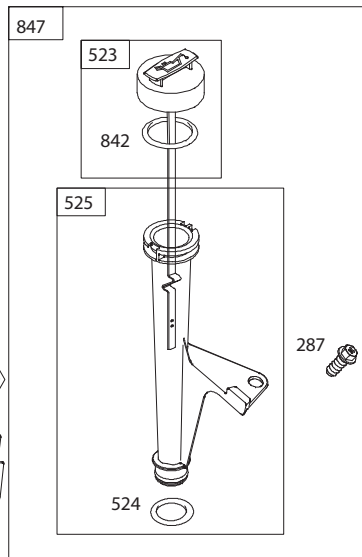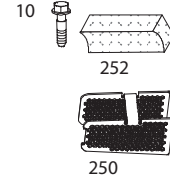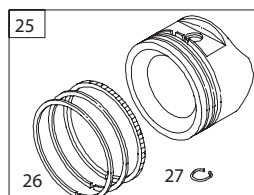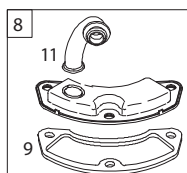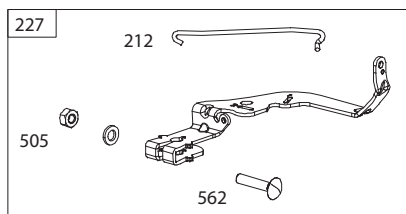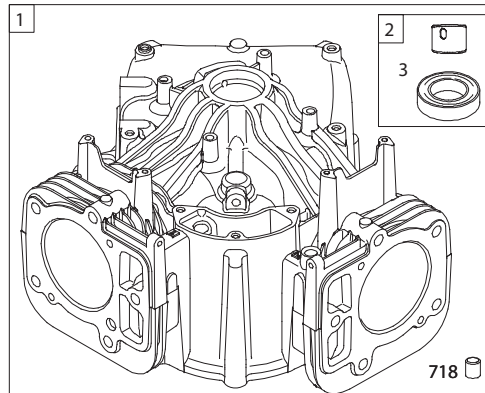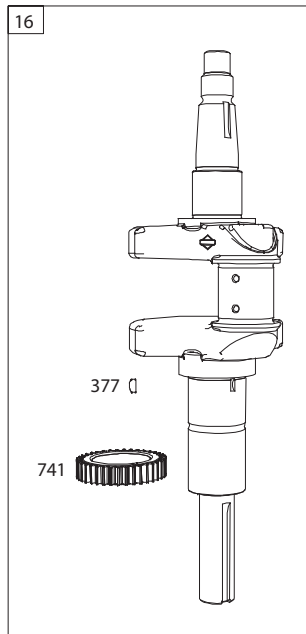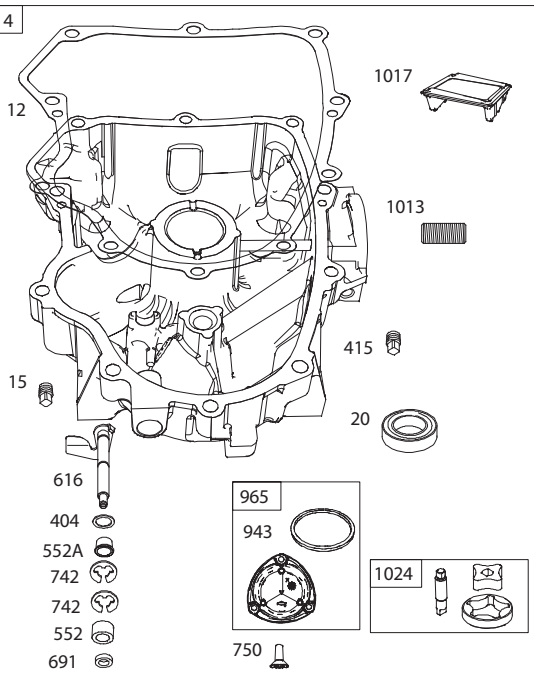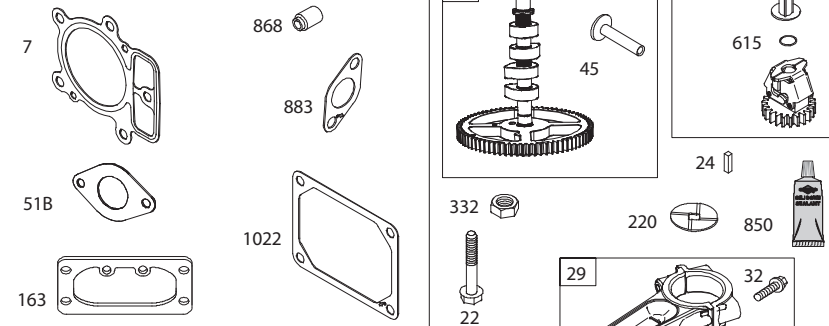


TRACTOR - - MODEL NUMBER 944.604350

BRIGGS & STRATTON ENGINE - - MODEL NUMBER 44S777, TYPE NUMBER 0013-G1

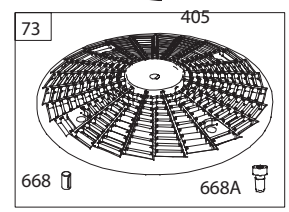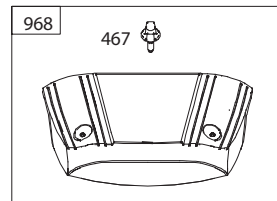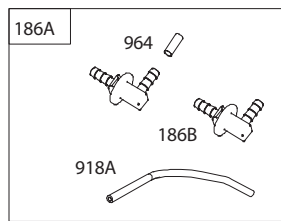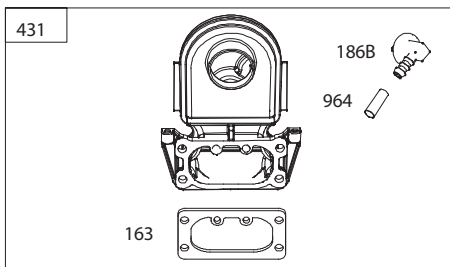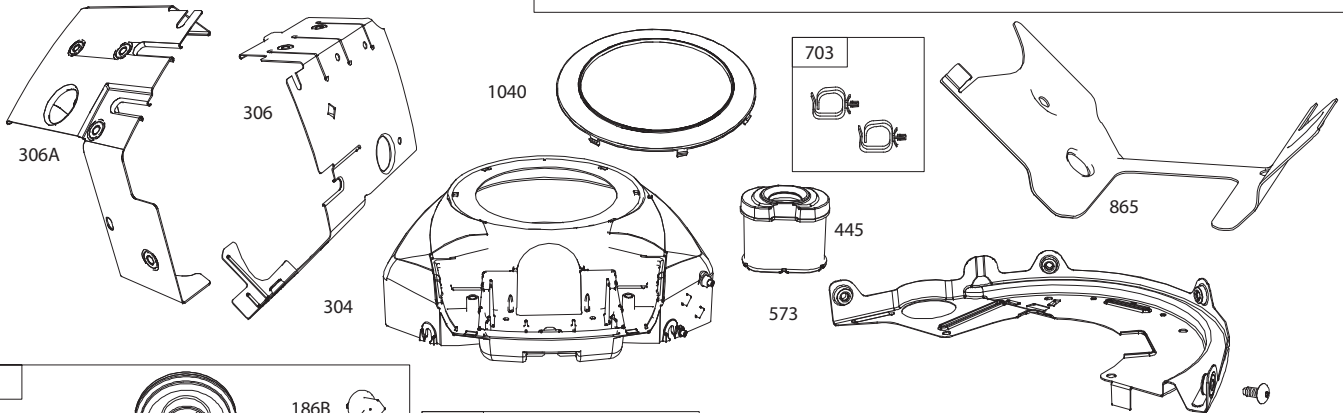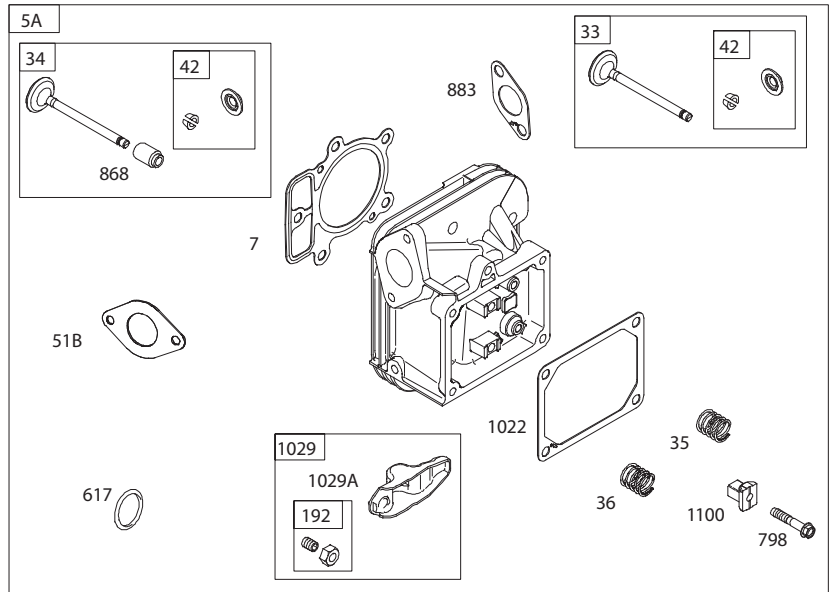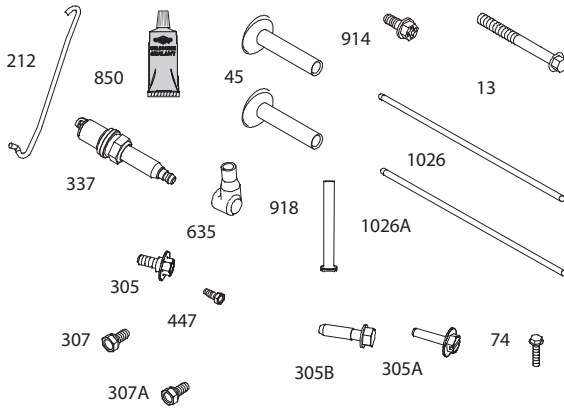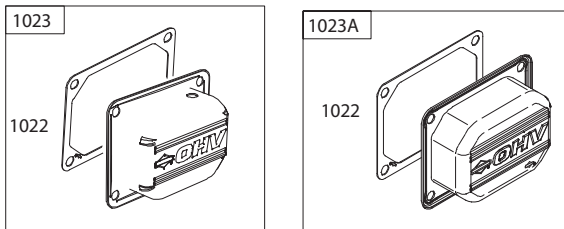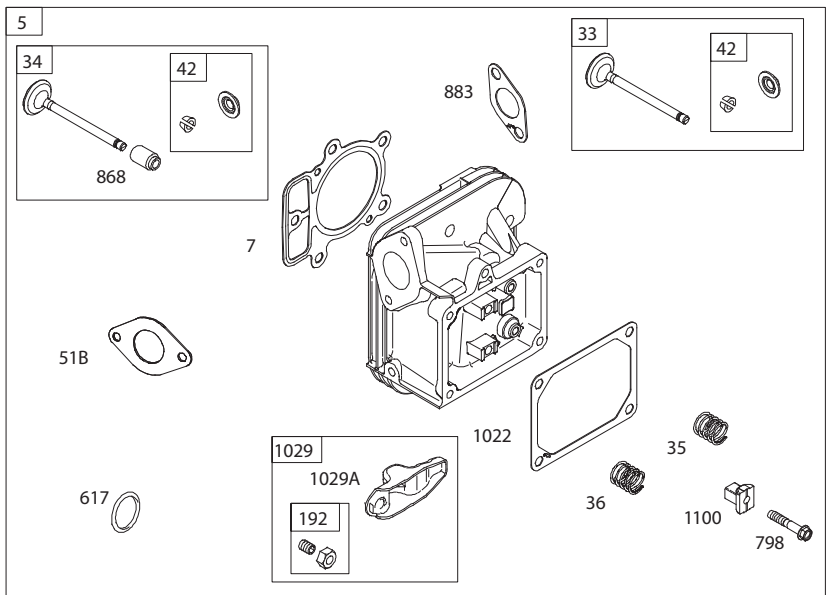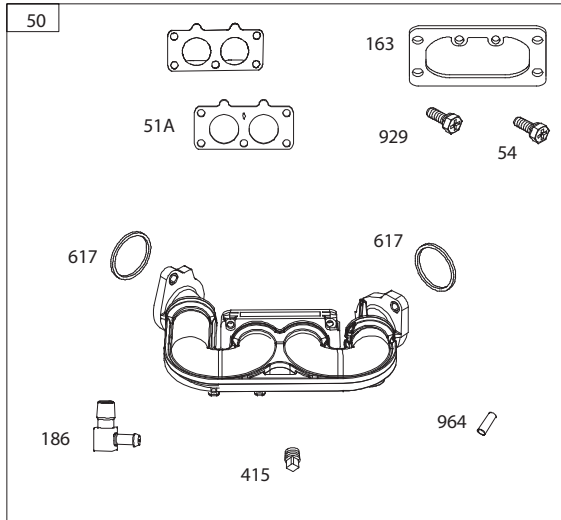

TRACTOR - - MODEL NUMBER 944.604350

BRIGGS & STRATTON ENGINE - - MODEL NUMBER 44S777, TYPE NUMBER 0013-G1

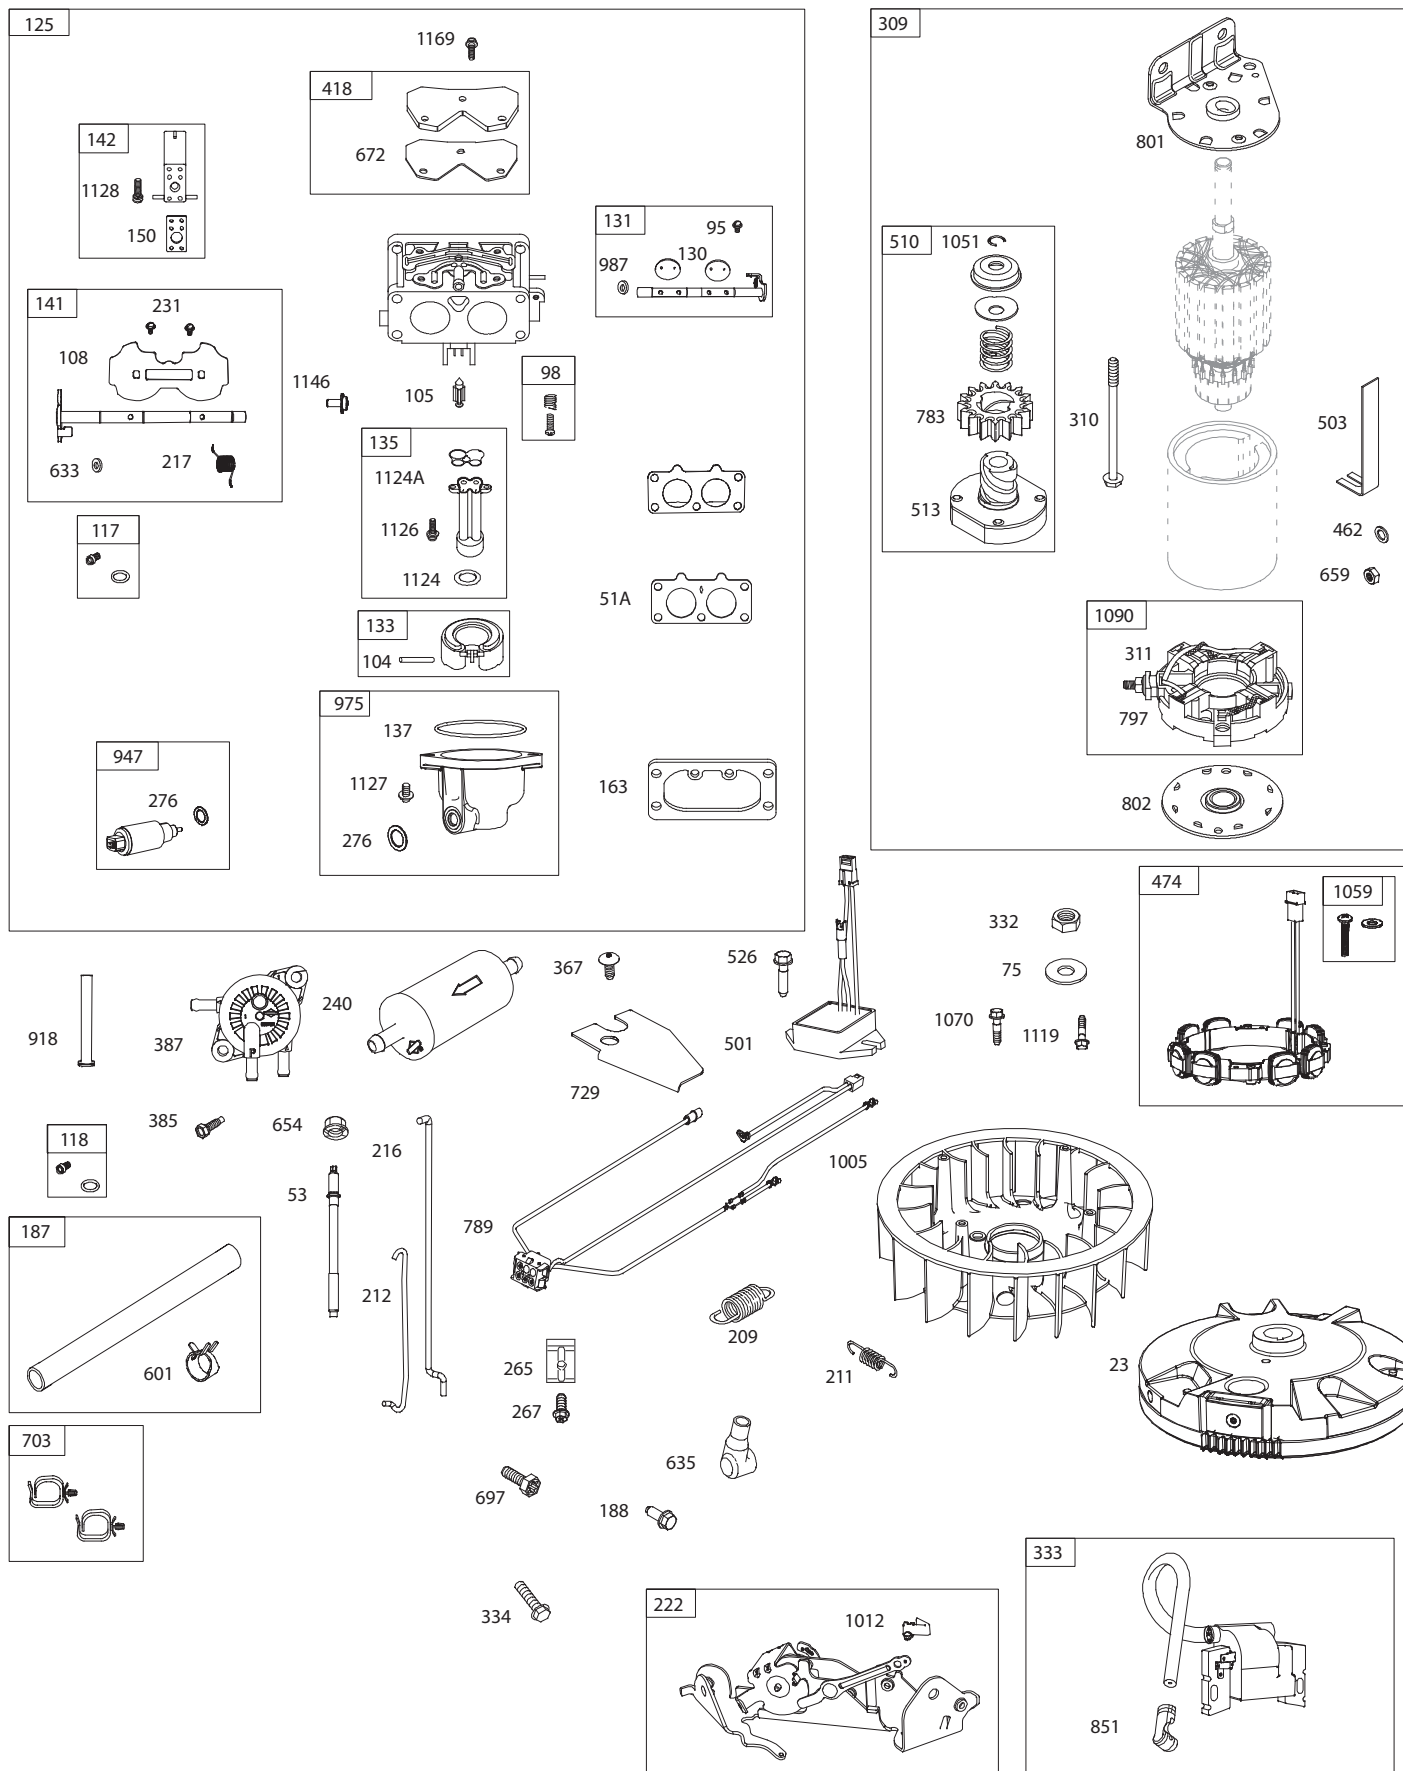

TRACTOR - - MODEL NUMBER 944.604350

BRIGGS & STRATTON ENGINE - - MODEL NUMBER 44S777, TYPE NUMBER 0013-G1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	591695	Cylinder Assembly	186	795985	Connector-Hose (Intake Manifold)
2	797673	Bushing/Seal Kit (Magnetoside)	186A	799158	Connector-Hose (EVAP)
3	391086s	Seal-Oil (Magnetoside)	186B	845141	Connector-Hose (EVAP)
4	796307	Sump-Engine	187	791766	Line-Fuel (Cut to Required Length)
5	799088	Head-Cylinder (Cylinder #1)	188	691108	Screw (Control Bracket)
5A	799089	Head-Cylinder (Cylinder #2)	192	690083	Adjuster-Rocker Arm
7	693997	Gasket-Cylinder Head	209	798921	Spring-Governor (Orange)
8	792185	Breather Assembly	211	691019	Spring-Governed Idle (No Color)
9	690937	Gasket-Breather	212	695238	Link-Throttle
10	691108	Screw (Breather Assembly)	216	796229	Link-Choke
11	792184	Tube-Breather	217	799771	Spring-Choke Return
12	591911	Gasket-Crankcase	219	793338	Gear-Governor
13	793988	Screw (Cylinder Head)	220	799772	Washer (Governor Gear)
15	690946	Plug-Oil Drain	221	841026	Cup-Governor
16	796237	Crankshaft	222	592555	Bracket-Control
20	795387	Seal-Oil (PTO Side)	227	798856	Lever-Governor Control
22	694966	Screw (Crankcase Cover/Sump)	231	690718	Screw (Choke Valve)
23	691053	Flywheel	240	695666	Filter-Fuel
24	222698s	Key-Flywheel (Aluminum)	250	690957	Retainer-Breather
25	792023	Piston Assembly (Standard)	252	794389	Collector-Oil
	792072	Piston Assembly (.020" Oversize)	265	691024	Clamp-Casing
26	792026	Ring Set (Standard)	267	792629	Screw (Casing Clamp)
	792073	Ring Set (.020" Oversize)	276	695410	Washer-Sealing (Aluminum)
27	690975	Lock-Piston Pin	276A	690997	Washer-Sealing (Fiber)
28	696581	Pin-Piston	276B	794271	Washer-Sealing
29	796209	Rod-Connecting	287	697820	Screw (Dipstick Tube)
32	690976	Screw (Connecting Rod)	304	591668	Housing-Blower
33	793557	Valve-Exhaust	305	691005	Screw (Blower Housing) (1/4-20x.66)
34	793556	Valve-Intake	305A	790690	Screw (Blower Housing) (Blower Housing to Intake Elbow)
35	694865	Spring-Valve (Intake)	305B	691061	Screw (Blower Housing) (#8-32x.87)
36	694865	Spring-Valve (Exhaust)	306	591666	Shield-Cylinder (Cylinder #2)
42	499586	Keeper-Valve	306A	796852	Shield-Cylinder (Cylinder #1)
45	690977	Tappet-Valve	307	691003	Screw (Cylinder Shield)
46	796853	Camshaft	307A	691108	Screw (Cylinder Shield) (1/4-20x.66)
48	N/A	Short Block (Not Available At This Printing)	309	497595	Motor-Starter
50	591784	Manifold-Intake	310	690323	Screw (Starter Motor)
51	795123	Gasket-Intake	311	497608	Brush Set
51A	690950	Gasket-Intake	332	691059	Nut (Flywheel)
51B	690949	Gasket-Intake	333	592846	Armature-Magneto
53	690951	Stud (Carburetor)	334	691061	Screw (Magneto Armature)
54	699816	Screw (Intake Manifold)	337	792015	Plug-Spark
73	494439	Screen-Rotating	358	694012	Gasket Set-Engine
74	698425	Screw (Rotating Screen)	367	697820	Screw (Wire Clip)
75	691056	Washer (Flywheel)	377	690979	Key-Woodruff
95	690718	Screw (Throttle Valve)	385	797409	Screw (Fuel Pump)
98	699721	Kit-Idle Speed	387	808656	Pump-Fuel
104	694918	Pin-Float Hinge	404	690442	Washer (Governor Crank)
105	797410	Valve-Float Needle	405	697820	Screw (Back Plate)
108	699723	Valve-Choke	415	794903	Plug
117	842585	Jet-Main (Standard) (Left and Right Jet)	418	795912	Plate-Carburetor
118	791502	Jet-Main (High Altitude) (Left & Right Jet) (5000/9000 Feet)	431	798860	Elbow-Intake
121	797890	Kit-Carburetor Overhaul	445	593240	Filter-Air Cleaner Cartridge
125	796997	Carburetor	447	691003	Screw (Air Guide Cover) (#10-24x.43)
130	690993	Valve-Throttle	462	691261	Washer (Starter Cable)
131	499805	Kit-Throttle Shaft	467	790697	Knob-Air Cleaner
133	699724	Float-Carburetor	474	592830	Alternator
135	699729	Tube-Fuel Transfer	501	845907	Regulator
137	690994	Gasket-Float Bowl	503	691532	Strap-Starter
141	796228	Kit-Choke Shaft			
142	796871	Nozzle-Carburetor			
150	841649	Gasket-Nozzle			
163	691001	Gasket-Air Cleaner			

TRACTOR - - MODEL NUMBER 944.604350


BRIGGS & STRATTON ENGINE - - MODEL NUMBER 44S777, TYPE NUMBER 0013-G1

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
505	691029	Nut (Governor Control Lever)	1023A	499600	Cover-Rocker (Cylinder #2)
510	696541	Drive-Starters	1024	796220	Pump-Oil
513	692024	Clutch-Drive	1026	690981	Rod-Push (Exhaust) (Steel)
523	691036	Dipstick	1026A	690982	Rod-Push (Intake) (Aluminum)
524	691032	Seal-Dipstick Tube	1027	795890	Filter-Oil
525	691037	Tube-Dipstick	1029	690972	Arm-Rocker
526	691108	Screw (Regulator)	1029A	807323	Arm-Rocker
552	796638	Bushing-Governor Crank	1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
552A	690553	Bushing-Governor Crank			
562	690311	Screw (Governor Control Lever)	1040	791237	Plate-Trim
573	790444	Plate-Back	1051	691265	Ring-Retaining
601	691038	Hose-Clamp (Black)	1058	381258TRI	Operator's Manual
615	698290	Retainer-Governor Shaft	1059	698516	Kit-Screw/Washer (Alternator)
616	691045	Crank-Governor	1070	592604	Screw (Flywheel Fan)
617	697891	Seal-O Ring (Intake Manifold) (Red)	1090	691293	Retainer-Brush
633	699813	Seal-Choke/Throttle Shaft (Choke Shaft)	1095	694013	Gasket Set-Valve
633A	690998	Seal-Choke/Throttle Shaft	1100	791959	Pivot-Rocker Arm
635	66538s	Boot-Spark Plug	1119	691183	Screw (Alternator)
654	690958	Nut (Carburetor) (Serrated)	1123	690987	Seal-O Ring (Solenoid Retainer)
668	691500	Spacer (Rotating Screen)	1124	841653	Seal-O Ring (Fuel Transfer Tube)
668A	691215	Spacer (Rotating Screen)	1124A	690988	Seal-O Ring (Fuel Transfer Tube)
672	690234	Gasket-Carburetor Plate	1126	690991	Screw (Fuel Transfer Tube)
691	790574	Seal-Governor Shaft	1127	695407	Screw (Float Bowl)
697	591909	Screw (Drive Cap)	1128	690990	Screw (Carburetor Nozzle)
703	691010	Clip (Fuel Line)	1146	690991	Screw (Choke Shaft)
718	690959	Pin-Locating	1169	690990	Screw (Carburetor Cover Plate)
729	797454	Clip-Wire	1329	N/A	Replacement Engine (Not Available At This Printing)
741	690980	Gear-Timing	1330	N/A	Repair Manual (Not Available At This Printing)
742	690328	Retainer-E Ring	1353	699725	Seal-O Ring (Fuel Transfer Tube Extension)
750	796208	Screw (Oil Pump Cover)			
783	695708	Gear-Pinion			
789	591392	Harness-Wiring			
797	693167	Nut (Brush Retainer)			
798	697890	Screw (Rocker Arm)			
801	691283	Cap-Drive			
802	691286	Cap-End			
842	691031	Seal-O Ring (Dipstick Tube)			
847	499602	Dipstick/Tube Assembly			
850	100106	Sealant-Liquid			
851	493880s	Terminal-Spark Plug			
865	591667	Cover-Air Guide (Valley)			
868	690968	Seal-Valve			
883	690970	Gasket-Exhaust			
914	691127	Screw (Rocker Cover)			
918	797408	Hose-Vacuum (Rocker Cover #1)			
918A	799160	Hose-Vacuum (EVAP)			
929	695239	Screw (Choke Control Bracket)			
943	796222	Seal-O Ring (Oil Pump Cover) (Square Cut) (I.D. 2.48)			
943A	690589	Seal-O Ring (Oil Pump Cover)			
947	798779	Solenoid-Fuel			
964	799159	Cap-Connector			
965	796221	Cover-Oil Pump			
968	795120	Cover-Air Cleaner			
975	796777	Bowl-Fuel			
987	691000	Seal-Throttle Shaft			
1005	791236	Fan-Flywheel			
1012	592556	Retainer-Link			
1013	690954	Nipple-Oil Filter			
1017	796214	Screen-Oil Pump			
1022	690971	Gasket-Rocker Cover			
1023	793146	Cover-Rocker (Cylinder #1)			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER 944.604350
TUFFTORQ TRANSAXLE - - MODEL NUMBER K57R

ACTUAL PARTS
MAY NOT APPEAR
AS SHOWN

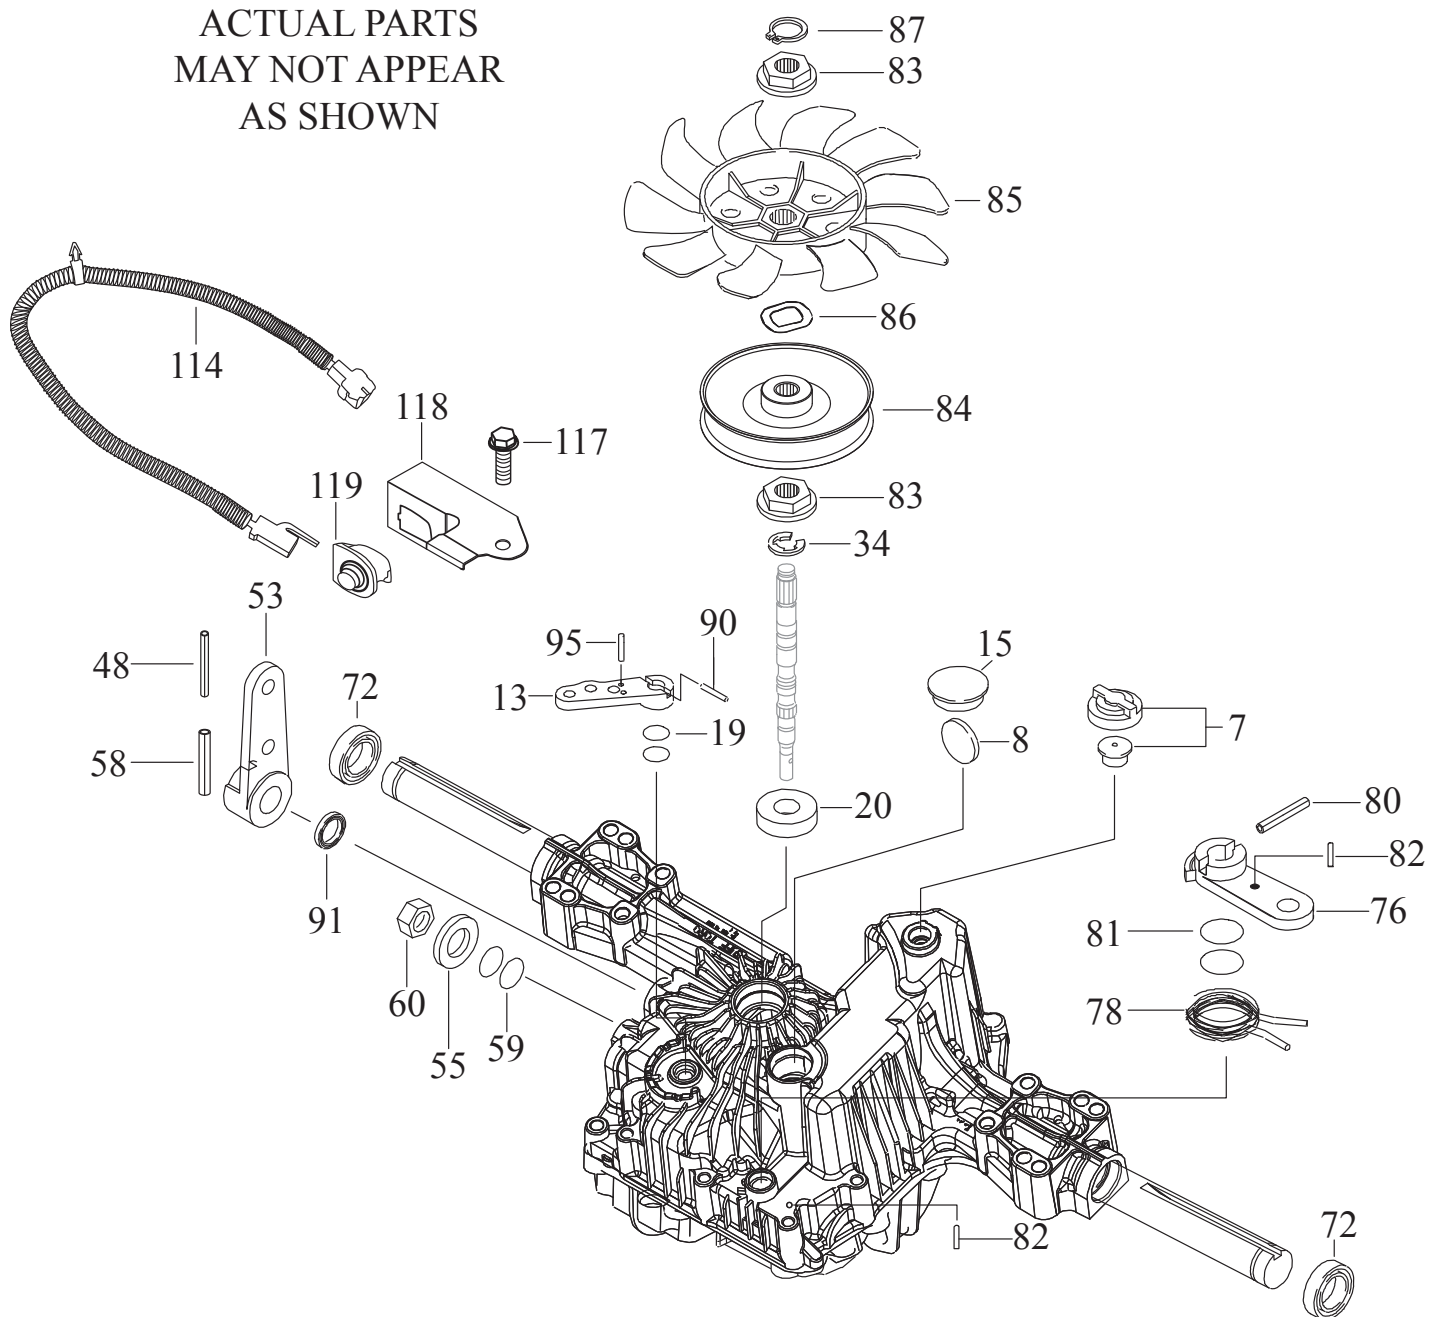

TRACTOR - - MODEL NUMBER 944.604350
TUFFTORQ TRANSAXLE - - MODEL NUMBER K57R

KEY NO.	PART NO.	DESCRIPTION
7	532 41 43-95	Vent Valve 15
8	532 41 43-96	Magnet
13	532 41 43-98	Bypass Lever
15	532 41 43-99	Sealing Cap 30
19	532 41 44-01	O-Ring 1a P10a
20	532 41 44-02	Seal Tc 153507
34	532 41 44-04	E-Ring 15
48	532 41 44-20	Roll Pin
53	532 41 44-31	Control Lever F
55	532 41 59-24	Washer 12
58	532 41 59-25	Roll Pin 6 * 40
59	532 41 59-26	O-Ring 1a P14
60	532 41 59-27	Nut 12
72	532 41 44-07	Seal 19 * 32 * 8
76	532 41 44-08	Brake Lever
78	532 41 44-09	Brake Return Spring
80	532 41 44-10	Spring Pin 5 * 32
81	532 41 44-11	O-Ring 1a P12
82	532 41 44-12	Spring Pin 4 * 16
83	532 41 44-13	Spine Collar
84	532 41 44-14	Pulley L
85	532 41 44-15	Fan, Black
86	532 41 44-16	Wave Washer
87	532 41 44-17	Snap Ring
90	532 41 44-18	Spring Pin 3.0a * 20
91	532 41 44-19	Oil Seal 16 * 22 *.03
95	532 41 48-50	Spring Pin 3.0a*16
114	532 40 44-54	Pigtail
117	532 41 59-30	Tapping Screw 8 * 20
118	532 41 59-29	Switch Bracket
119	532 41 59-28	Switch

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

GENERAL: Craftsman products are warranted to be free from defects in materials or workmanship for a specific time period as set-out below (the "Warranty Period"). Warranties extend to the original purchaser of a Craftsman product only. Purchases made through an online auction or through any website other than www.sears.ca are excluded. The relevant Warranty Period commences on the original date of purchase. Within this period, SEARS CANADA, Inc. will, at its sole option, repair or replace any products or components which fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost.

EXCLUSIONS: This warranty does not cover failures due to normal wear, abuse, misuse, neglect (including but not limited to the use of stale fuel, dirt, abrasives, moisture, rust, corrosion, or any adverse reaction due to improper storage or use habits), improper maintenance or failure to follow maintenance guidelines and/or instructions, failure to operate the product in accordance with the owner's manual or any additional instructions or information provided at the time of purchase or in subsequent communications with the original purchaser, accident or unauthorized alterations or repairs made or attempted by others. Also excluded from warranty coverage - except as provided below - are the following: maintenance, adjustments, components subject to wear including but not limited to: cosmetic components, belts, blades, blade adapters, bulbs, tires, filters, guide bars, lubricants, seats, grips, recoil assy's, saw chains and bars, trimmer lines and spools, spark plugs, starter ropers and tines, and discoloration resulting from ultraviolet light. Any product missing the model and/or serial number identification label will be disqualified from coverage under this warranty.

REPAIRS: Repairs have a 90 day warranty. If the defective product is still within the Warranty Period, then the new warranty is 90 days from the date of repair or to the end of the original Warranty Period, whichever period is longer.

DISCLAIMERS: THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER ORAL OR WRITTEN (OTHER THAN AS STATED HEREIN), AND WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO ANY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM PROVINCE TO PROVINCE.

IN NO EVENT SHALL SEARS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. THE EXCLUSIONS IN THIS PARAGRAPH SHALL NOT APPLY IN JURISDICTIONS WHERE APPLICABLE LAW DOES NOT ALLOW FOR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. IN SUCH JURISDICTIONS, THIS PARAGRAPH SHALL NOT APPLY, BUT THE REMAINING PROVISIONS OF THIS DOCUMENT SHALL REMAIN VALID.

SEARS retains the exclusive right to repair or replace the product or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

CUSTOMER RESPONSIBILITIES: In addition to complying with all suggested maintenance guidelines and instructions, customers' obligations shall include but shall not be limited to: operating the product in accordance with the owner's manual or any additional instructions or information provided at the time of purchase or in subsequent communications to the purchaser from time to time, exhibit reasonable care in the use, operation, maintenance, general upkeep and storage of the product. Failure to comply with these requirements will void any applicable warranty.

LIST OF APPLICABLE WARRANTY PERIODS: The following list contains the applicable Warranty Period for your Craftsman product and is based on a combination of the type of product or component and the intended and actual use of the product or component:

1. **90 DAYS:** Craftsman products intended for use or actually used for commercial, institutional, professional or income-producing purposes
2. **2 YEARS:** Craftsman riding lawn mowers, yard and garden tractors, walk behind mowers, tillers, brush cutters, snow blowers, handheld blowers, backpack blowers, hedge trimmers and electrical products for noncommercial, nonprofessional, non-institutional, or non-income-producing use, except for those components which are part of engine systems manufactured by third party engine manufacturers for which the purchase has received an separate warranty with product information supplied at the time of purchase.
3. **1 YEAR:** Craftsman power cutters, stump grinders, pole pruners, gas chain saws, electric chain saws, trimmer attachments, baggers and pole saws for noncommercial, nonprofessional, non-institutional, or non-income-producing use.
4. **90 DAYS:** All defective batteries, which will be replaced during this 90-day Warranty Period.
5. **60 DAYS:** Additional Warranty Period of 60 days will apply to adjustments and worn products or components BUT DOES NOT INCLUDE WEAR OR ADJUSTMENTS for products used for commercial, institutional, professional or income-producing purposes. Wear items include but are not limited to: belts, blades, tires, spark plugs, air filters, chains, shear bolts, skid plates, scraper bars, drift cutters, ropes, tines, collection bags and pulleys.

As the Warranty Period runs from the date of purchase and NOT from the date that a product is delivered, opened, assembled or first used, please ensure during this time period that your product or component has been assembled and tested for correction operation regardless of when you intend to actually use it. Claims made after the Warranty Period has expired will not be honored.

PROOF OF PURCHASE/DOCUMENTATION: Warranty coverage is conditioned upon the original purchaser furnishing SEARS CANADA or its authorized third party service provider if applicable, with the original sales receipt or other adequate written proof of the original purchase date and identification of the product. In the event that the original purchaser is unable to provide a company of the original sales receipt, SEARS CANADA Inc. reserves the right to determine in its sole discretion what other written proof of the original purchase date and identification of the product is acceptable.

SERVICE NOTES

GÉNÉRALITÉS : Les produits Craftsman sont garantis contre tout défaut de matériaux ou de fabrication pendant une période de temps précise, telle qu'établie ci-dessous (la « période de garantie »). En outre, cette garantie est offerte uniquement à l'acheteur initial du produit Craftsman. Les achats effectués par l'entremise d'un encan en ligne ou sur tout site Web autre que www.sears.ca sont exclus. La période de garantie débute à la date de l'achat initial. Au cours de cette période, Sears Canada, Inc. s'engage, à sa seule discrétion, à réparer ou à remplacer tout produit ou composant de produit défectueux dans des conditions d'utilisation normale. La réparation ou le remplacement sera effectué pour le client sans frais de pièces ni de main-d'œuvre, à condition que le client prenne à sa charge les frais de transport.

EXCLUSIONS : La présente garantie ne couvre pas les défauts dus à l'usure normale, l'utilisation inappropriée ou abusive, la négligence (y compris, sans s'y restreindre, l'utilisation d'essence éventée, la poussière, l'humidité, la rouille, la corrosion ou tout autre effet indésirable, imputable à un entreposage ou à des habitudes d'utilisation inappropriées), un mauvais entretien, le non-respect des consignes ou directives d'entretien, l'utilisation de l'appareil contrairement aux instructions fournies dans le manuel d'entretien ou aux consignes ou informations données à l'acheteur initial, au moment de l'achat ou au cours de communications subséquentes avec lui, un accident ou une modification ou non autorisée des réparations ou non autorisées, effectuées ou tentées par d'autres. Sont également exclus de la couverture de la garantie - sauf indication fournie ci-dessous - les éléments suivants : travaux d'entretien, réglages, composants sujets à l'usure, y compris mais sans s'y restreindre : les composants esthétiques, courroies, lames, adaptateurs de lame, ampoules, pneus, filtres, barres de guidage, lubrifiants, sièges, poignées, logements de cordon de scie, barres de scie, bobines et fils de tondeuse à touet, bougies, cordes de démarrage et dents, ainsi que les décolorations résultant de l'exposition aux rayons ultraviolets. Tout produit ne portant pas son étiquette d'identification avec son numéro de modèle ou de série sera exclu de la protection offerte par la présente garantie.

RÉPARATIONS : Les réparations sont garanties pendant une période de 90 jours. Si le produit défectueux est toujours couvert par la garantie, la nouvelle garantie est de 90 jours à compter de la date de la réparation ou jusqu'à la fin de la période de garantie initiale, selon la plus longue des deux échéances.

RESTRICTIONS : LES GARANTIES ET RECOURS DÉFINIS DANS LES PRÉSENTES SONT EXCLUSIFS ET REMPLACENT TOUTE AUTRE GARANTIE, QU'ELLE SOIT VERBALE OU ÉCRITE (AUTRE QUE CELLES ÉNONCÉES DANS LES PRÉSENTES) OU QU'ELLE SOIT EXPRIMÉE, IMPLICITE OU PRÉVUE PAR LA LOI, SANS SE RESTREINDRE À AUCUNE. LA PRÉSENTE GARANTIE VOUS CONFÈRE DES DROITS JURIDIQUES PRÉCIS, POUVANT DIFFÉRER D'UNE PROVINCE À L'AUTRE.

SEARS NE POURRA EN AUCUN CAS ÊTRE TENUE RESPONSABLE DE TOUT DOMMAGE ACCESSOIRE, SPÉCIAL, INDIRECT OU CONSÉCUTIF, QUI RÉSULTERAIT DE L'UTILISATION, DU MÉSUSAGE OU DE L'INCAPACITÉ D'UTILISER LE PRODUIT OU QUI DÉCOULERAIT DE DÉFECTUOSITÉS DU PRODUIT. LES EXCLUSIONS DU PRÉSENT PARAGRAPHE NE S'APPLIQUENT PAS DANS LES TERRITOIRES OU LA LOI NE PERMET PAS L'EXCLUSION DES DOMMAGES ACCESSOIRES OU CONSÉCUTIFS. DANS CES TERRITOIRES, LE PRÉSENT PARAGRAPHE SERA SANS EFFET, MAIS SEARS CONSERVE LE DROIT EXCLUSIF DE RÉPARER OU DE REMPLACER LE PRODUIT OU ENCORE D'OFFRIR UN REMBOURSEMENT COMPLET DE SON PRIX D'ACHAT, À SA SEULE DISCRÉTION. CE RECOURS SÉRA LE SEUL ET UNIQUE RECOURS DONT VOUS DISPOSERIEZ EN CAS D'INEXÉCUTION QUELLE QU'ELLE SOIT DE LA GARANTIE.

RESPONSABILITÉS DU CLIENT : En plus d'observer toutes les consignes et directives d'entretien, le client doit s'acquitter, entre autres, des obligations suivantes : utiliser le produit conformément aux consignes de la notice d'entretien et aux directives ou informations additionnelles fournies à l'acheteur au moment de l'achat ou à l'occasion de communications subséquentes ; faire preuve d'un soin raisonnable pour l'utilisation, le fonctionnement, l'entretien général, le maintien en bon état et l'entreposage du produit. Le manquement à ces obligations entraînera une annulation de la garantie applicable.

LISTE DES PÉRIODES DE GARANTIE APPLICABLES : La liste ci-dessous indique la période de garantie applicable aux divers produits Craftsman qu'elle couvre ; la période accordée tient compte du type de produit ou de composants et du type d'utilisation prévue ou effective de l'appareil ou du composant :

1. **90 JOURS** - Produits Craftsman devant être ou étant effectivement utilisés à des fins commerciales, institutionnelles, professionnelles ou lucratives.

2. **2 ANS** - Les produits de marque Craftsman suivants : tondeuses à conducteur porté, tracteurs de jardin, tondeuses à contrôle arrière, motobèches, débroussaillieurs, souffleuses à neige, souffleuses portatives, souffleuses dorsales, taille-bordures et produits électriques à usage non commercial, non institutionnel ou non lucratif, sauf les composants faisant partie de systèmes de moteur fabriqués par des tiers pour lesquels l'acheteur a reçu une garantie séparée ainsi que des renseignements sur le produit, au moment de l'achat.

3. **1 AN** - Produits de marque Craftsman suivants : coupeaux électriques, broyeuses de souches, ébrancheurs, scies à chaîne à essence, scies à chaîne électriques, accessoires de taille-bordures, sacs et scies à long manche utilisées à des fins non commerciales, non professionnelles, non institutionnelles et non lucratives.

4. **90 JOURS** - Toutes les batteries défectueuses, qui seront remplacées pendant une période de garantie de 90 jours.

5. **60 JOURS** - Une période de garantie additionnelle de 60 jours s'appliquera pour le réglage ou l'usure de produits ou de composants MAIS CETTE GARANTIE EXCLUT L'USURE ET LE RÉGLAGE de produits utilisés à des fins commerciales, institutionnelles, professionnelles ou lucratives. Les articles sujets à l'usure englobent, sans s'y restreindre : les courroies, lames, pneus, bougies, filtres à air, chaînes, bouillons de cisaillement, plaques de protection, barres de raclage, coupe-congères, cordons, dents, sacs collecteurs et poulies.

Étant donné que la période de garantie débute à la date d'achat et NON à la date à laquelle le produit est livré, l'emballage ouvert et l'appareil assemblé ou utilisé la première fois, assurez-vous que votre produit ou composant est assemblé et mis à l'essai pour en vérifier le bon fonctionnement, quel que soit le moment où vous prévoyez commencer à l'utiliser réellement. Les réclamations présentées après l'expiration de la garantie ne seront pas acceptées.

PREUVE D'ACHAT ET DOCUMENTS : La protection de la garantie est conditionnelle à la présentation par l'acheteur initial, à Sears Canada ou à son fournisseur de service autorisé s'il y a lieu, de la facture ou de toute autre preuve d'achat appropriée indiquant la date de l'achat et désignant le produit. Dans le cas où l'acheteur initial serait dans l'impossibilité de fournir une copie de sa facture, Sears Canada Inc. se réserve le droit d'établir, à sa seule discrétion, quelle autre preuve écrite de la date d'achat initial et de la désignation du produit est acceptable.


TRACTEUR - - NUMÉRO DE MODÈLE 944.604350
TRANSMISSION "TUFFTORQ" - NO. DE MODÈLE K57R

NO. DE RÉF.	NO. DE PIECE	DESCRIPTION
-------------------	--------------------	-------------

7	532 41 43-95	Soupape le bouche d'aération 15
8	532 41 43-96	Almant
13	532 41 43-98	Commande de dérivation
15	532 41 43-99	Chapeau 30
19	532 41 44-01	Bague en o 1a p10a
20	532 41 44-02	Joint d'étanchéité 1c 153507
34	532 41 44-04	Bague en e 15
48	532 41 44-20	Chevillie
53	532 41 44-31	Levier f
55	532 41 59-24	Rondelle 12
58	532 41 59-25	Goupille mécanidus 6 * 40
59	532 41 59-26	Bague en o 1a p14
60	532 41 59-27	Ecro 12
72	532 41 44-07	Joint d'étanchéité 19 * 32 * 8
76	532 41 44-08	Levier de frein
78	532 41 44-09	Ressort de rappel du frein
80	532 41 44-10	Chevillie 5 * 32
81	532 41 44-11	Bague en o 1a p12
82	532 41 44-12	Chevillie 4 * 16
83	532 41 44-13	Collier
84	532 41 44-14	Pouille l
85	532 41 44-15	Ventilateur
86	532 41 44-16	Rondelle
87	532 41 44-17	Bague en ressort
90	532 41 44-18	Chevillie 3.0A * 20
91	532 41 44-19	Joint d'étanchéité 16 * 22 * .03
95	532 41 48-50	Chevillie 3.0A*16
114	532 40 44-54	Natte
117	532 41 59-30	Vis 8 * 20
118	532 41 59-29	Support interrupteur
119	532 41 59-28	Interrupteur

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

LES ILLUSTRATIONS NE
PEUVENT PAS REPRÉSENTER
EXACTEMENT LE MODÈLE

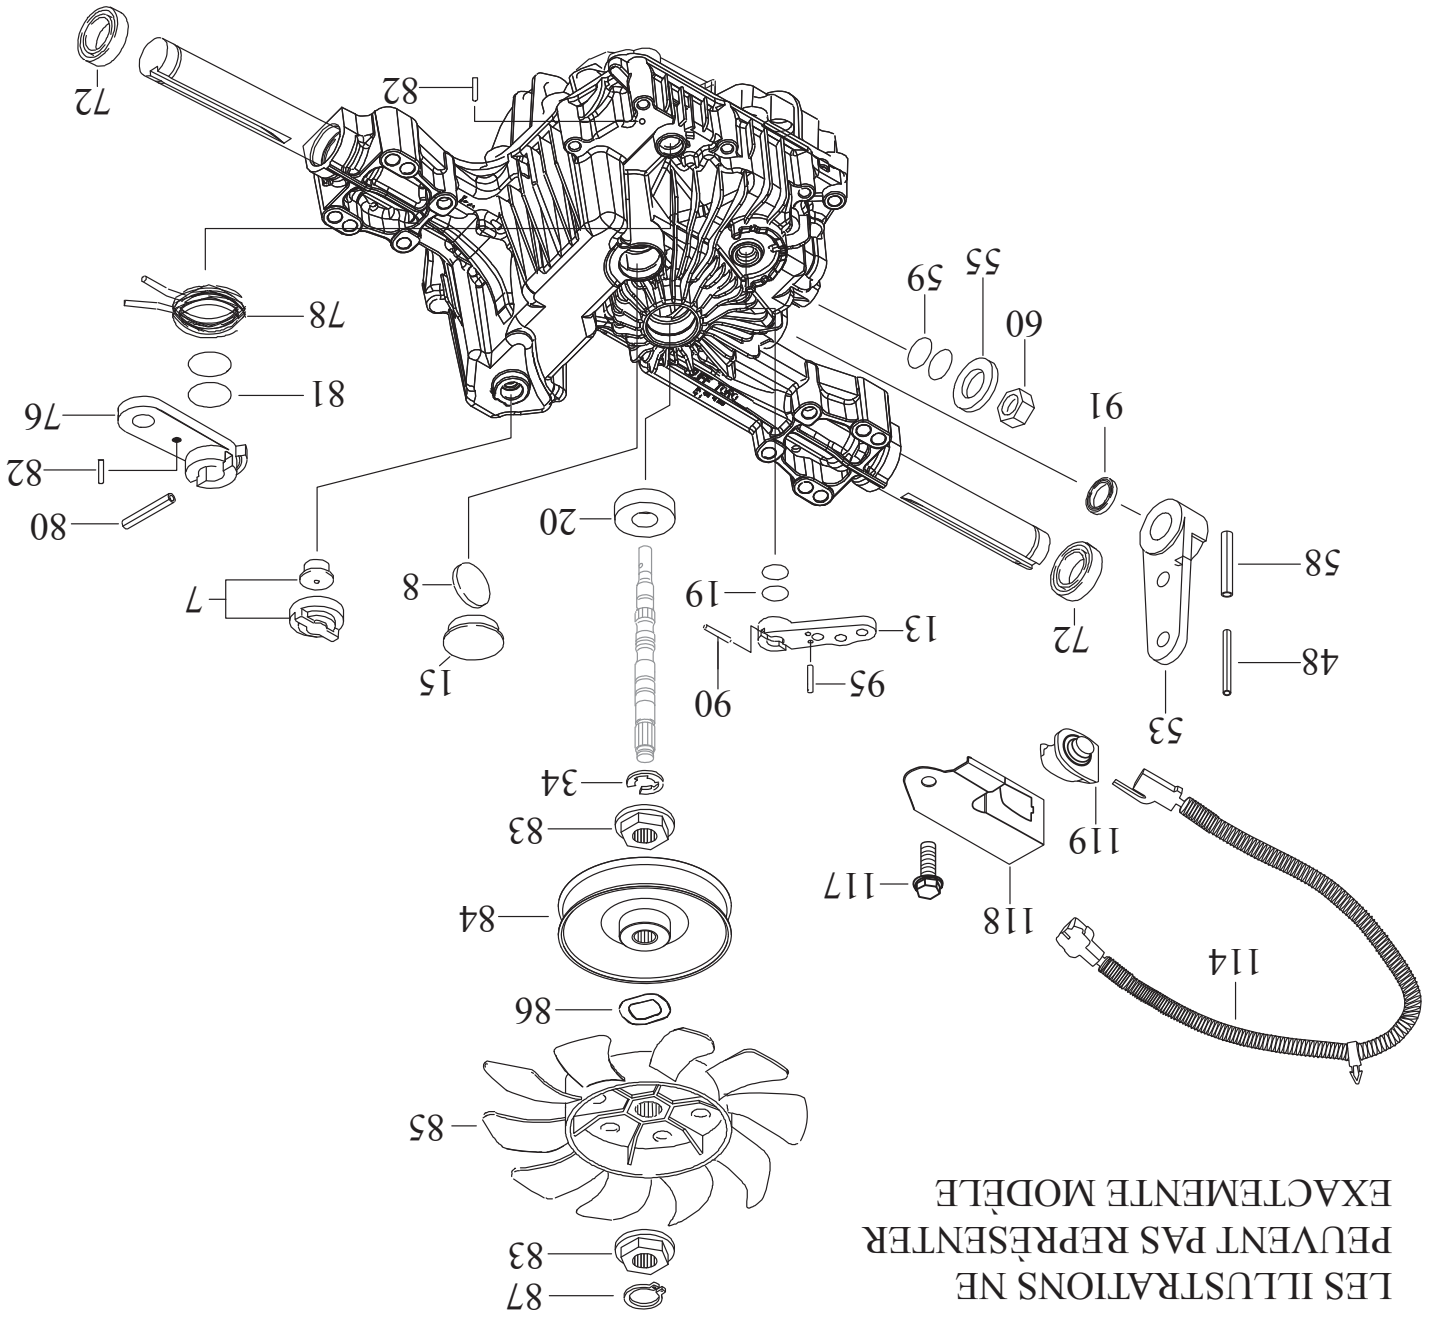

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

MOTEUR "BRIGGS & STRATTON" - NO. DE MODÈLE 44S777, NO. DE TYPE 0013-G1

NO.	DÉ.	PIÈCE	DESCRIPTION	NO.	DÉ.	PIÈCE	DESCRIPTION
552A		690553	Douille, Manivelle du Régulateur	1040	791237		Plat d'équilibre
562		690311	Vis de Levier de Régulateur	1051	691265		Circlip
573		790444	Plat-En arrière	1058	381258TRI		Le manuel de l'opérateur
601		691038	Bride de Serrage de Tuyau (Black)	1059	698516		Jeu, Vis/Rondelle (Alternateur)
615		698290	Attache, Arbre de Régulateur	1070	592604		Vis, Ventilateur de Volant du Moteur
616		691045	Manivelle du Régulateur	1090	691293		Arrêt-oir de brosse
617		697891	Anneau de Joint-o (tubulure de prise)	1095	694013		Fixée, Garnitures du Soupape
633		699813	Siège de Arbre de Starter / Papillon (Red)	1100	791959		Pivot, Tige à Frein
633A		690998	Siège de Arbre de Starter / Papillon	1119	691183		Vis, Alternateur
635		665385	Coude de Bougie d'allumage	1123	690987		Anneau de Joint-O (Solénoïde)
654		690958	Ecro (Carburateur)	1124	841653		Anneau de Joint-O (renvoi des billes de carburant)
658		691500	Entretoise, Support de Commande	1124A	690988		Anneau de Joint-o (renvoi des billes de carburant)
668A		691215	Entretoise, Support de Commande	1126	690991		de carburant)
672		690234	Plat de Garniture-Carburateur	1127	695407		Vis, Cuve de Flotteur
691		790574	Joint d'axe du Gouverneur	1128	690990		Vis (bec de carburateur)
697		591909	Vis, Moteur de Rebobinage	1146	690991		Vis
703		691010	Agrafe	1169	690990		Vis (plat de carburateur)
718		690959	Goupille de Emplacement	1329	N/A		Moteur de rechange (Non disponible)
729		797454	Agrafe-Fil	1330	N/A		Réparez le manuel a été imprimé)
741		690980	Vitesse de Distribution	1353	699725		Anneau de Joint-O (tuyau de carbu-
742		690328	Bague en E				lorsque le manuel a été imprimé)
750		796208	Vis, (Pompe de Couvrir-Huile)				lorsque le manuel a été imprimé)
783		695708	Vitesse-Fignon				
789		591392	Harnais-Câblage				
797		693167	Ecro				
798		697890	Vis, Couverture de Balancier				
801		691283	Chapeau-Conduisez				
802		691286	Monture				
842		691031	Joint Torique, d'étanchéité				
847		499602	Ensemble des Tube et Jauge de Rem-				
850		100106	Mastic-Liquide				
851		493880S	Borne, Bougie d'allumage				
855		591667	Guide de Couvrir-Air (vallée)				
868		690968	Joint d'étanchéité, Soupape				
883		690970	Garniture d'échappement				
914		691127	Vis, Couverture de Balancier				
918		797408	Tuyau-Vide (couverture de culbuteur)				
918A		799160	Tuyau-Vide (EVA-P)				
929		695239	Vis (support de commande de bobine)				
943		796222	Anneau de Joint-O (couverture de				
943A		690589	pompe d'huile) (carré)				
947		798779	Solénoïde-Carburant				
964		799159	Chapeau-Connecteur				
965		796221	Pompe de Couvrir-Huile				
967		792303	Décapant de Filtre-Pré				
968		795120	Décapant de Couvrir-Air				
975		796777	Cuve de Carburateur				
987		691000	Axe de Joint-Commande de puis-				
1005		791236	Ventilateur de Volant du Moteur				
1012		692556	Jonction de retenue				
1013		690954	Filtre de Mamelon-Huile				
1017		796214	Ecran de pompe d'huile				
1022		690971	Garniture, Couverture de Balancier				
1023		793146	Couverture de Balancier (Cyl. 1)				
1023A		499600	Couverture de Balancier (Cyl. 2)				
1024		796220	Pompe d'huile				
1026		690981	Tige à Frein (Steel)				
1026A		690982	Tige à Frein (Aluminum)				
1027		795890	Filtre à huile				
1029		690972	Bras de Balancier				
1029A		807323	Bras de Balancier				
1036		N/A	Jeu d'étriquette (Fourni par un reven-				
			deur autorisé Briggs & Stratton)				


REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350


MOTEUR "BRIGGS & STRATTON" - NO. DE MODÈLE 44S777, NO. DE TYPE 0013-G1

NO.	DÉ.	REF.	NO.	DÉ.	REF.	DESCRIPTION
1		591695	186B		845141	Tuyau-Connecteur (EVAF)
2		797673	187		791766	Tuyau, Essence
3		391086S	188		691108	Vis, Support de Control
4		796307	192		690083	Balancier de Réglaqe
5		799088	209		798921	Ressort, Régulateur (Orange)
5A		799089	211		691019	Ralent! Ressort-Régi (Aucune Cou-
7		693997	212		695238	Lien-Commande de puissance
8		792185	216		796229	Lien-Obstuez
9		690937	217		799771	Ressort-Obstuez le retour
10		691108	219		793338	Vitesse, Régulateur
11		792184	220		799772	Rondelle de Vitesse de Régulateur
13		793988	221		841026	Tasse-Gouverneur
15		690946	222		592555	Support du Carburateur
16		796237	227		798856	Ensemble du Levier de Régulateur
20		795387	231		690718	Vis (Valve de Bobine)
22		694966	240		695666	Filtre-Carburant
23		691053	250		690957	Arrêt!-Renfiard
24		222698S	252		794389	Col!ecteur-Huile
25		792023	265		691024	Clamp-Casing
26		792026	267		792629	Vis (Bride d'enveloppe)
27		690975	276B		794271	Rondelle-Cachetage
28		696581	287		697820	Vis de Tube de Jauge d'huile
29		796209	304		591668	Boîtier de Soufflerie
32		690976	305		691005	Vis, Boîtier de Soufflerie (1/4 20 x.66)
33		793557	305A		790690	Vis (ventilateur logeant au coude de
34		793556	305B		691061	Vis, Boîtier de Soufflerie
35		694865	306		591666	Protecteur de Cylindre (Cyl. 2)
36		694865	306A		796852	Protecteur de Cylindre (Cyl. 1)
42		499586	307		691003	Vis, Protecteur de Cylindre
45		690977	307A		691108	Vis, Protecteur de Cylindre (1/4 20
48		N/A	309		497595	Démarrreur de Rebobinage
50		591784	310		690323	Vis (Démarrreur de Rebobinage)
51		795123	311		497608	Série de brosse
51A		690950	332		691059	Ecrou de Volant
51B		690949	333		592846	Armature de Magneto
53		690951	334		691061	Vis
54		699816	337		792015	Bougie d'allumage
73		494439	358		694012	Jeu de la Garniture de Moteur
74		698425	367		697820	Vis (attache)
75		691056	377		690979	Cle
95		690718	385		797409	Vis (Pompe à Essence)
98		699721	387		808656	Pompe à Essence
104		694918	404		690442	Rondelle de Levier de Régulateur
105		797410	405		697820	Vis
108		699723	415		794903	Prise (couverture/arrêt!)
117		842585	431		798860	Plat-Carburateur
118		791502	445		792105	Cartouche de décapant de Filtre-Air
121		797890	462		691261	Rondelle
125		796997	467		790697	Décapant de Bouton-Air
130		690993	474		592830	Alternateur
131		499805	501		845907	Régulateur
133		699724	503		691532	Support du démarreur
135		699729	505		691029	Ecrou de Levier de Régulateur
141		796228	510		696541	Conduire-Démarrreur
142		796871	513		692024	Embrayage-Conduisez
150		841649	523		691036	Jauge de Remplissage d'huile
163		691001	524		691032	Joint d'étanchéité, Tube de Remplis-
186A		799158	525		691037	sage d'huile
186		795985	526		691108	Tube de Remplissage d'huile
188A		799158	552		796638	Douille, Manivelle du Régulateur
189		799158	552		796638	Vis (Régulateur)
190		799158	552		796638	Tuyau-Connecteur (Coude de prise)
191		799158	552		796638	Garniture de Filtre à Aire
192		799158	552		796638	Garniture-Bec
193		799158	552		796638	Cle de la Distribution
194		799158	552		796638	Bec-Carburateur
195		799158	552		796638	Jeu-Obstuez l'axe
196		799158	552		796638	Garniture du Flotteur
197		799158	552		796638	Tube d'essence
198		799158	552		796638	Ens. de Flotteur de Carburateur
199		799158	552		796638	Jeu-Axe de commande de puissance
200		799158	552		796638	Soupape de Commande des Gaz
201		799158	552		796638	Carburateur
202		799158	552		796638	Jeu de Carburateur
203		799158	552		796638	Giclette
204		799158	552		796638	Giclette (Haute altitude) (C.G. et C.D
205		799158	552		796638	Giclette
206		799158	552		796638	Giclette (Standard) (C.G. et C.D Gi-
207		799158	552		796638	Soupape à Starter
208		799158	552		796638	Soupape de Aiguille
209		799158	552		796638	Axe de Charnière de Flotteur
210		799158	552		796638	Jeu de Vitesse à Vide
211		799158	552		796638	de Commande des Gaz
212		799158	552		796638	Vis à Sems de Montage de Soupape
213		799158	552		796638	Rondelle (Volant Magneto)
214		799158	552		796638	Vis (Ecra)
215		799158	552		796638	Ecra
216		799158	552		796638	Vis (Intake Manifold)
217		799158	552		796638	Stud (Carburateur)
218		799158	552		796638	Garniture de Coude d'admission
219		799158	552		796638	Garniture de Coude d'admission
220		799158	552		796638	Garniture de Coude d'admission
221		799158	552		796638	Coude de prise
222		799158	552		796638	manuel a été imprimé)
223		799158	552		796638	Bloc Court (Non disponible lorsque le
224		799158	552		796638	Engrenage de Came
225		799158	552		796638	Poussoir à Soupape
226		799158	552		796638	Guide à Soupape
227		799158	552		796638	Ressort de Soupape d'échappement
228		799158	552		796638	Ressort de Soupape d'admission
229		799158	552		796638	Soupape d'admission
230		799158	552		796638	Soupape d'échappement
231		799158	552		796638	Vis de Bielle
232		799158	552		796638	Ensemble de la Bielle
233		799158	552		796638	Axe de Piston
234		799158	552		796638	Verrou de l'axe de Piston
235		799158	552		796638	Jeu, Segments de Piston, 0,020" OS
236		799158	552		796638	Jeu des Segments de Piston, Std.
237		799158	552		796638	Ensemble du Piston, 0,020" OS
238		799158	552		796638	Ensemble du Piston, Standard
239		799158	552		796638	Cle de Volant
240		799158	552		796638	Volant Magneto
241		799158	552		796638	Vis de Montage de Bac à Sems
242		799158	552		796638	Bague d'étanchéité (Côté PTO)
243		799158	552		796638	Villebrequin
244		799158	552		796638	Bouchon de Vidange d'huile
245		799158	552		796638	Vis de Tête de Cylindre
246		799158	552		796638	Garniture du Carter-moteur
247		799158	552		796638	Tube de Renfiard
248		799158	552		796638	Vis (Assemblée de renfiard)
249		799158	552		796638	Garniture de renfiard
250		799158	552		796638	Assemblée de renfiard
251		799158	552		796638	Garniture de la Tête de Cylindre
252		799158	552		796638	Tête de Cylindre (Cyl 2)
253		799158	552		796638	Tête de Cylindre (Cyl 1)
254		799158	552		796638	Carter de vidange-Moteur
255		799158	552		796638	Bague d'étanchéité (Côté Magneto)
256		799158	552		796638	Douille de Cylindre (Côté Magneto)
257		799158	552		796638	Ensemble du Cylindre

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350
MOTEUR "BRIGGS & STRATTON" - NO. DE MODÈLE 44S777, NO. DE TYPE 0013-G1

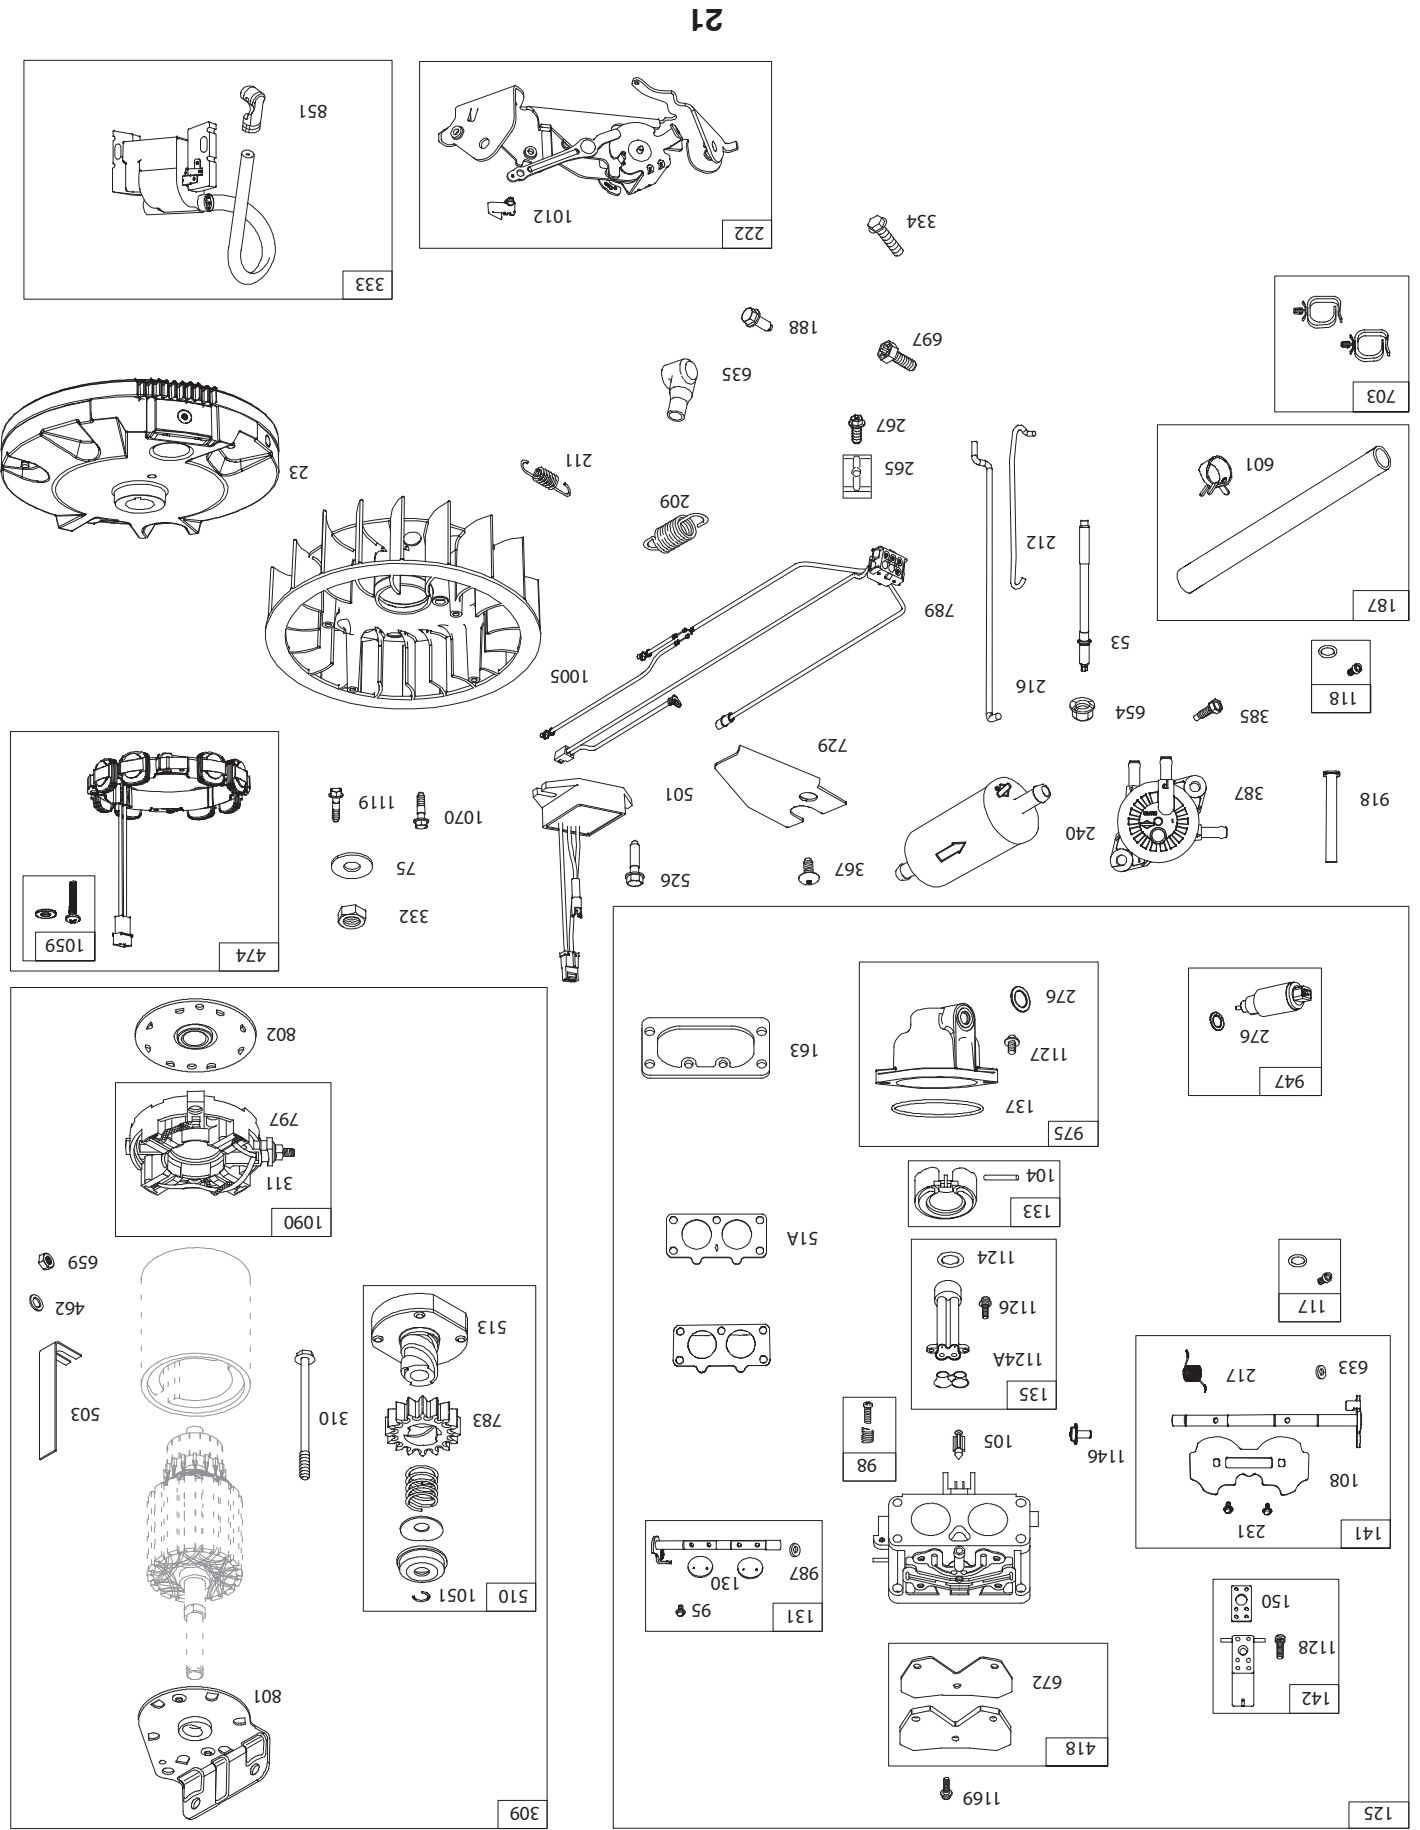

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350 MOTEUR "BRIGGS & STRATTON" - NO. DE MODÈLE 44S777, NO. DE TYPE 0013-G1

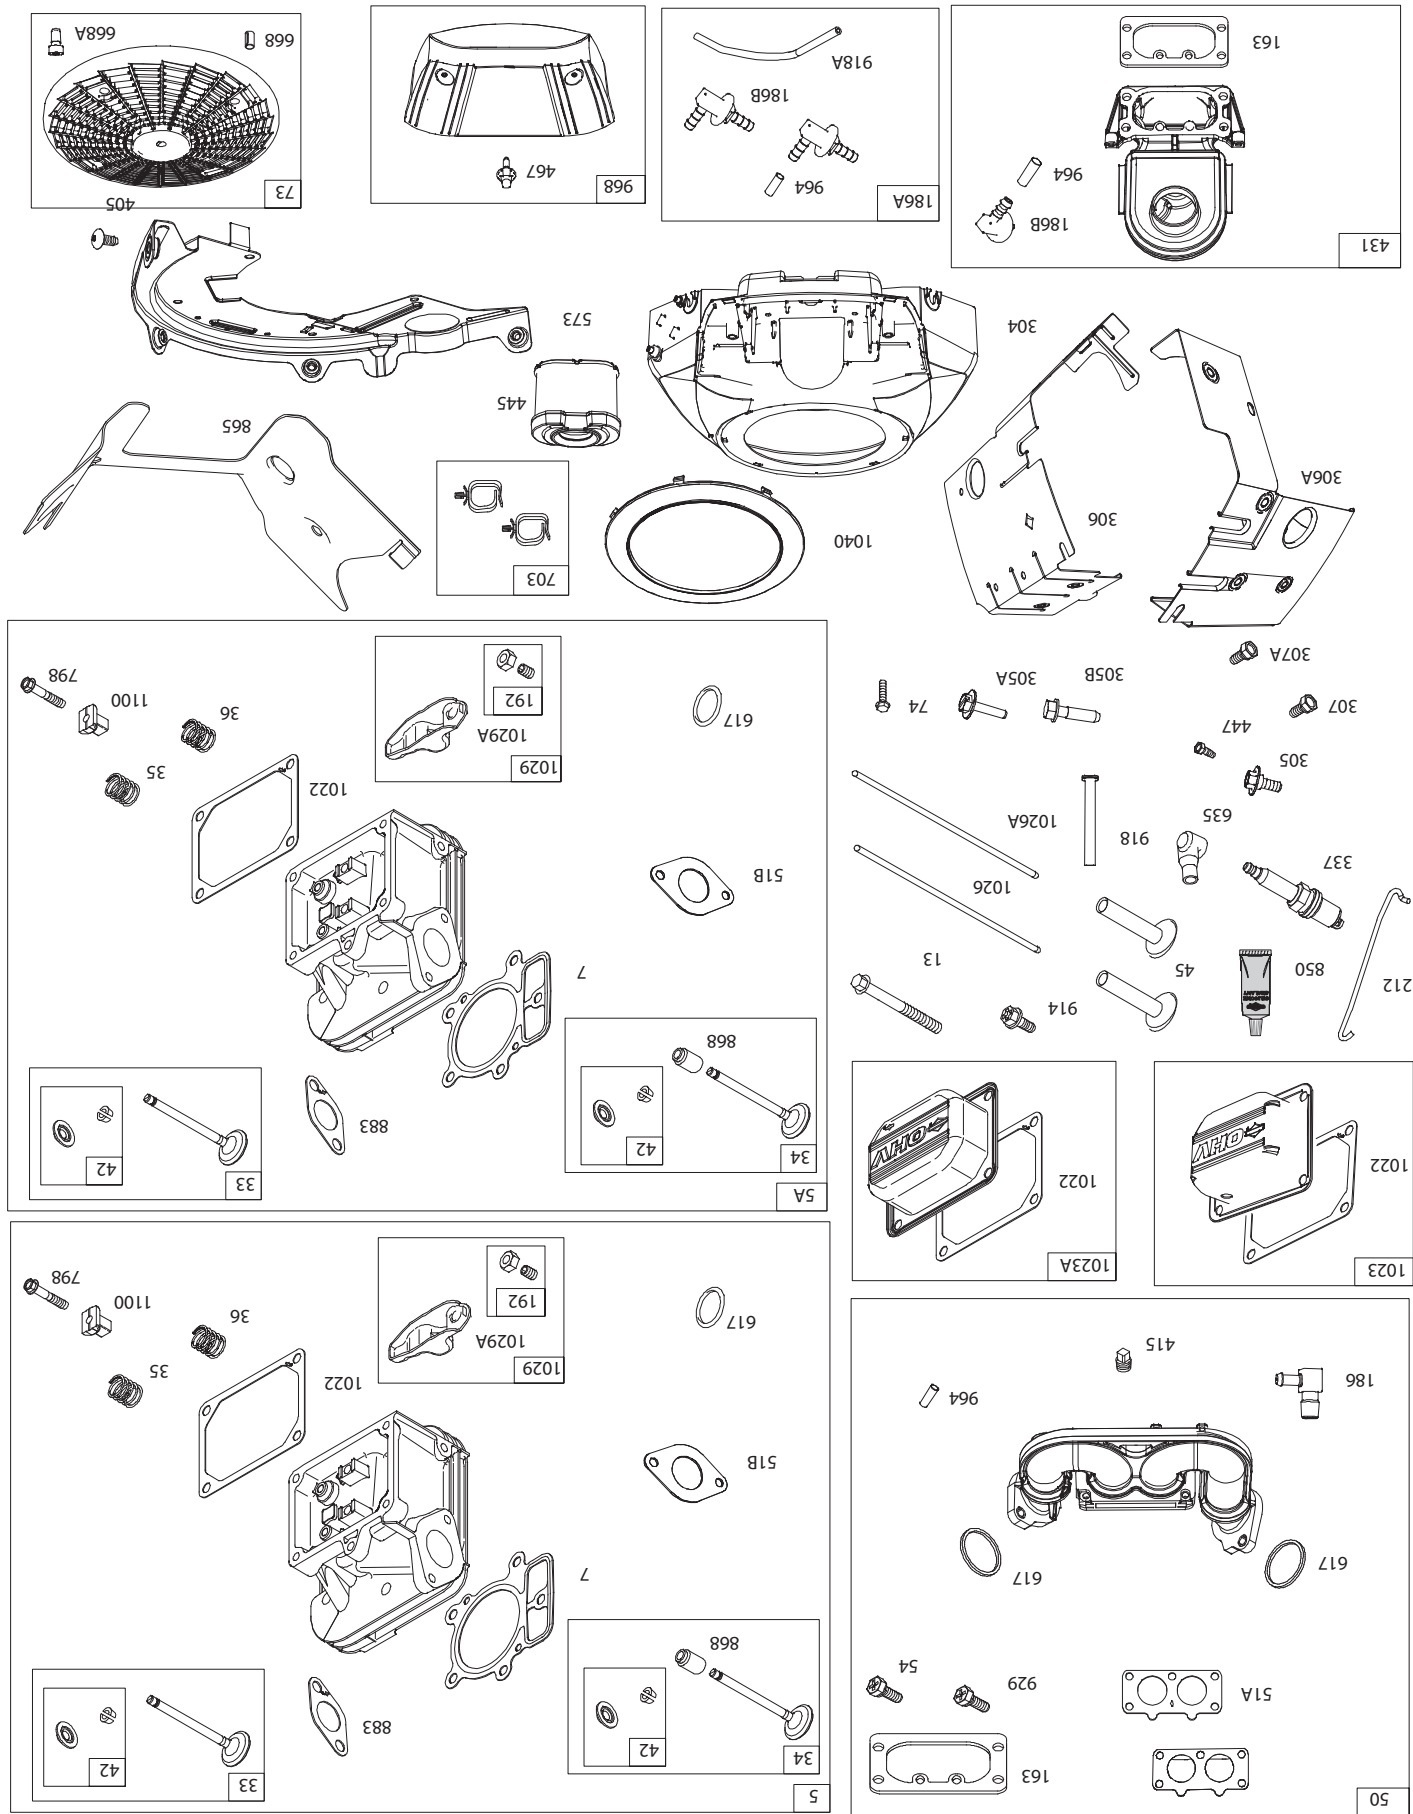







TRACTEUR - - NUMÉRO DE MODÈLE 944.604350 MOTEUR "BRIGGS & STRATTON" - NO. DE MODÈLE 44S777, NO. DE TYPE 0013-G1


48 BLOC COURT

1036 EMISSIONS ETIQUETENT

1058 MANUEL DE L'OPÉRATEUR


1329 MOTEUR DE RECHANGE

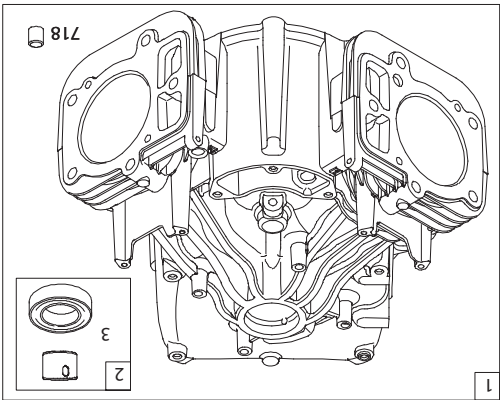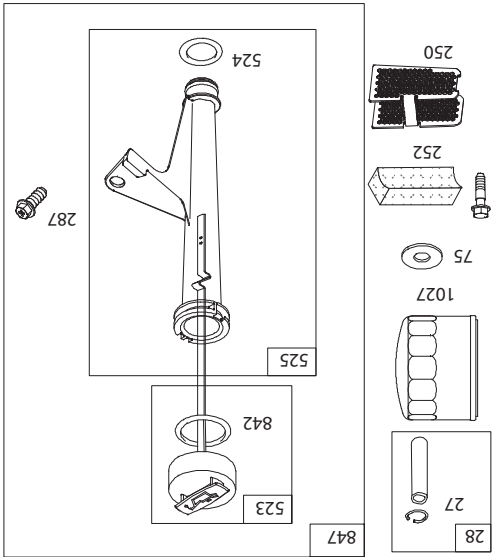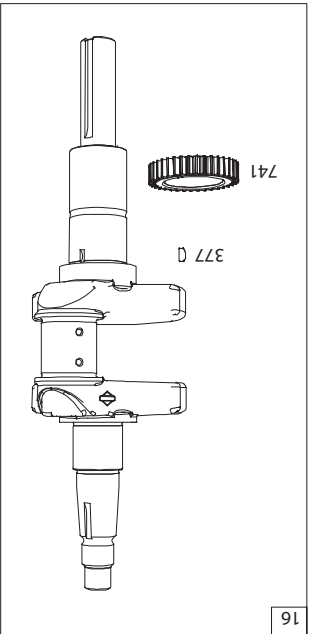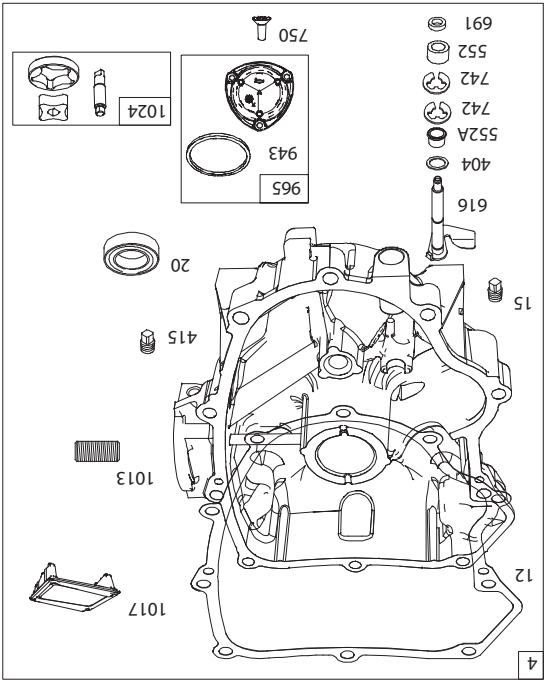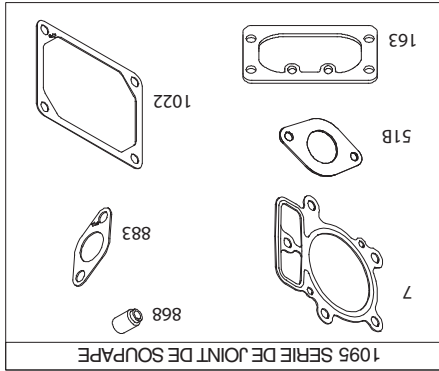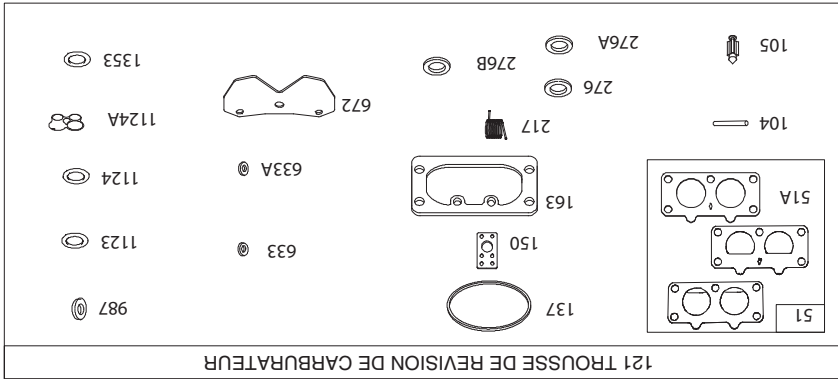

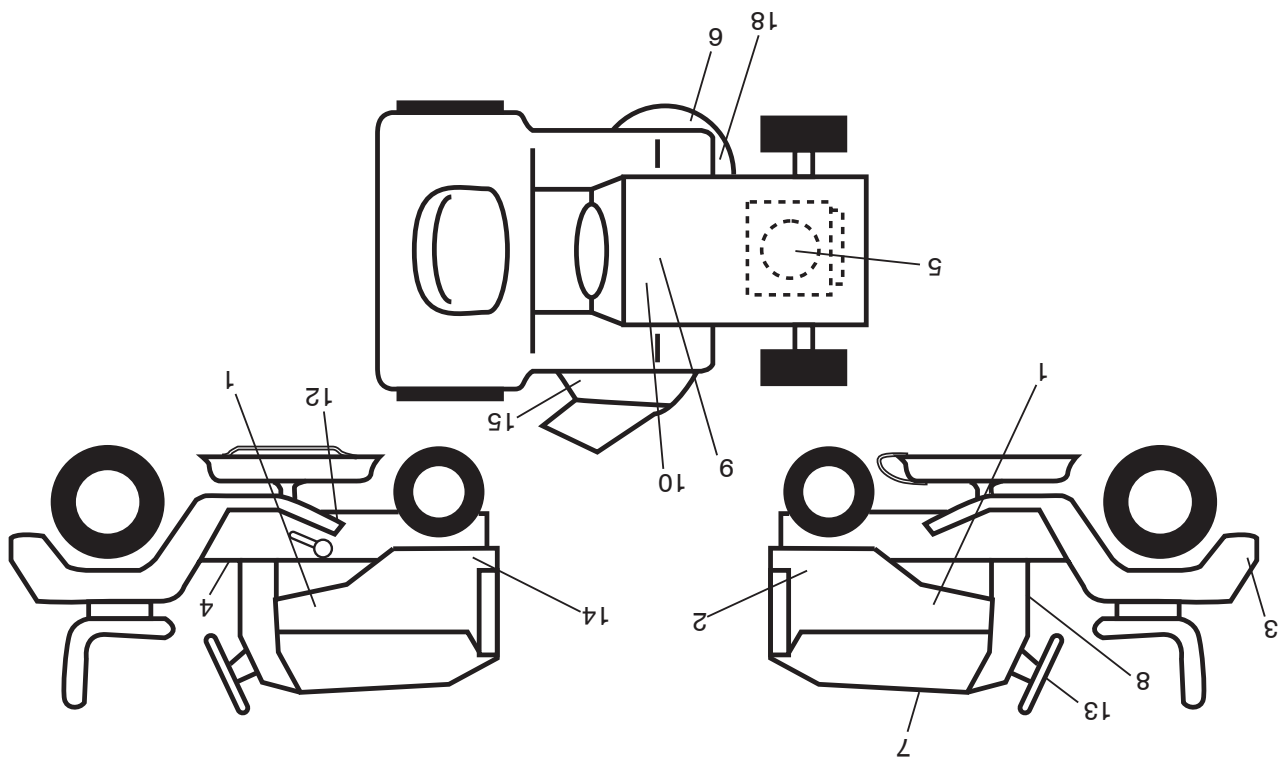

NO. DÉ.	REF.	NO. DÉ.	DESCRIPTION
1	585767601	1	Décalcomanie du capot
2	586393801	2	Décalcomanie de l'aille C.D.
3	441122	3	Décalcomanie de l'aille
4	581579001	4	Décalcomanie d'avertissement
5	586620701	5	Décalcomanie du moteur
6	581580002	6	Décalcomanie Courroie
7	580385801	7	Décalcomanie
8	581579901	8	Décalcomanie d'avertissement
9	149517	9	Décalcomanie d'avertissement de bat-
			terie
10	448709	10	Décalcomanie de batterie
12	421534	12	Décalcomanie de courroie
13	581894601	13	Décalcomanie de direction


ROUES & PNEUS

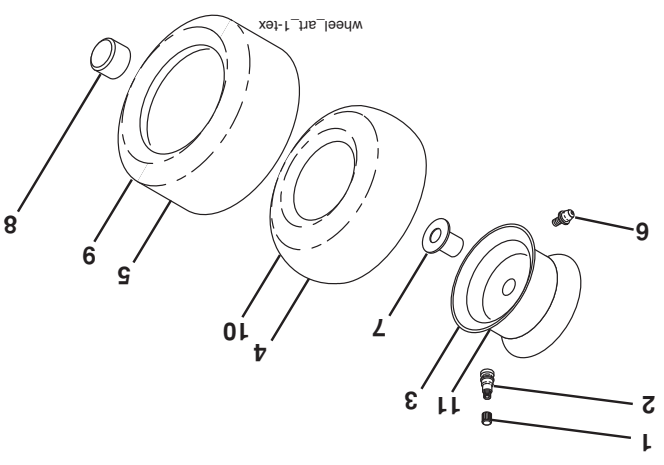

NO. DÉ.	REF.	NO. DÉ.	DESCRIPTION
1	59192	1	Capuchon de la valve du pneu
2	65139	2	Tubulure de la valve
3	106732X613	3	Ensemble de la jante antérieure
4	59904	4	Chambre à air antérieure
5	106222X	5	Pneu antérieur 15 x 6-6
6	278H	6	Graisneur (roue antérieure seulement)
7	9040H	7	Palier à bride (roue antérieure seule-ment)
8	104757X428	8	Chapeau de l'essieu
9	138468	9	Pneu arrière 20 x 8-8
10	7152J	10	Chambre à air arrière
11	106108X613	11	Ensemble de la jante arrière
--	144334	--	Joint d'étanchéité de pneu (tube de .30L [10 oz. Tube])

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

ENSEMBLE DU SIÈGE




DESCRIPTION

DESCRIPTION

REMARQUE: Toutes les dimensions de composant sont données en mm.

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

LEVAGE DE LA TONDEUSE

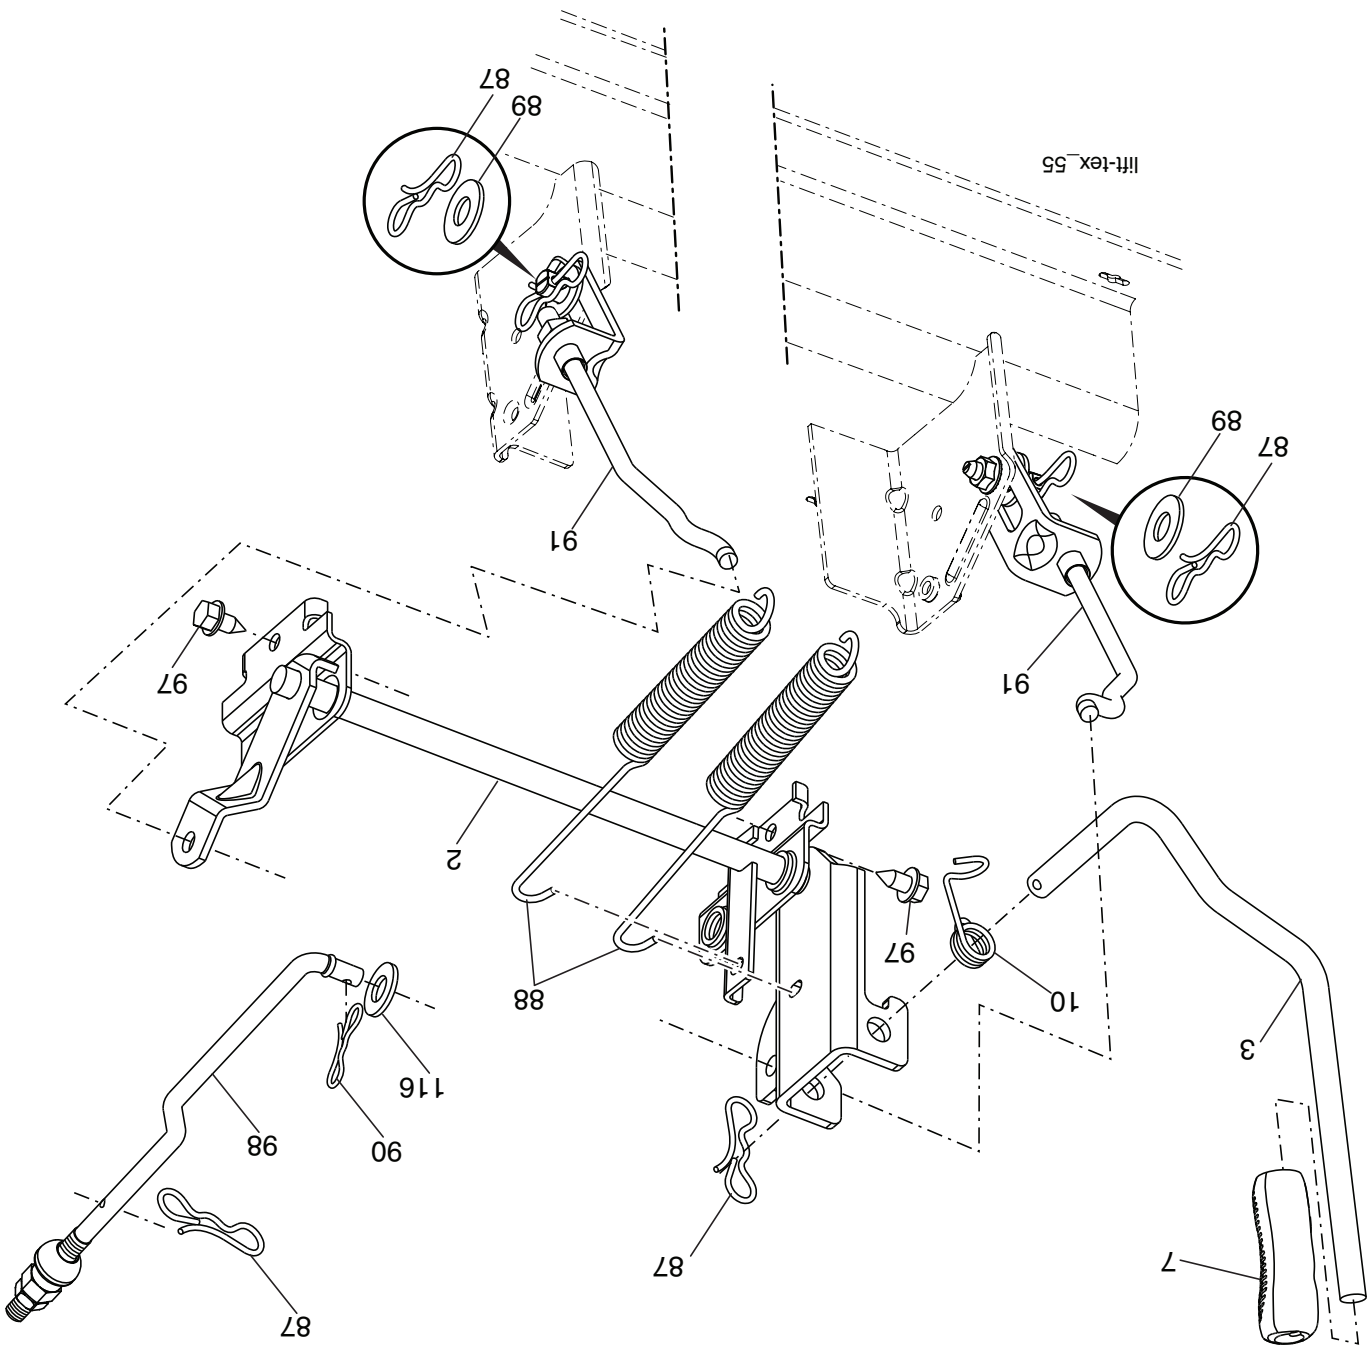

NO.
DE
PIECE

DESCRIPTION

422027 Ensemble de l'arbre de levage C.D.
426896 Ensemble de l'arbre de levage C.D.
7 Poignée cannelée du levier
10 Ressort de Torsion
87 Goupille fendue 7/16
88 Ressort de retenue
89 Rondelle
90 Goupille fendue 5/16

NO.
DE
PIECE

DESCRIPTION

91 403407 Raccord de levage
97 17000612 Vis 3/8-16 x 3/4
98 195264 Raccord de levage
116 19151516 Rondelle 15/32 x 15/16 x 16 Ja.

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

CARTER DE TONDEUSE


NO. DE REF.	PIÈCE	DESCRIPTION	NO. DE REF.	PIÈCE	DESCRIPTION
1	195632X613	Carter De Tondeuse	102	71081010	Vis
6	196066	Mandrin de logement C.G.	103	19061216	Rondelle
7	197181	Mandrin de logement C.D.	104	10071000	Rondelle
11	187256	Lame	105	160793	Loquet
12	404851	Tige	106	2029J	Ecrou
13	587256401	Roulement à billes	113	72110508	Boulon 5/16-18 x 3/4
14	187281	Mandrin de logement	114	187556	Tige
15	585323901	Roulement à billes, mandrin	116	193406	Boulon
16	19131312	Rondelle 13/32 x 13/16 x 12 Ja.	117	174873	Roue de jauge
18	72140505	Boulon 5/16-18 unc x 5/8	120	19132012	Rondelle 13/32 x 1-1/4 x 12 Ja.
19	194208	Epingle	122	187557	Coussinet
21	73680500	Ecrou 5/16-18 unc	184	73900500	Ecrou 5/16-18
24	105304X	Chapeau	185	73900700	Ecrou 7/16-14 Cat. 5
25	178102	Ressort de torsion	187	195161	Fixation à goujon
26	110452X	Ecrou	189	195185	Suspension arrière
27	187257X428	Défecteur de bouclier	190	196539	Boulon
29	131491	Tige	192	198468	Garde de poulie
30	173984	Vis	194	74490736	Boulon 7/16-24
32	153535	Poulie de mandrin	196	72140620	Boulon 3/8-16 x 2-1/2 Cat. 5
33	400234	Ecrou	241	152927	Vis
34	73680600	Ecrou 3/8-16 unc	242	415598	Raccord de lavage
35	584309301	Vis	- -	416405	Connecter d'accouplement du rapide
39	197380	Poulie de renvoi	- -	587125401	Ensemble du mandrin (inclut boîtier
43	196065	Le bras du tendeur	- -	-	(clé #14), ensemble arbe (clé #13), et
46	137729	Vis 1/4-20 x 5/8	-	-	palier seulement (clé #15) - poulie/écrou/
47	587686701	Courroie	-	-	rondelle et lame, boulon/rondelle ne pas
49	73900600	Ecrou 3/8-16 unc	-	-	inclut)
50	72110616	Vis 3/8-16 x 2-1/4	- -	403349	Remplacer Tondeuse
52	197379	Poulie de renvoi	- -	-	-
58	187342	Chicane (C.D.)	- -	-	-
59	187344	Chicane (C.G.)	- -	-	-
60	187607	Chicane	- -	-	-
97	178515	Rondelle	- -	-	-
98	196105	Ressort	- -	-	-
101	187298	Jeu de broyeuse	- -	-	-

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

CARTER DE TONDEUSE

mower_deck 54-tex_40

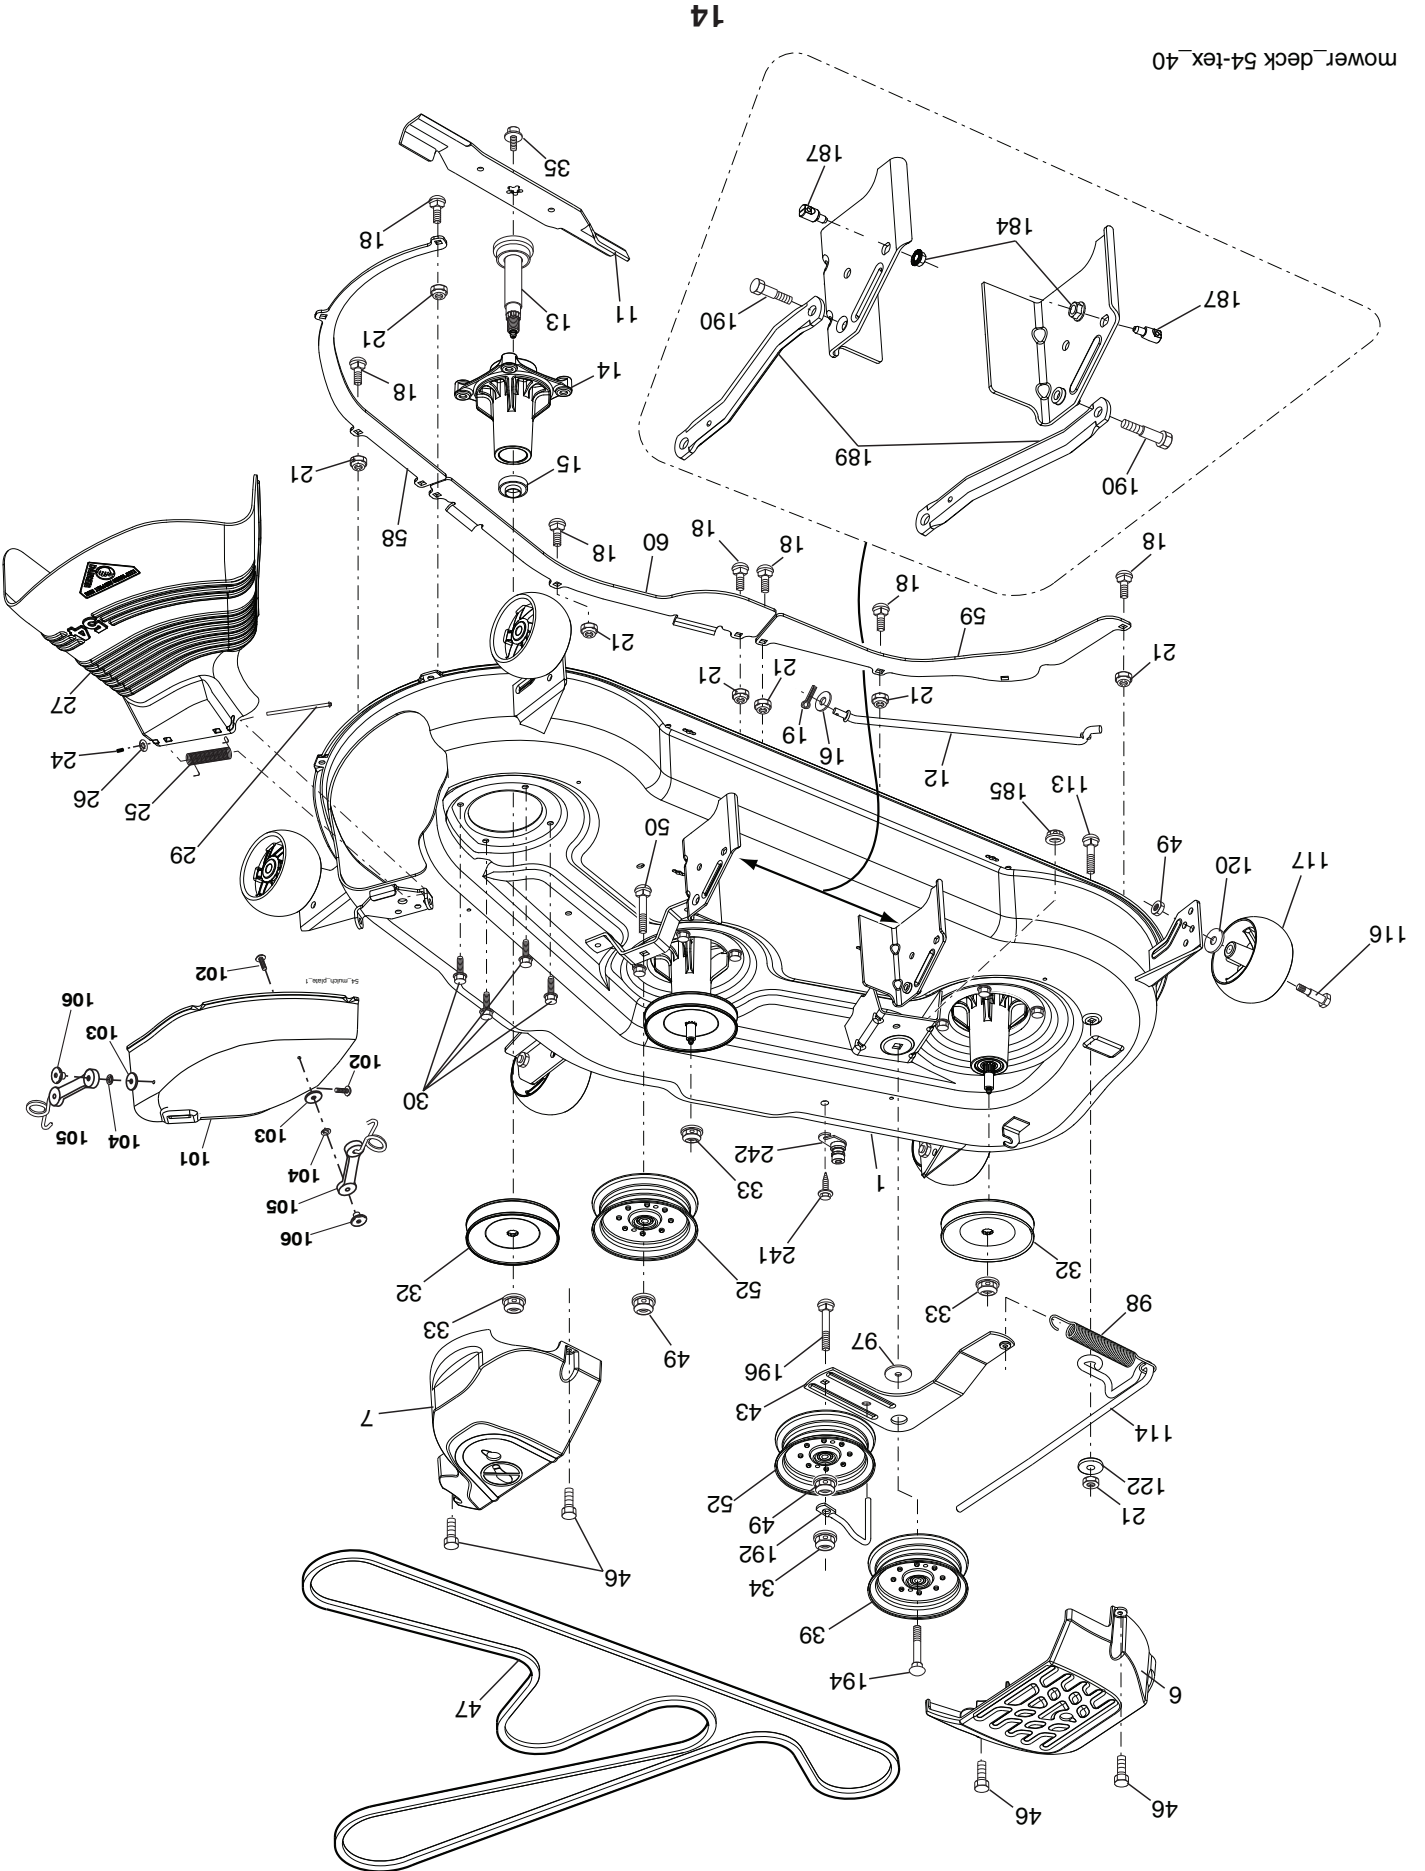


TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

ENSEMBLE DE LA DIRECTION

NO.	DE	NO.	PIÈCE	DESCRIPTION
1		414851X428		Volant de direction
2		436870		Axe avant Assembly
4		436873		Ensemble de la broche C.G.
5		436874		Ensemble de la broche C.D.
6		6266H		Roulement
7		121748X		Rondelle 25/32 x 1-5/8 x 16 Ja.
8		12000029		Anneau d'agrafe #T5304-75
9		184946X667		Spindle Cape
13		121749X		Rondelle
14		10040600		Rondelle 3/8
15		73540600		Ecrou 3/8-24 unf
16		587016002		Arbre de direction
19		194729		Arbre de plaque
21		586840201		Adapteur de volant
22		585029901		Roulement
26		414852X428		Insertion de volant
27		19211616		Rondelle 21/32 x 1 x 16 Ja.
28		17000612		Vis 3/8-16 x 3/4
35		440770		Vitesse de plat de secteur
45		587016401		Rondelle 3/8 ID 2-3/8OD 12 Ga.
50		73900600		Ecrou 3/8-16 unc
53		188967		Rondelle .793 x 1.637 x .060
57		197246		Support
58		194747		Boulon
59		194748		Rondelle
60		73971000		Ecrou 5/8-11
61		436884		Bielle, C.G.
62		436885		Bielle, C.D.
63		17000512		Vis 5/16-18 x 3/4
64		199849		Ressort
66		71020748		Boulon 7/16-14 x 3 Serr
67		194737		Douille
68		73900700		Ecrou 7/16-14 Cat. 5
69		199162		Rondelle 1.5 x .505 x .118
70		196197		Support
75		580683701		Pignon
76		580683601		Vis
80		1370H		Rondelle
81		436887		Réticulation C.G.
82		442147		Pivot Boulon
85		441873		Pivot C.G.
86		441872		Pivot C.D.
122		444962		Chapeau

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

12

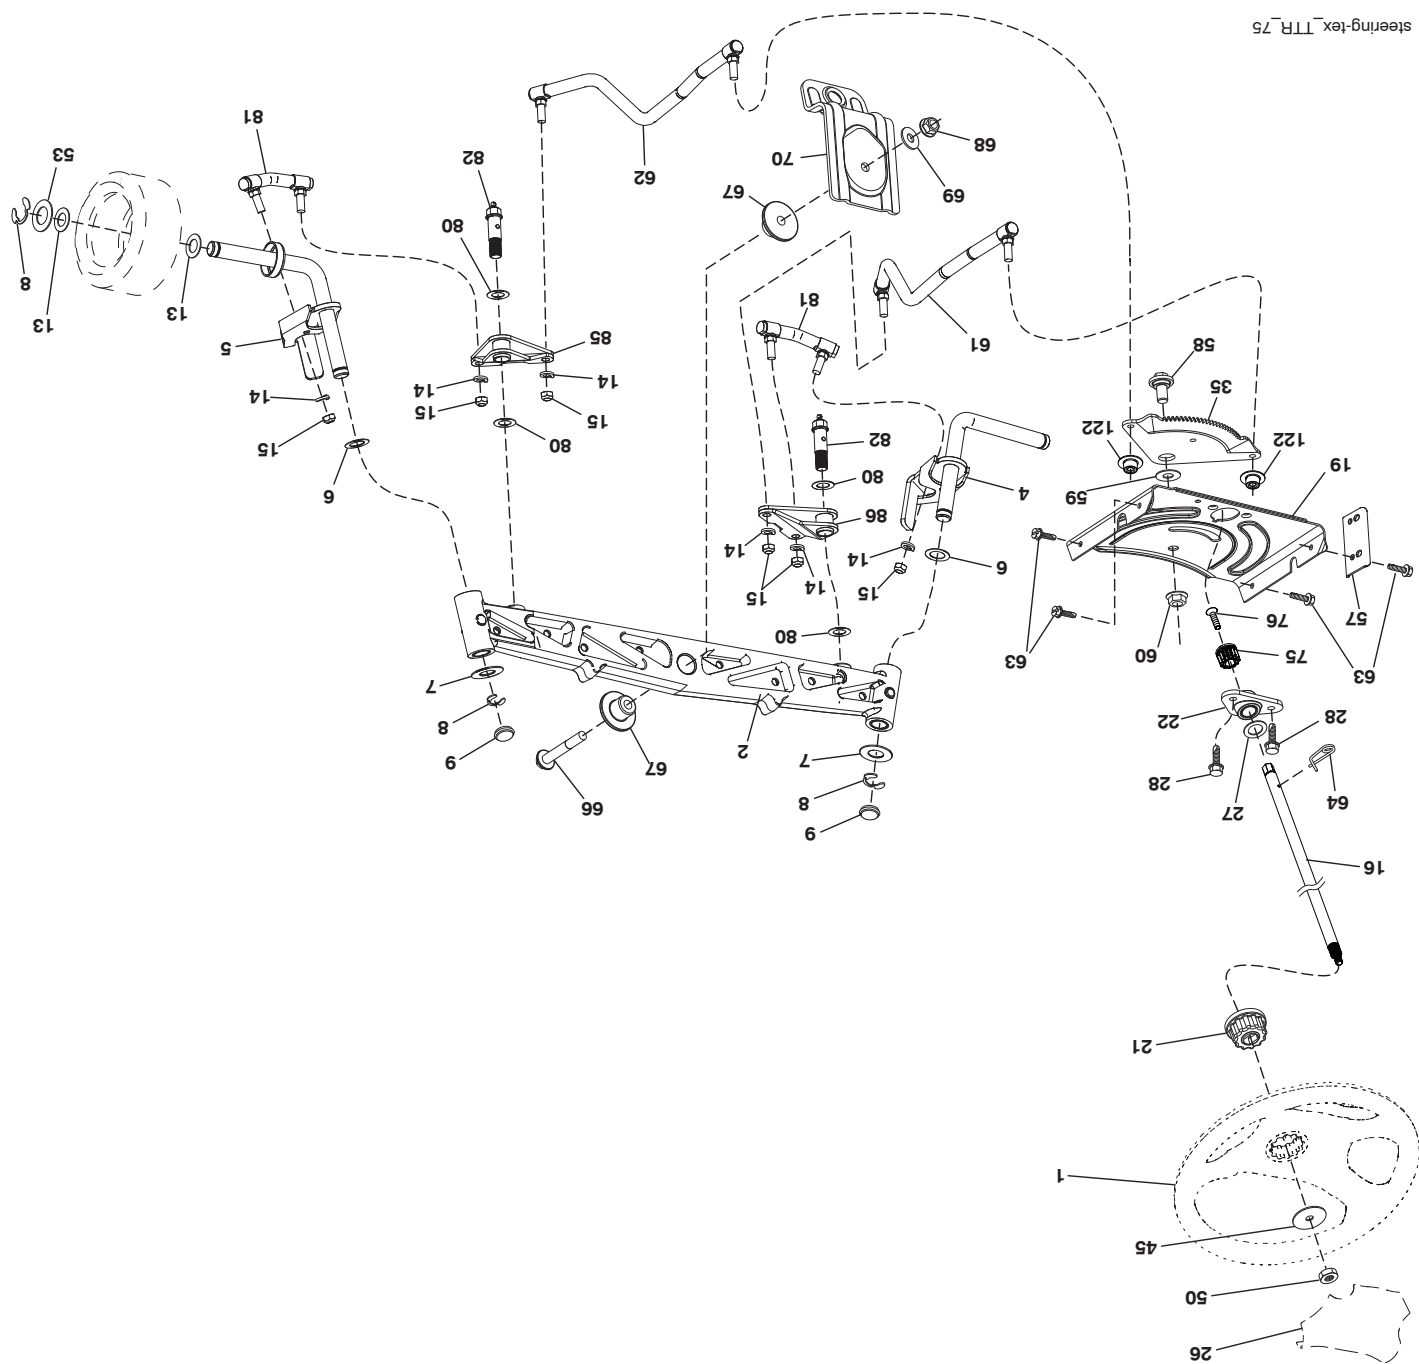

NO. DÉ.	NO. DÉ.	DESCRIPTION
1	---	Moteur B&S-No. de modèle 44S777-0013-G1 (586640401) (Voyez Les Détails De Moteur.)
2	149723	Silencieux
9	584908001	Ensemble de la guide courroie du moteur
11	587241601	Embrayage électrique
12	405097	Poulie
15	532438025	Réservoir d'essence 3.0
18	430214	Chapeau
20	421473X428	Commande des gaz
21	416358	Vis
28	8543R	Conduite d'essence
29	137180	Jeu de pare - étincelles
37	123487X	Bride de serrage de tuyau
41	126197X	Rondelle 1-1/2 OD x 15/32 ID x .250
42	10040700	Rondelle 7/16
45	73510400	Ecrou 1/4-20 unc
62	434017	Défecteur de débris
69	165391	Garniture de silencieux
70	581881101	Tube C.G.
71	581881001	Tube C.D.
79	183906	Vis 5/16-18 x 3/4
81	148456	Tuyau D'huile
82	428287	Soupape
84	17060620	Vis 3/8-16 x 1
85	179953	Boulon 7/16-20 x 3.75
90	17000616	Vis 3/8-16 x 1
91	187495	Bague
102	17000512	Vis 5/16-18 x 3/4

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

Informations concernant la puissance théorique du moteur

La puissance brute pour chaque Modèle de moteur à essence est indiquée conformément au code J1940 (procédure de calcul de la puissance et du couple des petits moteurs) de la SAE (Society of Automotive Engineers) et les performances théoriques ont été obtenues et corrigées selon SAE J1995 (révision 2002-05). Les valeurs de couple sont calculées sur la base de 3060tr/min et celles de puissance sur la base de 3600tr/min. La puissance brute réelle du moteur peut être plus faible notamment à cause des conditions de fonctionnement et des variations d'un moteur à l'autre. Compte tenu de la grande variété de machines sur lesquelles nos moteurs sont utilisés et du nombre de problèmes environnementaux applicables au fonctionnement des équipements, il se peut que le moteur à essence ne développe pas sa puissance théorique une fois qu'il est monté sur une machine particulière (puissance nette ou réelle «sur site»). Cette différence s'explique par un grand nombre de facteurs, tels que (liste non limitative): accessoires (filtre à air, échappement, admission, refroidissement, carburateur, pompe à essence, etc.), limites d'utilisation, conditions ambiantes d'utilisation (température, humidité, altitude) et variations d'un moteur à l'autre. Pour des raisons de fabrication et de capacité limitées, Briggs & Stratton est susceptible de remplacer ce Modèle par un moteur plus puissant.



TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

ENTRAÎNEMENT


NO. DE PIÈCE	DESCRIPTION
1	Transmission, Tufftorq K57R (437814)
2	Cle (Voir la assemblage de transmission.)
15	Rondelle 13/32 x 13/16 x 16 Ja.
17	Ressort
26	Ressort
29	Tige du frein
33	Bague en E
35	Tige du frein de stationnement
42	Couverture de la pédale
49	Boulon
50	Poulie du galet-tendeur
51	Ecroû 3/8-16
52	Galet-tendeur
56	Ceinture trapézoïdale
64	Axe
73	Boulon 5/16-18 Cat. 5
92	Boulon 5/16-18 unc x 1.25
99	Tige
116	Ecroû 5/16-18
125	Vis 5/16-18 x 3/4
143	Vis 5/16-18 x 1/2
153	Ressort
159	Pin 1/8 x 3/4
160	Goupille fendue
161	Ressort
163	De commande triangle de pédale
166	Ecroû
167	Frein à main
170	Garde
183	Axe
184	Poignée de frein à main
185	Boulon
186	Arrêtoir d'entretoise

NO. DE PIÈCE	DESCRIPTION
187	Rondelle
188	Raccord d'embrayage longue
189	Garde
190	Vis 3/8-16 x 1
197	Anti-rotation d'embrayage de lien
205	Rondelle
206	Support
207	Commandez le verrou de croisière
208	Boulon-Commandez la croisière
209	Commandez la croisière Rod
210	Culbuteur Assembly de commande
211	de pédale
213	Roulement en nylon
214	Commandez le bouton de croisière
215	Pédale vers l'avant
216	Pédale renversée
221	Poulie du galet-tendeur
222	Ressort
225	Rondelle
227	Garde
230	Vis
231	Rondelle
234	Poulie
325	Support
326	Support
334	Support
336	Boulon

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

ENTRAÎNEMENT

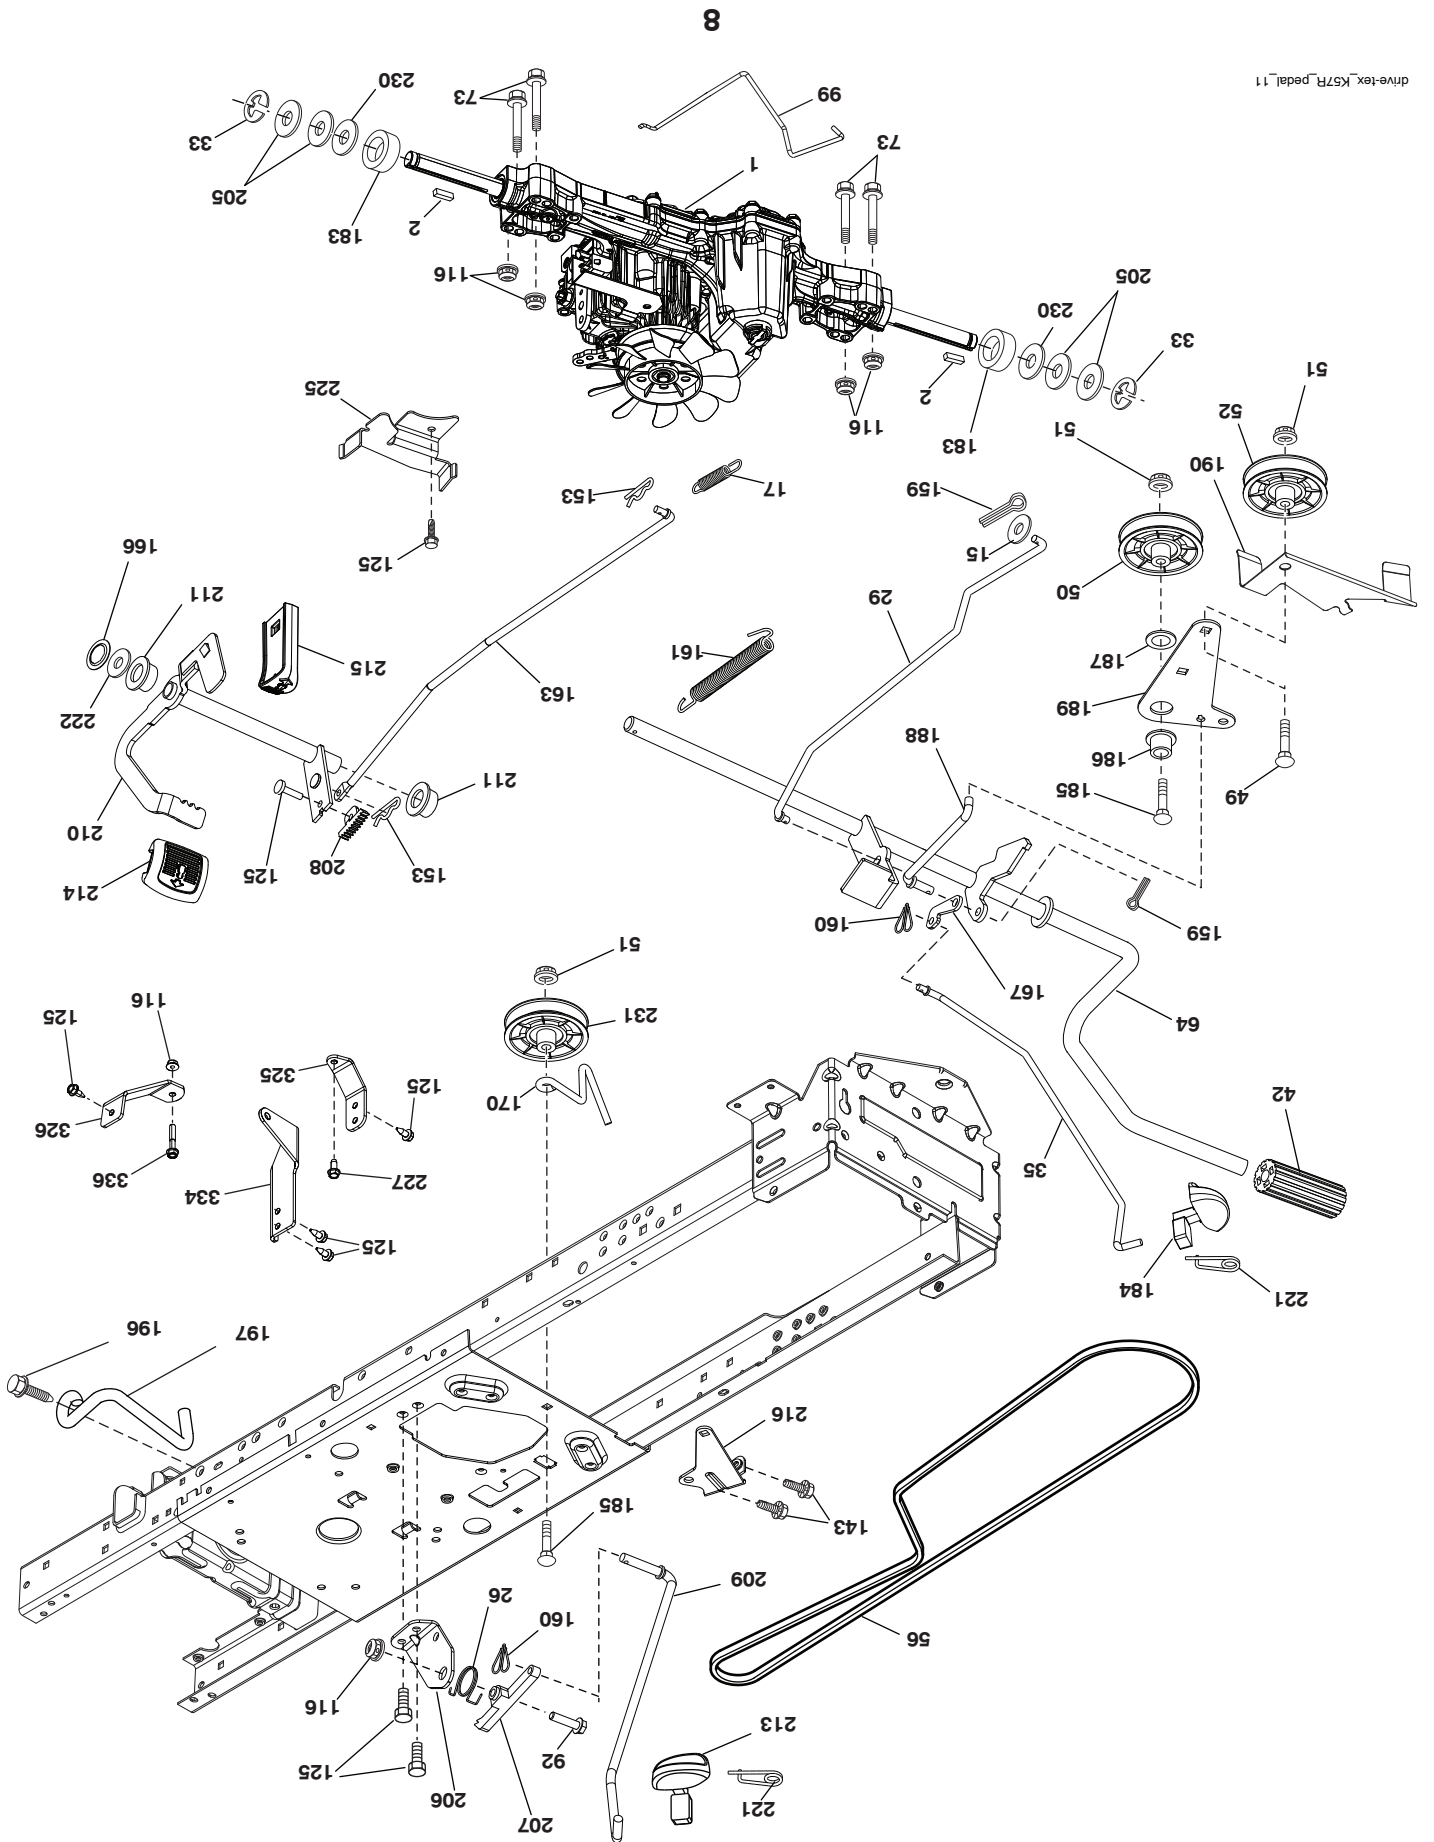


TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

CHÂSSIS/ENCEINTES

NO. DE PIÈCE	DESCRIPTION
5	580485806 Tableau de bord
14	580354407 Capot
15	580485601 Lentille CG
18	580485302 Calandre
25	580484501 Lentille CD
34	580910801 Plaque de moteur
35	19111116 Rondelle 11/32 x 11/16 x 16 Ja.
36	17060512 Vis 5/16-18 x 3/4
37	414878X428 Aile
52	73680500 Ecrou 5/16-18
58	194314 Support
68	17490508 Vis 5/16-18 x 1/2
102	4497H Arrêtoir 1"
125	581684801 Pince
130	416358 Vis #10 x .750
137	407590 Pare-Chocs
138	193224X428 Tenante de tasse
146	581857901 Boulon
150	588238002 Conduit D'air
151	580663302 Support
152	199535 Défecteur
159	17000612 Vis 3/8-16 x 3/4
161	193097X428 Fenêtre de carburant
162	142432 Vis 1/4 x 1/2
165	196826 Support
175	196304 Pièce d'entretoisement
176	400776 Vis 10-24 x 5/8
177	195228 Coussinet
180	195477 Châssis
181	193102X428 Coussinet
182	406859 Tableau de bord
183	74520520 Boulon 5/16-18 x 1-1/4
189	17000512 Vis 5/16-18 x 3/4
191	580485101 Phare/Insert Lentille Réfléchissant CD
194	73900500 Ecrou 5/16-18
195	401556X428 Bouchon
196	431658 Ensemble de la console
202	580485002 Basse bouclier de garniture CD
203	580484802 Basse bouclier de garniture CG
205	580484207 Ensemble d'angle CD
206	580484107 Ensemble d'angle CG
213	74760512 Boulon 5/16-18 unc x 3/4
218	580897301 Ensemble de capuche pivot
228	195161 Fermeture
233	196359 Boulon
235	406129 Entretoise
236	73930500 Ecrou 5/16-18
287	17600406 Vis 1/4-20 x 3/8
297	580484901 Phare/Insert Lentille Réfléchissant CG
298	580851001 Ecrou
306	73900600 Ecrou
335	580484602 Panneau de clôture de côté CD
336	580484402 Panneau de clôture de côté CG
350	445143 Pince
363	580724501 Chapeau
364	17060408 Vis


REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

CHÂSSIS/ENCEINTES




NO.	DE	NO.	PIECE	DESCRIPTION
1		163465		Batterie
2		74760412		Boulon 1/4-20 unc x 3/4
8		587205101		Bac de batterie
16		176138		Interrupteur de verrouillage pressé
21		400252		Harnais des prises de courant des phares
22		4152J		Ampoule N°1156
24		585555601		Câble de batterie
25		585555501		Câble de batterie de 6 ja. avec un fil de 16 po. - rouge
26		175158		Fusible
27		73510400		Écrou 1/4-20 unc
28		416588		Câble de masse de 6 ja. de 21" - noir
29		401545		Interrupteur
30		193350		Contacteur d'allumage
33		411934		Clé/Chaîne
34		110712X		L'Interrupteur des phares
40		401104		Harnais Tableau De Bord/D'élévation
41		17720408		Vis 1/4-20 x 1/2
42		131563		Couverture de borne
43		192507		Solénoïde
50		582107602		Interrupteur, PTO
55		17060512		Vis 5/16-18 x 3/4
71		194276		Harnais des câbles d'allumage
79		175242		Douille ensemble ampoule torsion serrée
90		435395		Couverture
99		17670412		Vis 1/4-20 x 3/4
100		19091416		Rondelle 9/32 x 7/8 x 16 ja.
102		404454		Harnais K46
105		407568		Interrupteur, Inverse

REMARQUE: Toutes les dimensions de composant sont données en pouce d'E.-U. - - 1 pouce = 25,4 mm.

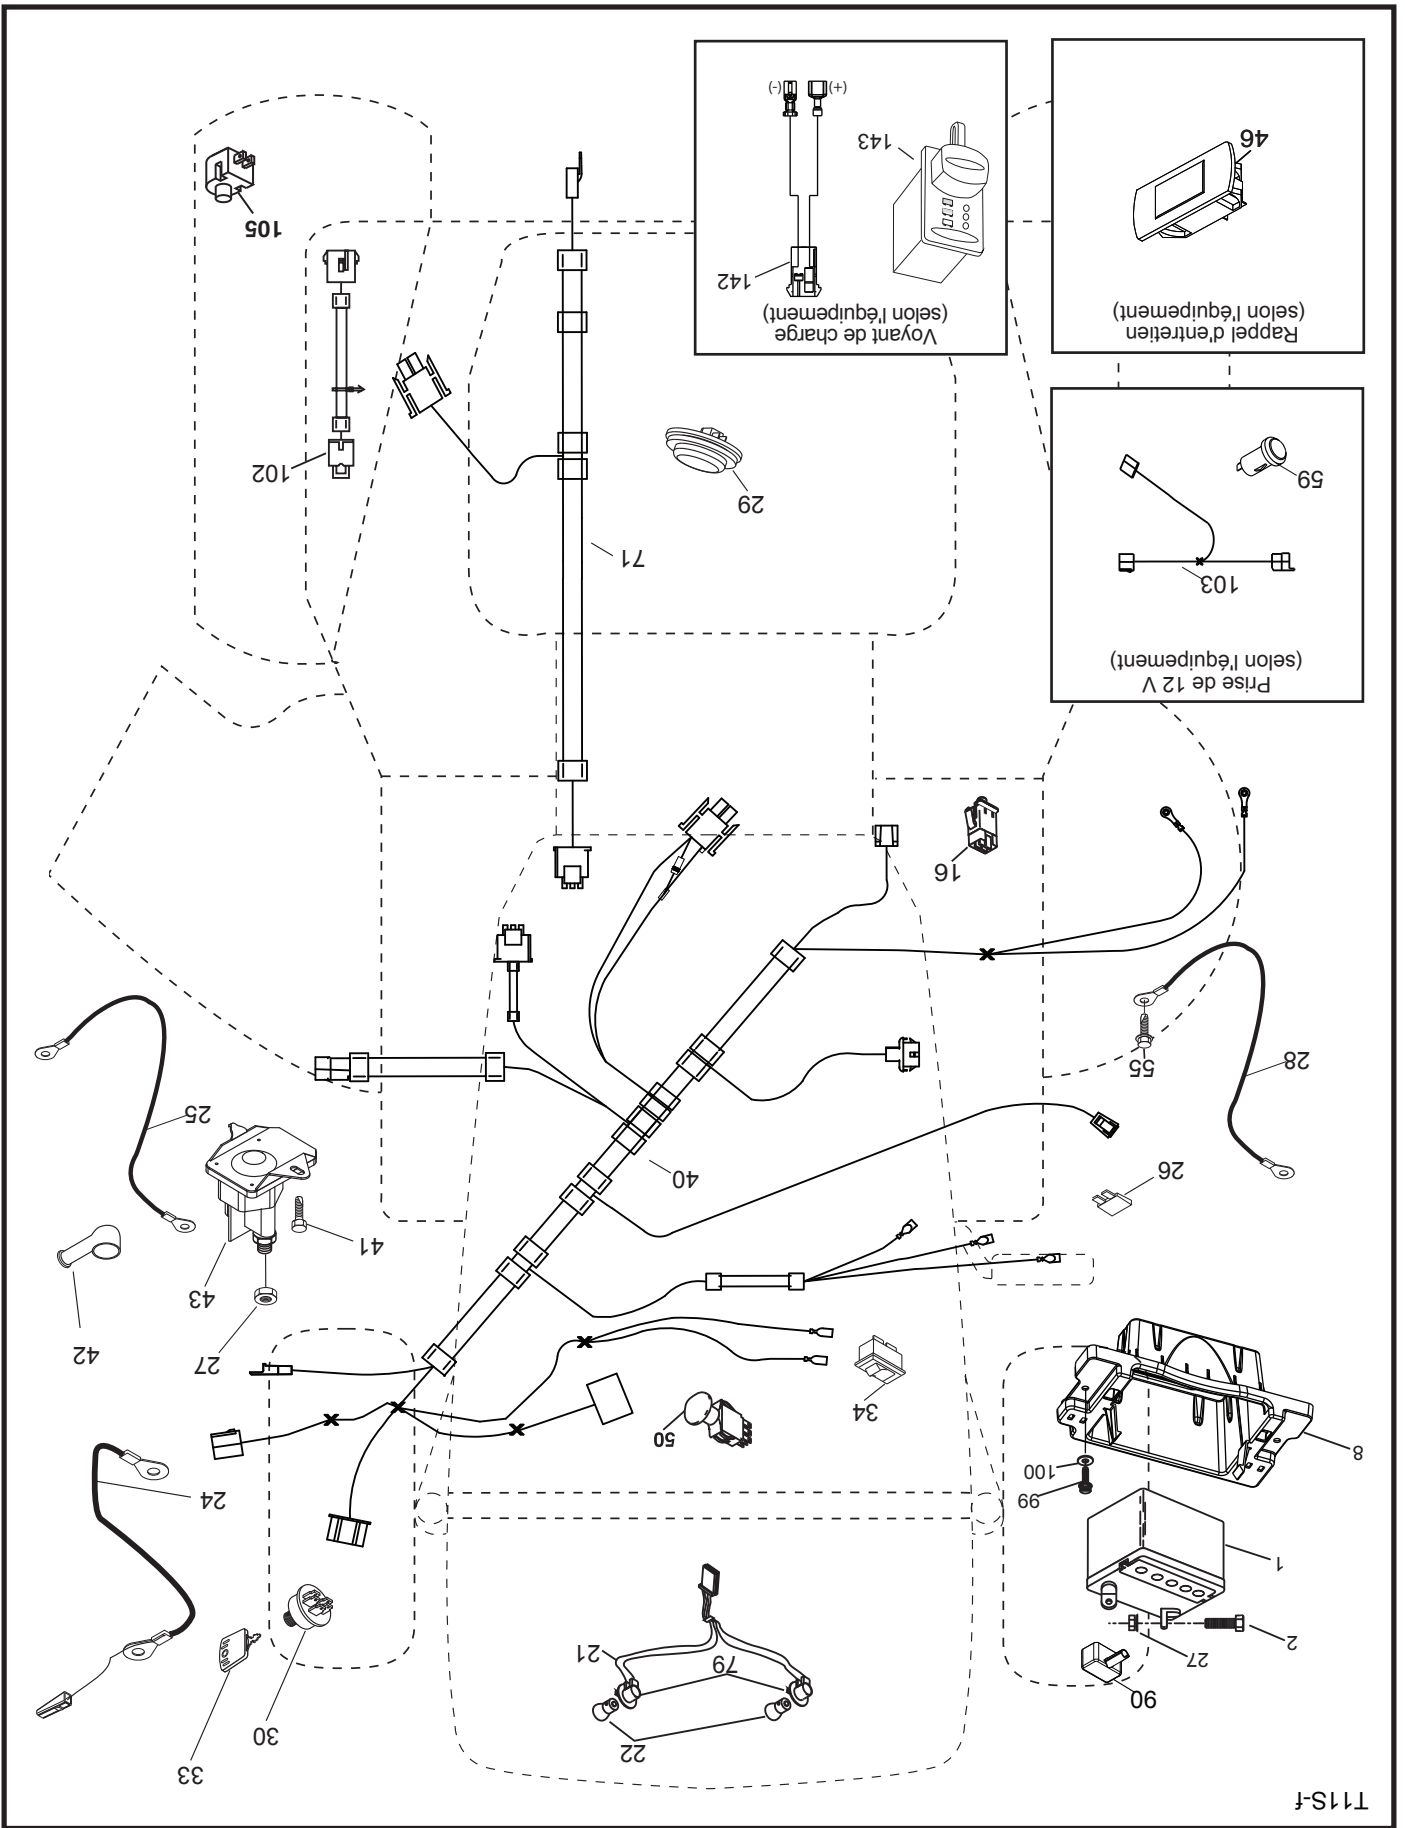

TRACTEUR - - NUMÉRO DE MODÈLE 944.604350

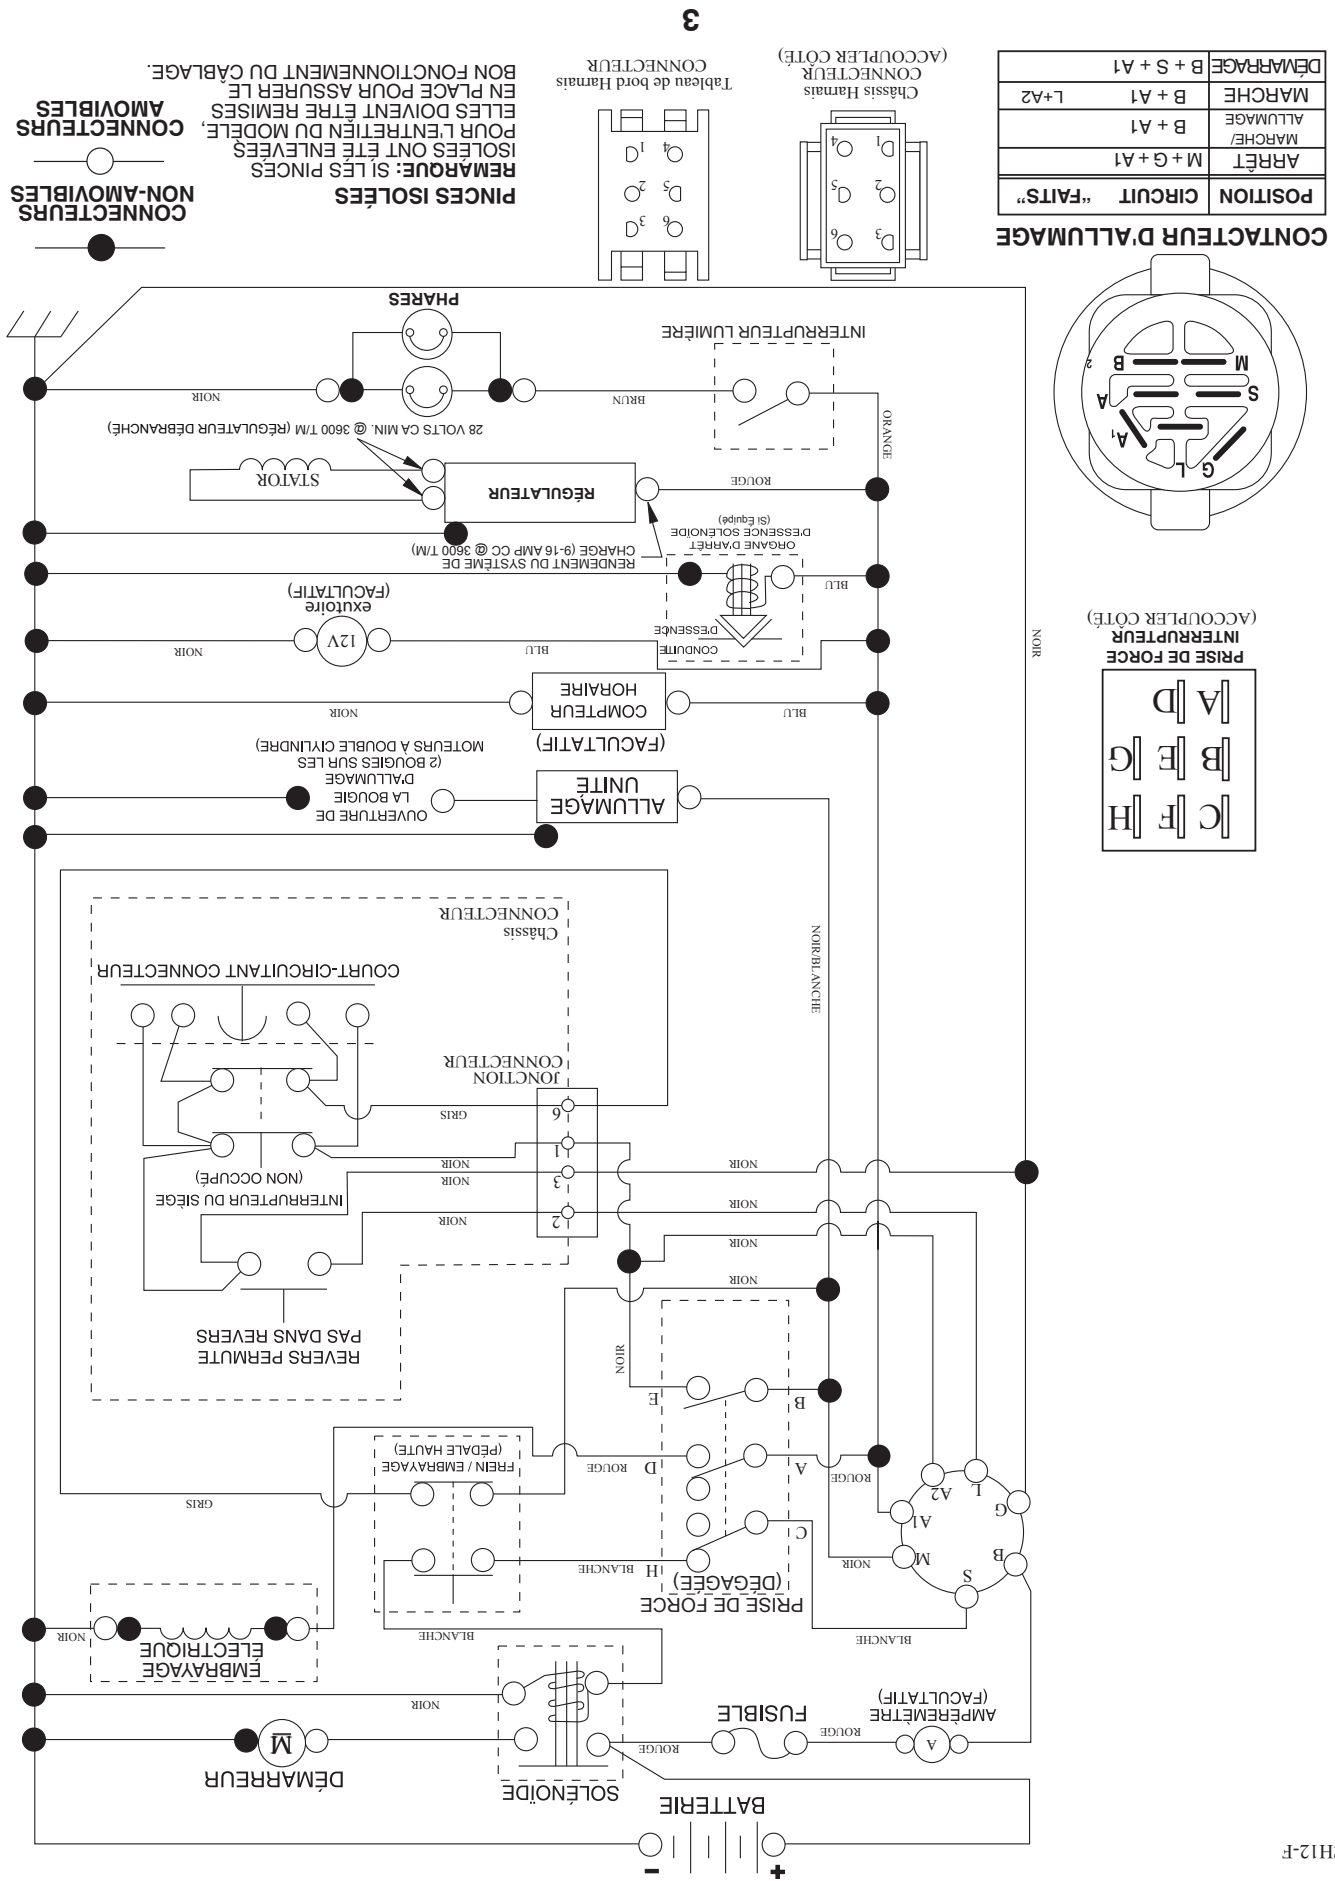

COMMENT UTILISER CE MANUEL

Ce manuel a été dessiné pour fournir le client avec les moyens d'identification des pièces de détails du tracteur quand il/elle a besoin de commander les pièces de rechange. Les illustrations ne peuvent pas représenter exactement le modèle que vous avez acheté. N'utilisez pas ce manuel comme un guide dans le montage et/ou démontage de votre tracteur. La visserie montrée est plus grande pour faciliter l'identification.

Chaque tracteur a un numéro de modèle particulier.

Le numéro de modèle du produit se trouvera sur l'aile, dessous le siège.

Lorsque vous commandez des pièces de rechange, donnez toujours les renseignements suivants:

- Produit - "TRACTEUR"
- NUMÉRO DU MODÈLE - "944.604350"
- Numéro de la Pièce
- Description de la Pièce


TABLE DE MATIERES

SCHEMA.....	3
ELECTRIQUE	4-5
CHASSIS/ENCEINTES	6-7
ENTRAÎNEMENT	8-9
MOTEUR.....	10-11
ENSEMBLE DE LA DIRECTION.....	12-13
CARTER DE TONDEUSE.....	14-15
LEVAGE DE LA TONDEUSE.....	16
ENSEMBLE DU SIÈGE	17
DECALCOMANIES.....	18
VOYEZ LES DÉTAILS DE MOTOR.....	19-23
VOYEZ LES DÉTAILS DE TRANSMISSION.....	24-25
GARANTIE.....	26
ENTRETIEN DE "SEARS".....	28

SEARS
MANUEL DES
PIÈCES DE
RECHANGE

NUMÉRO DE
MODÈLE
944.604350

IMPORTANT:
Lisez et suivez le
mode d'emploi et
toutes les règles
de sécurité avant
d'utiliser cet
équipement

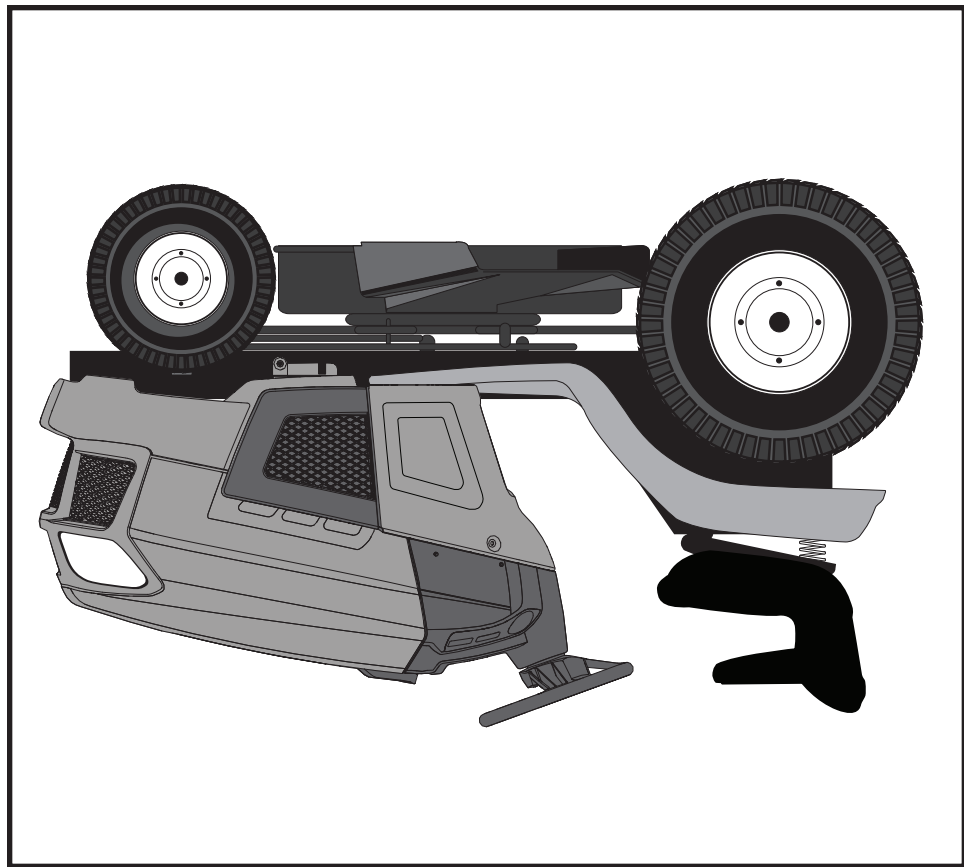

CRAFTSMAN®

23,0 C.V.*
DÉMARRAGE ÉLECTRIQUE
TONDEUSE DE 137 CM (54 PO.)
AUTOMATIQUE
TRACTEUR DE PELOUSE

* La puissance nominale indiquée par le fabricant du moteur est la puissance brute moyenne (à un régime en tr/min spécifique) d'un moteur de production type pour le modèle de moteur mesuré selon les normes SAE pour la puissance brute du moteur. Se reporter au fabricant du moteur pour tous les détails.

Sears Canada, Inc., Toronto, Ontario M5B 2B8

587756024 Rev. 14

10.06.17 JSE
Imprimé Aux E.U.