

# YTH200 Twin

**Spare parts**

**Ersatzteile**

**Pièces détachées**

**Reserve onderdelen**


**Repuestos**

**Reservdelar**

---


# ILLUSTRATED PARTS LIST

**MODEL NO. 96041006401**  
**CUSTOMER CATALOG NO. YTH200TWIN**  
**PRODUCT NO. 960 41 00-64**

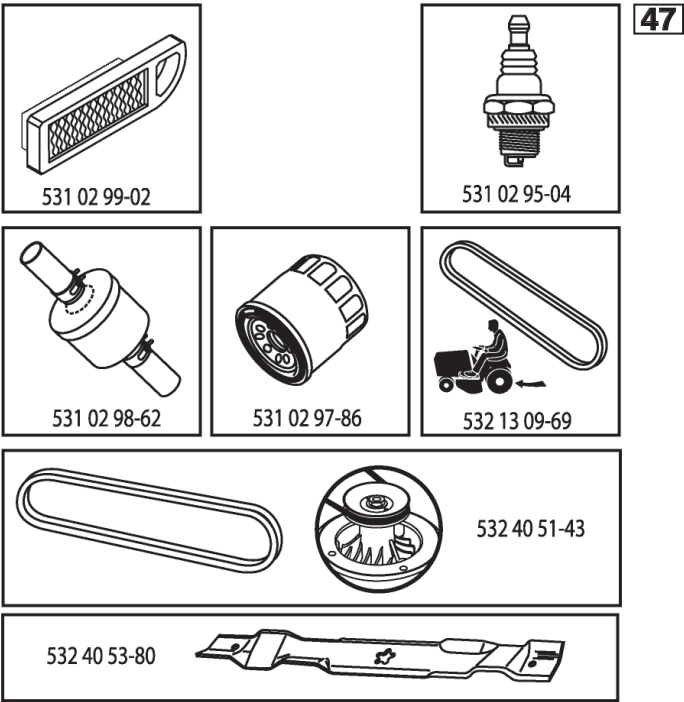

415747

**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**DECALS 27**

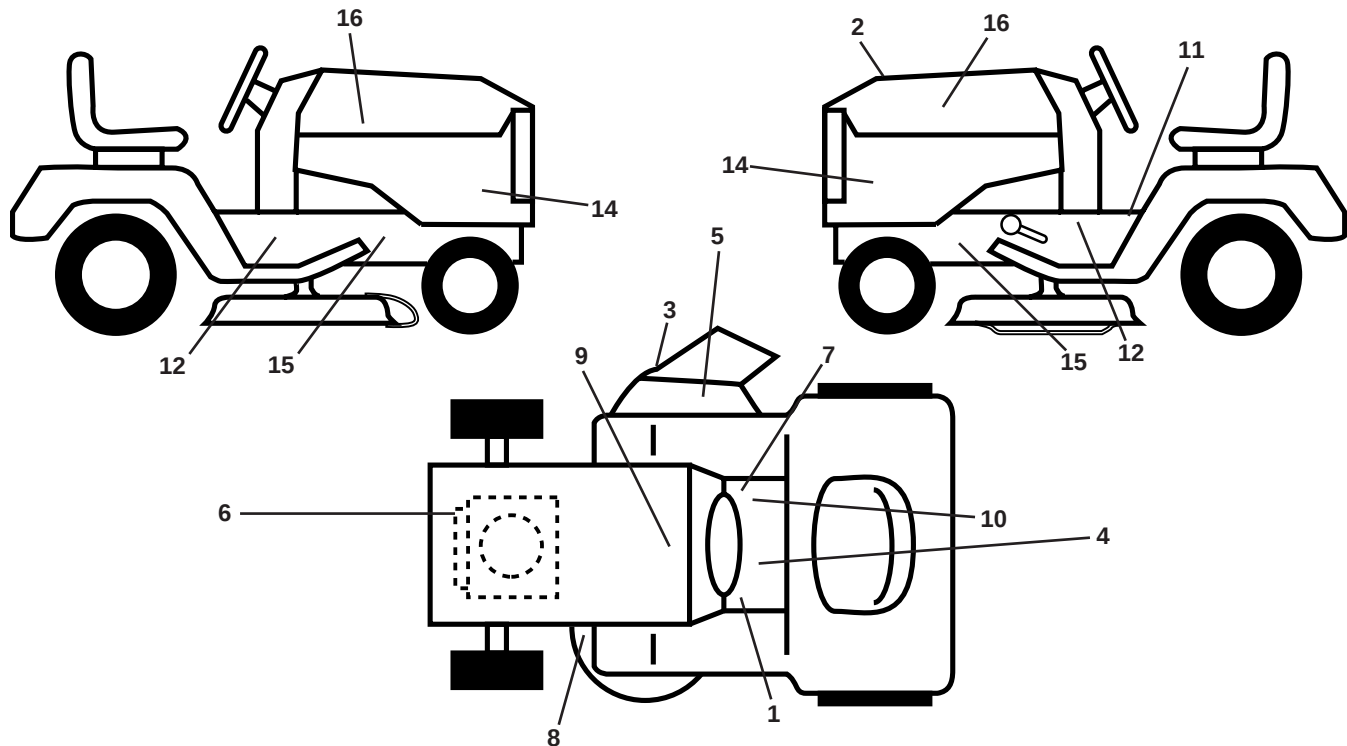


**KEY PART  
NO. NO.**

|    |              |                                   |
|----|--------------|-----------------------------------|
| 1  | 532 15 97-37 | Decal, Brake/Clutch Sym           |
| 2  | 532 41 57-47 | Decal, RPL                        |
| 3  | 532 19 63-57 | Decal, Warning Deflect. Cutfinger |
| 4  | 532 18 04-32 | Decal, Fender                     |
| 5  | 532 18 21-66 | Decal, Warning Eng. Syms.         |
| 6  | 532 19 68-41 | Decal, Mower Sch. V-Belt          |
| 7  | 532 14 08-37 | Decal, Saddle Brake Parking       |
| 8  | 532 16 03-96 | Decal, Oper. Cruise Sym.          |
| 9  | 532 14 50-05 | Decal, Battery Dan./Poi.          |
| 10 | 532 17 83-02 | Decal, Oper. Cruise Sym.          |

**KEY PART  
NO. NO.**

|    |              |                             |
|----|--------------|-----------------------------|
| 11 | 532 40 03-89 | Decal, Warning Sym. CE      |
| 12 | 532 40 11-46 | Decal, Warning Service/Fire |
| 14 | 532 41 60-14 | Decal, Panel Side           |
| 15 | 532 15 97-36 | Decal, Chassis Hot Muffler  |
| 16 | 532 42 20-12 | Decal, Hood Logo            |
| -- | 532 16 69-60 | Decal, Bypass               |
| -- | 532 40 17-71 | Pad, Footrest, LH           |
| -- | 532 40 37-73 | Pad, Footrest, RH           |
| -- | 532 16 25-98 | Decal, Drawbar Load         |
| -- | 532 41 60-72 | Manual, Operator's Euro     |

**WHEELS AND TIRES**

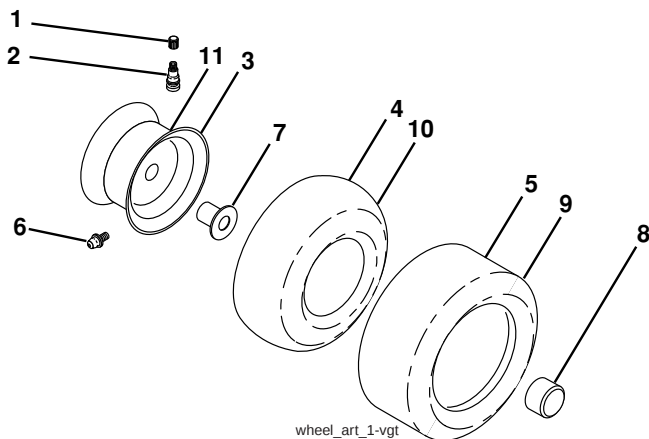


**KEY PART  
NO. NO.**

|    |              |                                    |
|----|--------------|------------------------------------|
| 1  | 532 05 91-92 | Cap, Valve, Tire                   |
| 2  | 532 06 51-39 | Stem, Valve                        |
| 3  | 532 13 83-36 | Rim Assembly, Front                |
| 4  | 532 05 99-04 | Tube, Front (Service Item Only)    |
| 5  | 532 10 62-22 | Tire, Front                        |
| 6  | 532 12 49-57 | Fitting, Grease (Front Wheel Only) |
| 7  | 532 12 49-59 | Bearing, Flange (Front Wheel Only) |
| 8  | 532 17 50-39 | Cap, Axle (Front Wheel Only)       |
| 9  | 532 12 20-82 | Tire, Rear                         |
| 10 | 532 12 49-26 | Tube, Rear (Service Item Only)     |
| 11 | 532 13 83-37 | Rim Assembly, Rear                 |
| -- | 532 14 43-34 | Sealant, Tire (10 oz. Tube)        |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm


TRACTOR - - MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
SCHEMATIC **38**

SCH13

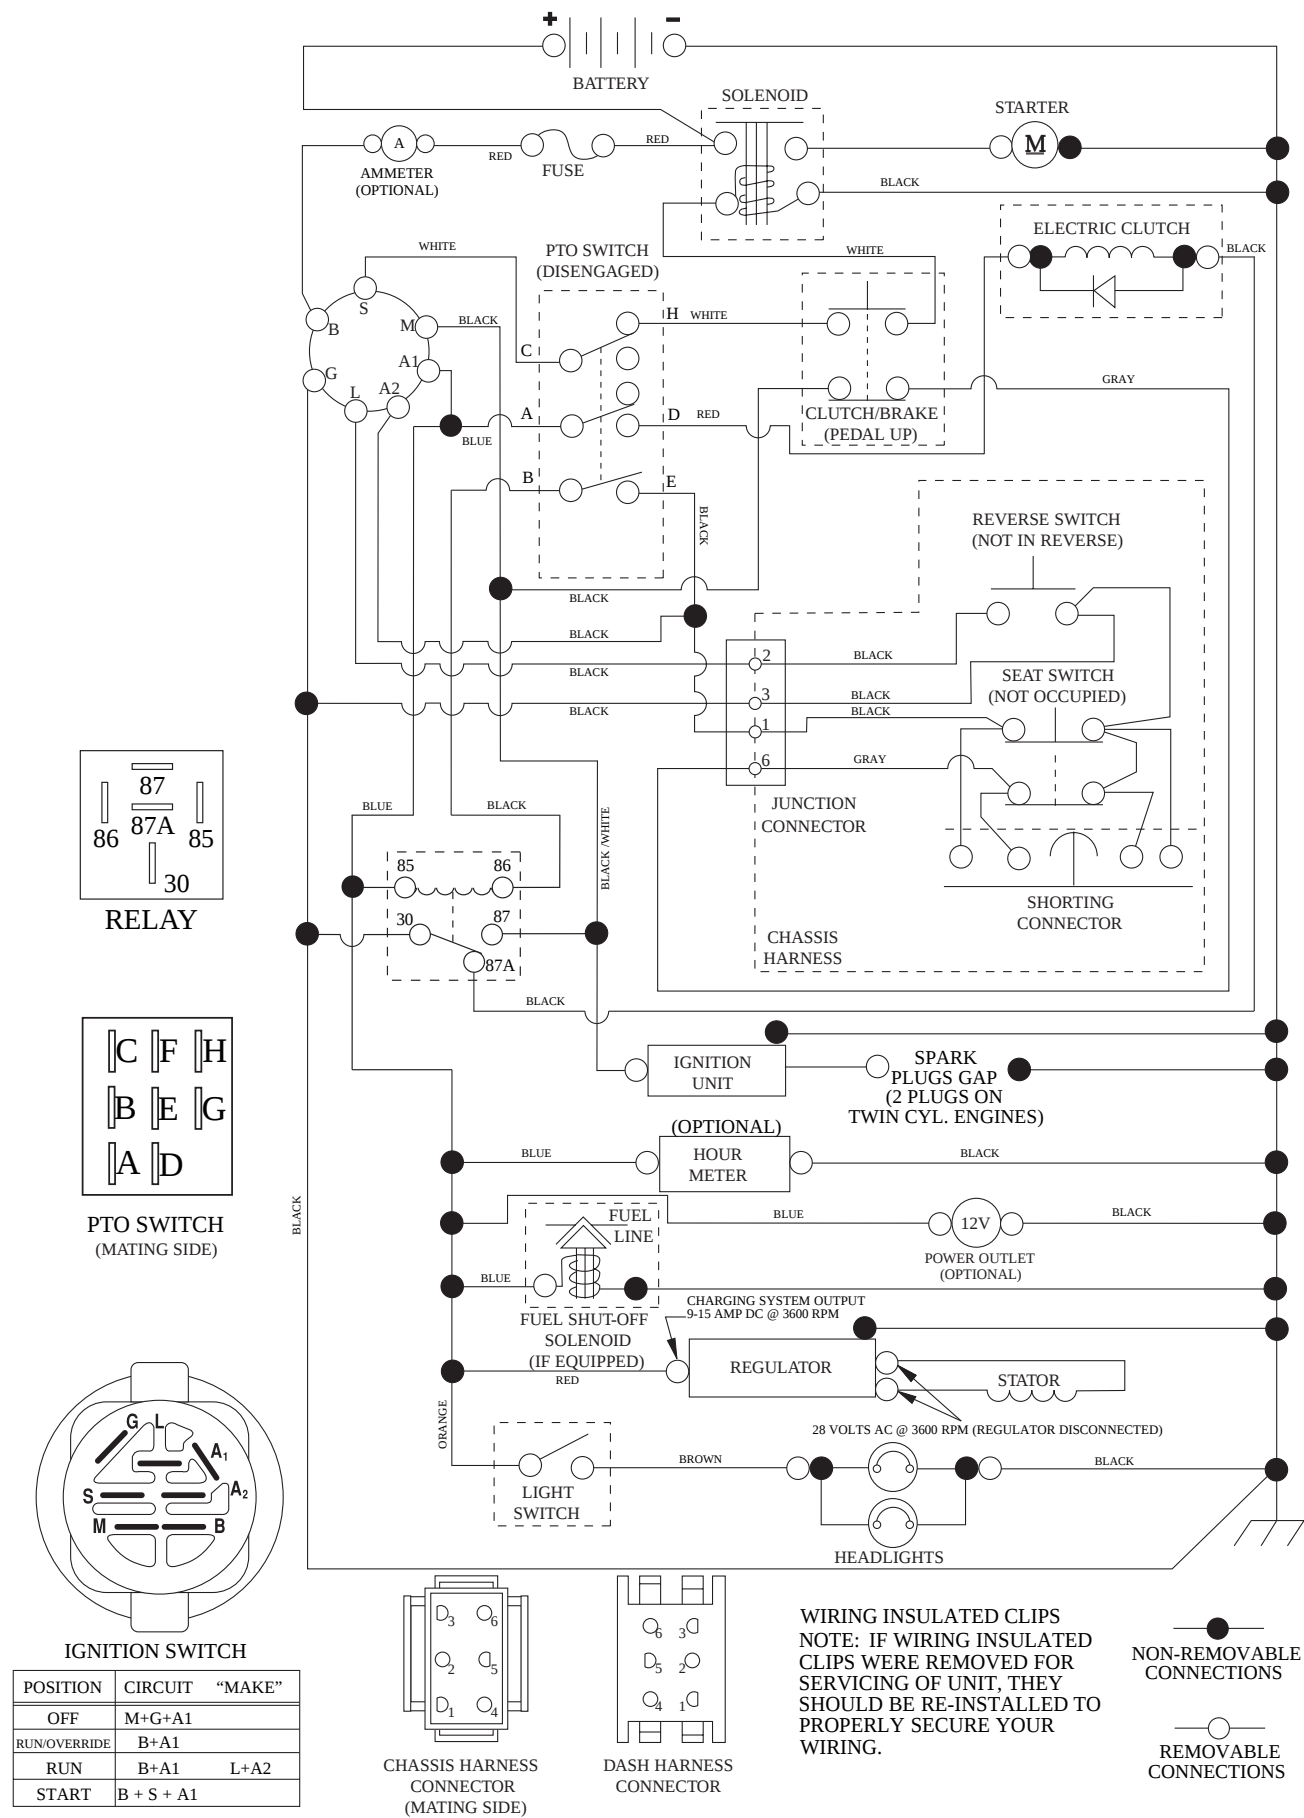

**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**ELECTRICAL 32**

T20S

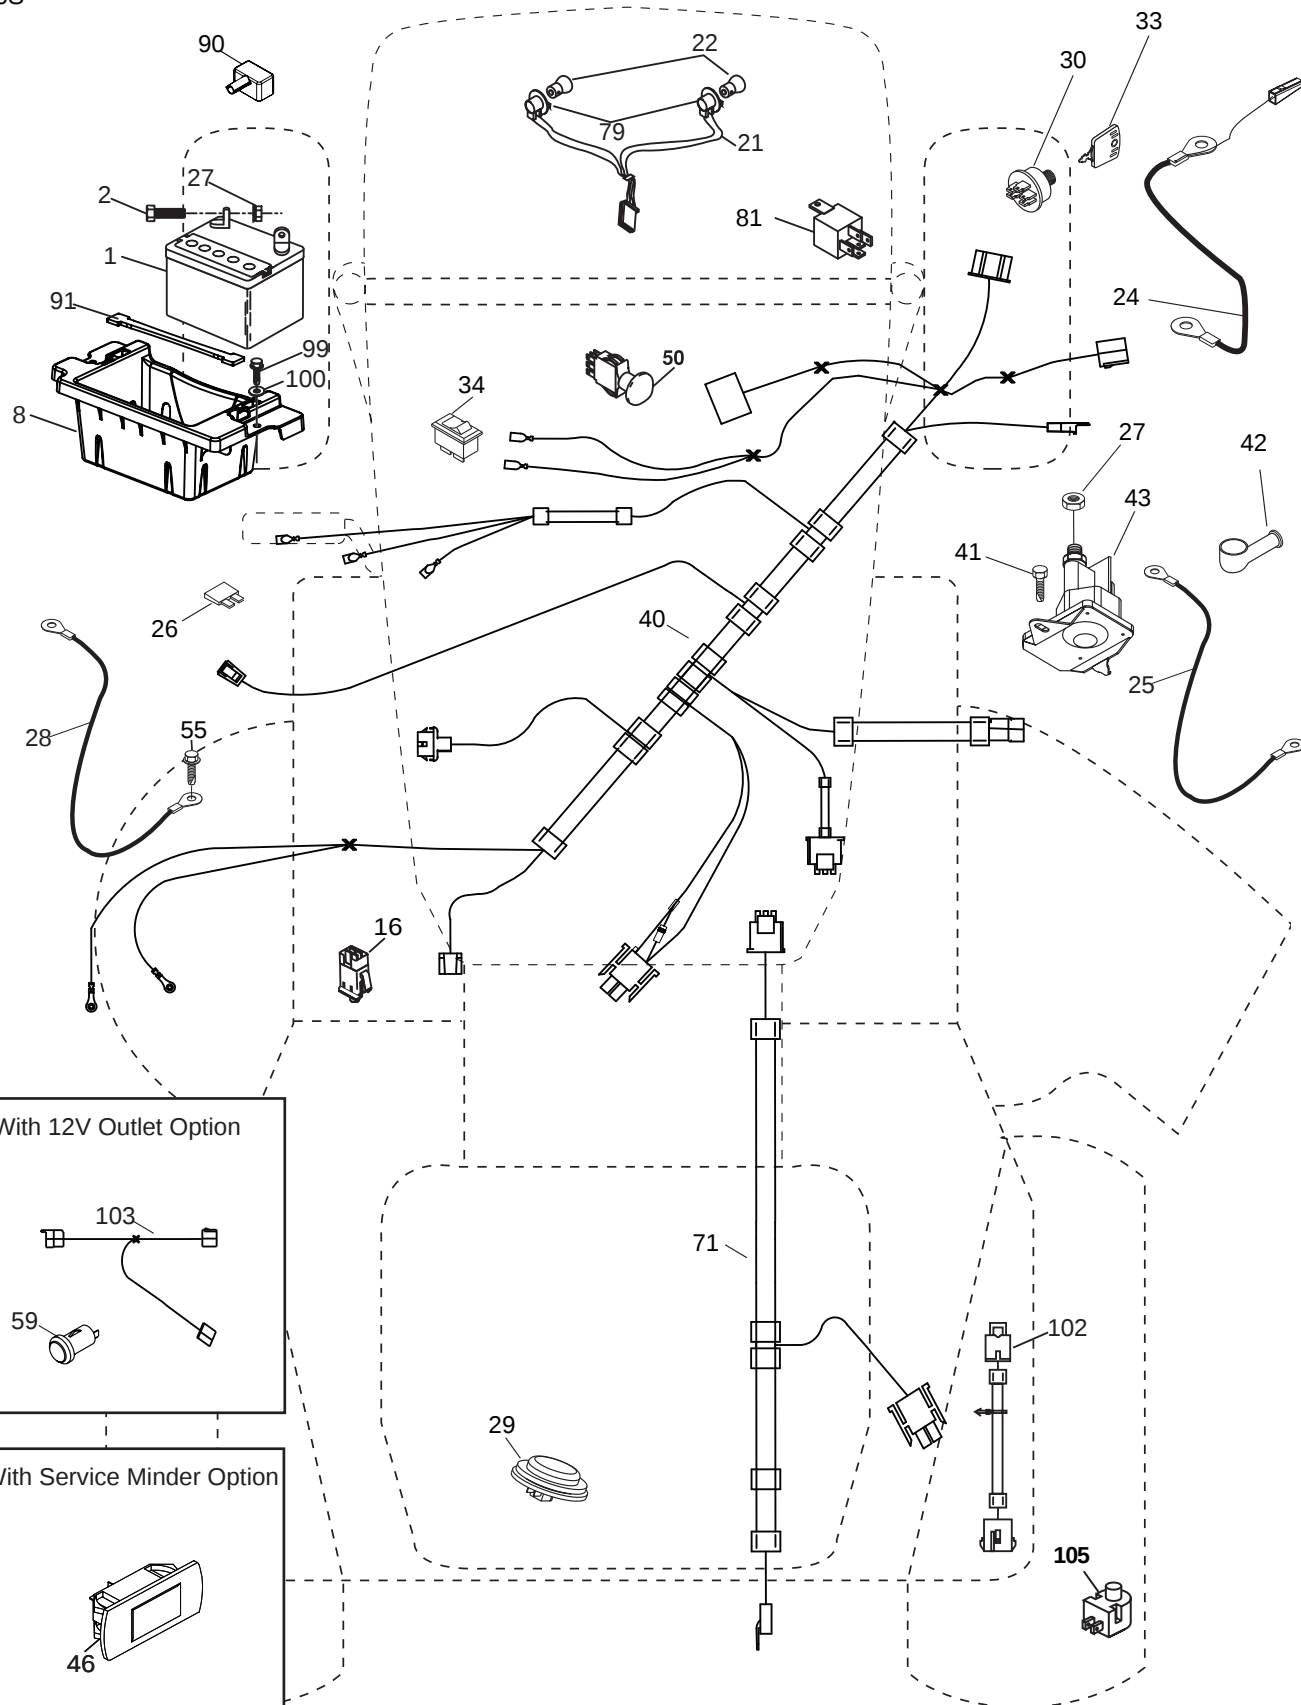


**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**ELECTRICAL 32**

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                         |
|------------|--------------|-------------------------------------|
| 1          | 532 16 34-65 | Battery                             |
| 2          | 874 76 04-12 | Bolt Hex Hd. 1/4-20 unc x 3/4       |
| 8          | 532 18 64-91 | Battery Box                         |
| 16         | 532 17 61-38 | Switch Interlock                    |
| 21         | 532 18 37-59 | Harness Socket Light                |
| 22         | 532 00 41-52 | Bulb, Light # 1156                  |
| 24         | 532 40 02-53 | Cable Battery                       |
| 25         | 532 41 28-95 | Cable Starter                       |
| 26         | 532 17 51-58 | Fuse                                |
| 27         | 873 51 04-00 | Nut Keps Hex 1/4-20 unc             |
| 28         | 532 14 54-91 | Cable Ground 21" Blk. 6 Ga.         |
| 29         | 532 40 15-45 | Switch Seat                         |
| 30         | 532 19 33-50 | Switch Ign.                         |
| 33         | 532 41 19-35 | Key/Chain                           |
| 34         | 532 11 07-12 | Switch Light/Reset                  |
| 40         | 532 40 96-14 | Harness Ignition Dash               |
| 41         | 817 72 04-08 | Screw Thd. Cut 1/4-20 x 1/2         |
| 42         | 532 13 15-63 | Cover Terminal Red                  |
| 43         | 532 19 25-07 | Solenoid                            |
| 46         | 532 41 39-31 | Gauge Hourmeter                     |
| 50         | 532 17 46-51 | Switch PTO                          |
| 55         | 817 06 05-12 | Screw Thdrol. 5/16-18 x 3/4         |
| 71         | 532 19 42-76 | Harness Chassis                     |
| 79         | 532 17 52-42 | Socket Asm. Bulb                    |
| 81         | 532 40 96-15 | Relay Harness Sealed                |
| 90         | 532 40 07-24 | Cover Terminal Battery              |
| 91         | 532 19 02-70 | Strap Battery                       |
| 99         | 817 67 04-12 | Screw Hex Wsh. Thdrol. 1/4-20 x 3/4 |
| 100        | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga.          |
| 102        | 532 40 44-54 | Harness Pigtail                     |
| 105        | 532 40 75-68 | Switch Reverse                      |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**CHASSIS AND ENCLOSURES 39**

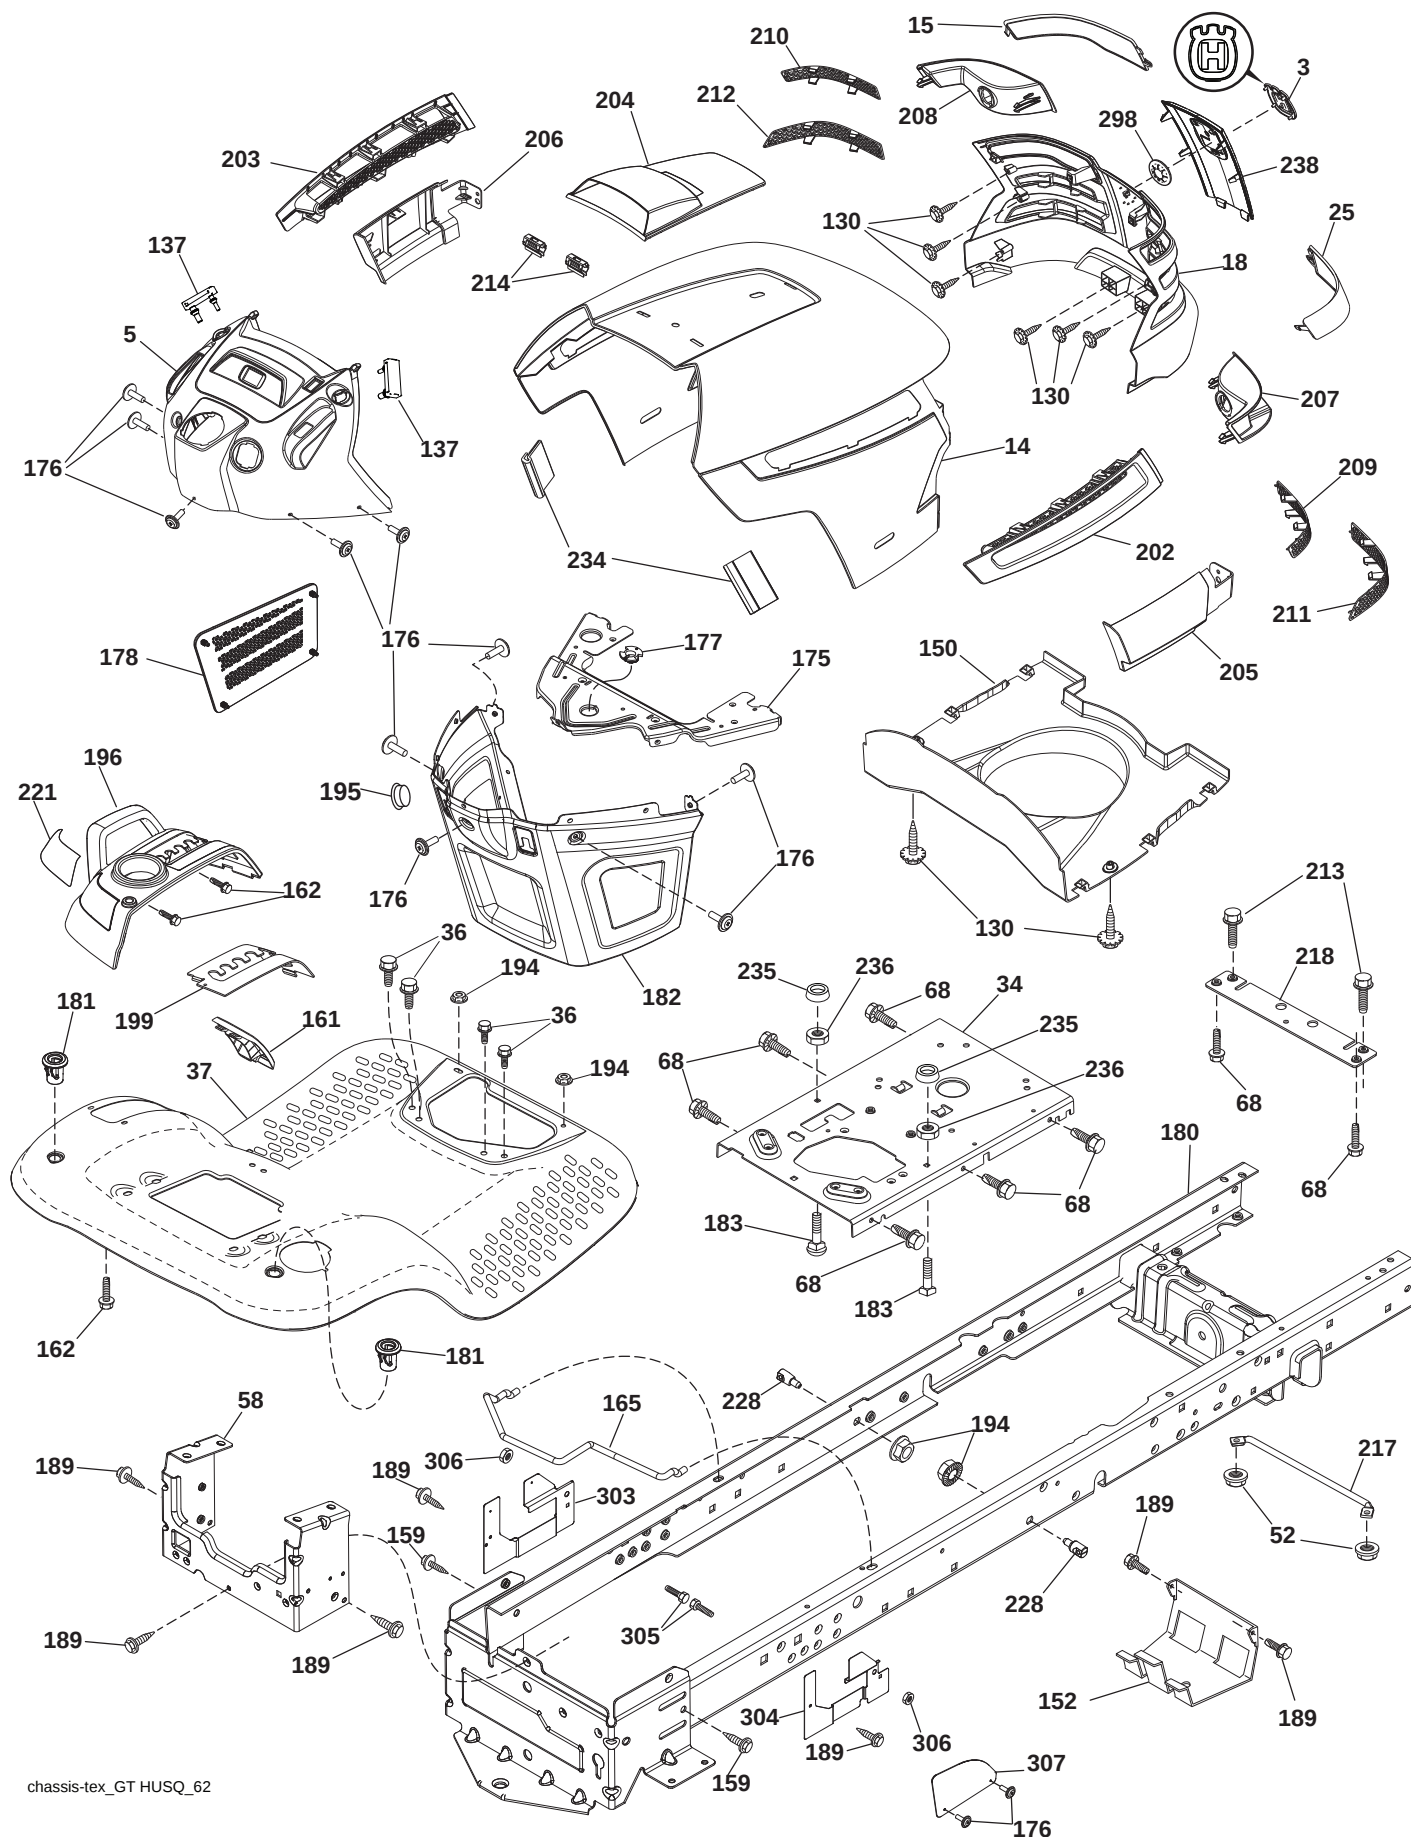


chassis-tex\_GT HUSQ\_62

**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**CHASSIS AND ENCLOSURES 39**

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                       | KEY<br>NO. | PART<br>NO.  | DESCRIPTION                   |
|------------|--------------|-----------------------------------|------------|--------------|-------------------------------|
| 3          | 532 40 50-12 | Logo                              | 199        | 532 19 82-59 | Plate Deck Lift               |
| 5          | 532 40 87-01 | Dash                              | 202        | 532 40 30-48 | Vent Side Hood RH             |
| 14         | 532 41 10-46 | Hood                              | 203        | 532 40 30-76 | Vent Side Hood LH             |
| 15         | 532 19 89-07 | Lens LH                           | 204        | 532 41 66-13 | Vent Top Hood                 |
| 18         | 532 40 86-07 | Grille Asm.                       | 205        | 532 40 17-09 | Skirt Hood Side RH            |
| 25         | 532 19 89-06 | Lens RH                           | 206        | 532 40 17-11 | Skirt Hood Side LH            |
| 34         | 532 19 61-25 | Plate Engine                      | 207        | 532 19 71-98 | Bezel RH                      |
| 36         | 817 06 05-12 | Screw 5/16-18 x 3/4               | 208        | 532 19 71-99 | Bezel LH                      |
| 37         | 532 40 18-25 | Fender                            | 209        | 532 19 91-30 | Insert Hex Top RH             |
| 52         | 873 68 05-00 | Nut Lock 5/16-18                  | 210        | 532 19 91-31 | Insert Hex Top LH             |
| 58         | 532 41 22-81 | Drawbar Upper                     | 211        | 532 19 91-32 | Insert Hex Bottom RH          |
| 68         | 817 49 05-08 | Screw 5/16-18 x 1/2               | 212        | 532 19 91-33 | Insert Hex Bottom LH          |
| 130        | 532 41 63-58 | Screw #10 x 0.750 BOS Thread      | 213        | 874 76 05-12 | Bolt 5/16-18 unc x 3/4        |
| 137        | 532 40 75-90 | Bumper Dash                       | 214        | 532 19 91-45 | Clip Retainer Tinner          |
| 150        | 532 19 85-12 | Air Duct                          | 217        | 532 40 91-67 | Rod Pivot                     |
| 152        | 532 19 95-35 | Shield Browning                   | 218        | 532 19 63-95 | X-Piece Hood Stop             |
| 159        | 817 00 06-12 | Screw 3/8-16 x 3/4                | 221        | 532 19 89-09 | Reflector LH                  |
| 161        | 532 40 18-26 | Window Fuel                       | 228        | 532 19 51-61 | Stud Fastner                  |
| 162        | 532 14 24-32 | Screw                             | 234        | 532 40 47-42 | Bumper Hood                   |
| 165        | 532 19 68-26 | Support Tank Rear                 | 235        | 532 40 61-29 | Spacer Fender                 |
| 175        | 532 19 63-04 | Crossmember                       | 236        | 873 93 05-00 | Nut Lock 5/16-18 unc          |
| 176        | 532 40 07-76 | Screw 10-24 x 5/8                 | 238        | 532 40 86-06 | Trim                          |
| 177        | 532 19 52-27 | Bushing Steering                  | 298        | 532 11 04-52 | Nut Push                      |
| 178        | 532 19 97-82 | Cargo Net Asm.                    | 303        | 532 42 09-59 | Shield Chassis French LH      |
| 180        | 532 41 50-64 | Chassis                           | 304        | 532 42 15-09 | Shield Chassis French RH      |
| 181        | 532 40 30-25 | Bushing Mtg. Fender Crgo          | 305        | 872 11 06-06 | Bolt RDHD SQNK 3/8-16 x 3/4   |
| 182        | 532 40 68-59 | Dash Lower                        | 306        | 873 90-06-00 | Nut lock Flg. 3/8-16 unc      |
| 183        | 874 78 05-20 | Bolt Fin. Hex 5/16-18 unc x 1-1/4 | 307        | 532 42 45-70 | Shield Upper Pedal Tex French |
| 189        | 817 00 05-12 | Screw 5/16-18 x 3/4               |            |              |                               |
| 194        | 873 90 05-00 | Nut Lock Hex Flange 5/16-18       |            |              |                               |
| 195        | 532 40 41-37 | Plug Hole                         |            |              |                               |
| 196        | 532 40 02-99 | Console Asm. Deck Lift            |            |              |                               |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
 DRIVE **40**

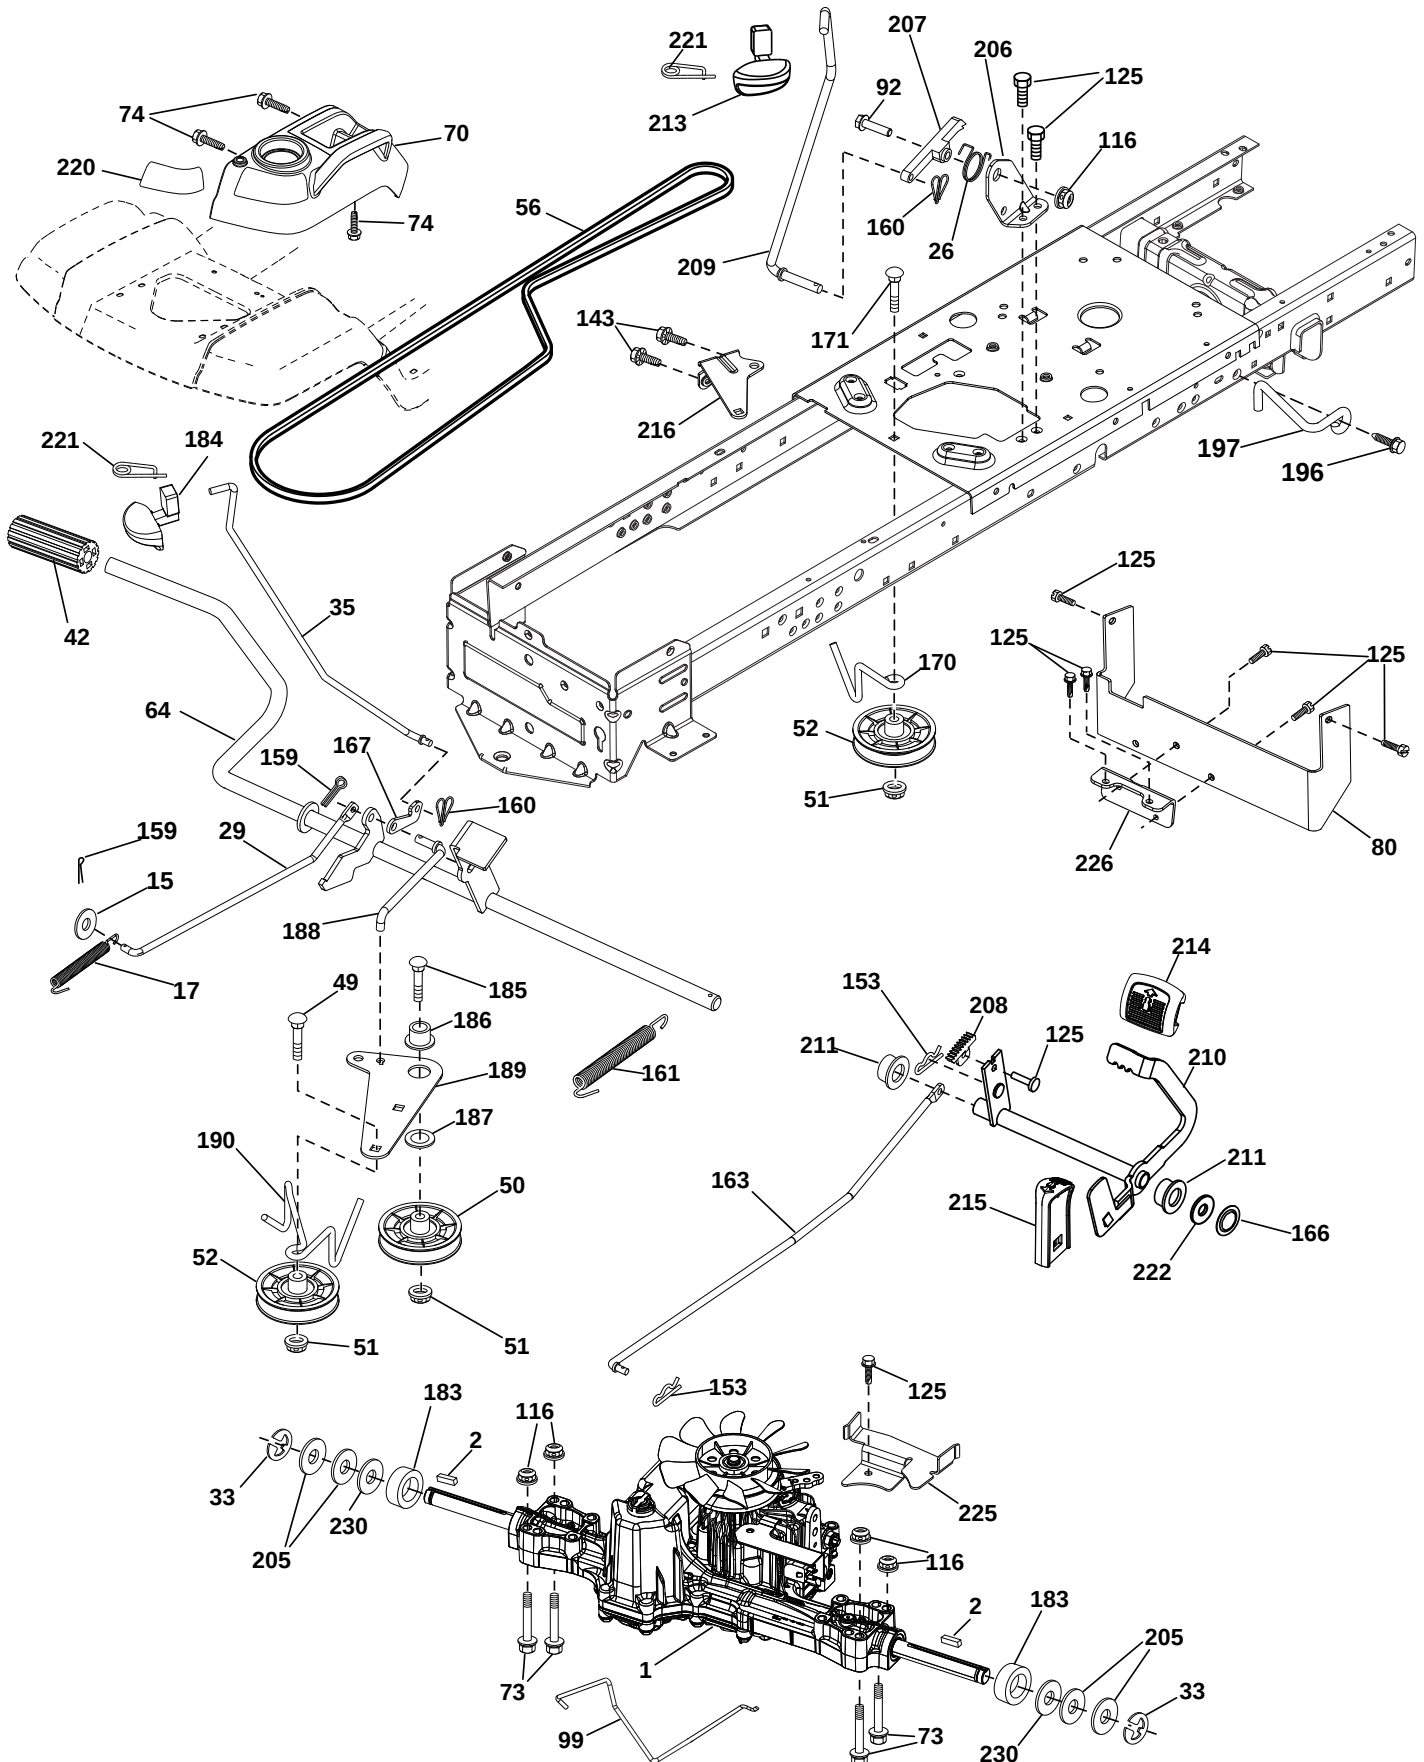


**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
DRIVE **40****

| KEY NO. | PART NO.     | DESCRIPTION                      | KEY NO. | PART NO.     | DESCRIPTION                     |
|---------|--------------|----------------------------------|---------|--------------|---------------------------------|
| 1       | ---          | Transaxle, TUFFTORQ K46 BT       | 183     | 532 13 70-57 | Spacer Split                    |
| 2       | 532 12 35-83 | Key 1/4 x 2.5                    | 184     | 532 40 31-18 | Handle Parking Brake            |
| 15      | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga.    | 185     | 872 11 06-22 | Bolt Rdhd. Sqnk. 3/8-16 x 2-3/4 |
| 17      | 532 41 36-78 | Spring, Brake                    | 186     | 532 19 43-21 | Spacer Retainer                 |
| 26      | 532 19 96-79 | Spring Return Cruise             | 187     | 819 13 32-10 | Washer                          |
| 29      | 532 40 38-06 | Rod, Brake                       | 188     | 532 19 43-23 | Link Clutch Ground Drive        |
| 33      | 812 00 00-01 | Ring E                           | 189     | 532 19 43-17 | Bellcrank Ground Drive          |
| 35      | 532 19 95-91 | Rod, Brake, Park                 | 190     | 532 19 43-18 | Keeper Bellcrank Ground Drive   |
| 42      | 532 12 48-72 | Cover, Foot Pedal                | 196     | 817 00 06-16 | Screw 3/8-16 x 1                |
| 49      | 872 11 06-14 | Bolt                             | 197     | 532 19 58-04 | Link Clutch Anti-Rotation       |
| 50      | 532 19 43-27 | Pulley Idler Flat                | 205     | 532 12 17-48 | Washer                          |
| 51      | 873 90 06-00 | Lock Nut 3/8-16                  | 206     | 532 19 78-67 | Bracket Mount Latch Cruise      |
| 52      | 532 19 43-26 | Idler V-Groove 910" Offset       | 207     | 532 19 78-68 | Latch Control Cruise            |
| 56      | 532 13 09-69 | V-Belt, Drive                    | 208     | 532 19 78-69 | Gear Sector Control Cruise      |
| 64      | 532 19 78-65 | Shaft Asm. Pedal Brake Control   | 209     | 532 19 95-92 | Rod Control Cruise              |
| 70      | 532 40 05-30 | Console Asm.                     | 210     | 532 19 78-60 | Rocker Asm. Pedal Control       |
| 73      | 874 49 05-44 | Bolt Hex Flghd. 5/16-18 x 3.75   | 211     | 532 12 01-83 | Bearing Nylon                   |
| 74      | 532 14 24-32 | Screw 1/4 x 1/2                  | 213     | 532 40 31-19 | Knob Control Cruise             |
| 80      | 532 41 00-24 | Bracket Strap Torque             | 214     | 532 42 12-63 | Pedal Forward                   |
| 92      | 874 76 05-20 | Bolt Fin. Hex 5/16-18 unc x 1.25 | 215     | 532 40 17-23 | Pedal Reverse                   |
| 99      | 532 41 57-42 | Rod Bypass                       | 216     | 532 19 61-31 | Bracket Pulley Idler            |
| 116     | 873 90 05-00 | Nut Lock Hex Flange 5/16-18      | 220     | 532 19 89-08 | Reflector RH                    |
| 125     | 817 00 05-12 | Screw 5/16-18 x 3/4              | 221     | 532 40 31-87 | Retainer Spring Clip Handle     |
| 143     | 817 49 05-08 | Screw 5/16-18 x 1/2              | 222     | 879 21 20-10 | Washer 21/32 x 1-1/4 x 10 Ga.   |
| 153     | 532 12 47-88 | Retainer Spring                  | 225     | 532 40 33-19 | Keeper Belt Trans.              |
| 159     | 876 02 04-12 | Pin Cotter 1/8 x 3/4             | 226     | 532 40 15-64 | Bracket Mount Torque            |
| 160     | 532 16 94-84 | Retainer Clip                    | 230     | 532 18 89-67 | Washer Hardened                 |
| 161     | 532 10 57-09 | Spring, Return, Clutch           |         |              |                                 |
| 163     | 532 40 10-34 | Rod Pedal Control                |         |              |                                 |
| 166     | 532 19 72-90 | Nut Push .625                    |         |              |                                 |
| 167     | 532 40 52-57 | Latch Brake Parking              |         |              |                                 |
| 170     | 532 19 43-22 | Keeper Belt Centerspan           |         |              |                                 |
| 171     | 872 11 06-16 | Bolt Rdhd. Sqnk. 3/8-16 unc x 2  |         |              |                                 |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
ENGINE **24**

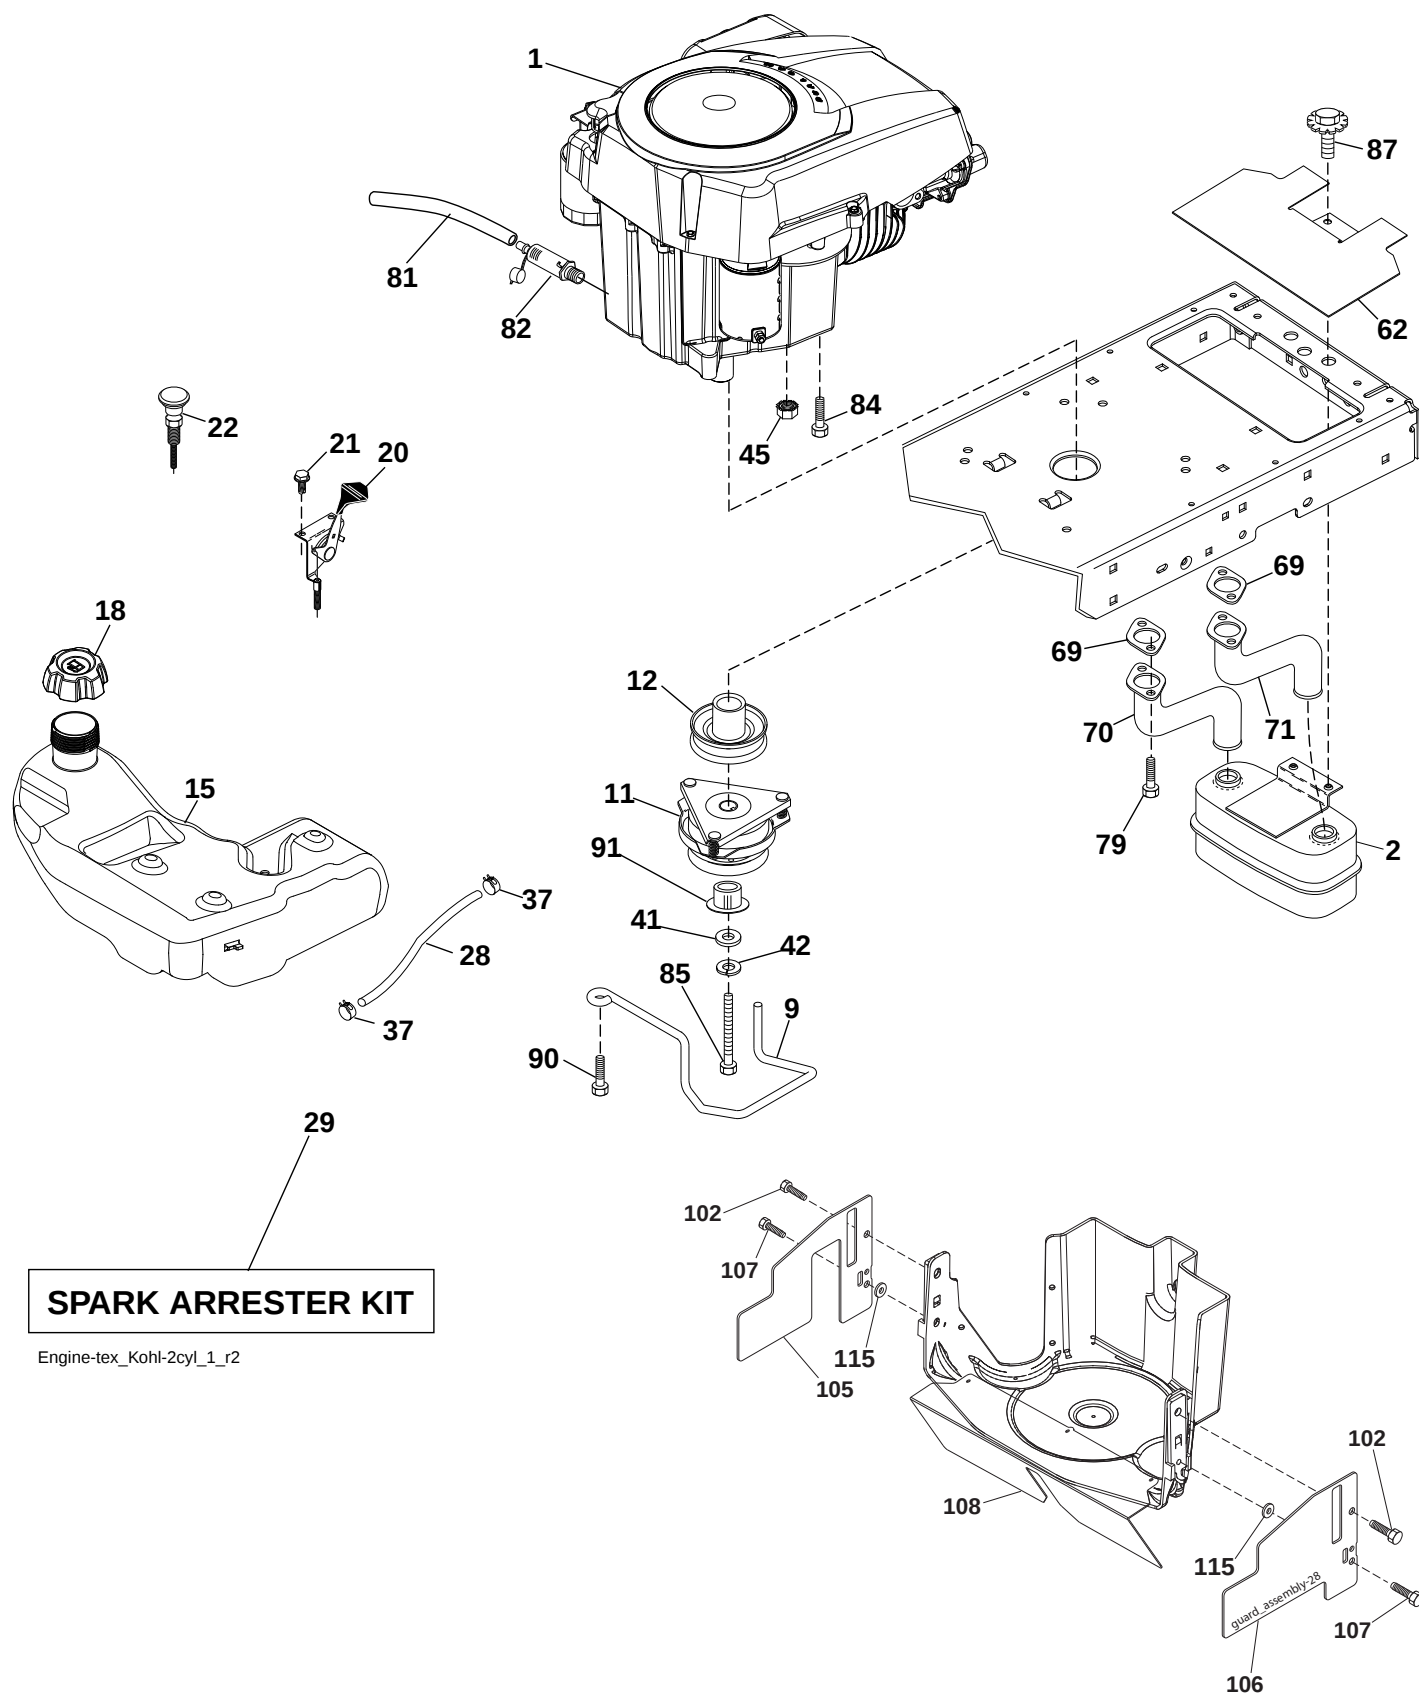

**SPARK ARRESTER KIT**


Engine-tex\_Kohl-2cyl\_1\_r2

**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
ENGINE 24**

| <b>KEY PART<br/>NO. NO.</b> |              | <b>DESCRIPTION</b>                |
|-----------------------------|--------------|-----------------------------------|
| 1                           | ---          | Engine KOHL Model No. SV710-0022  |
| 2                           | 532 14 97-23 | Muffler                           |
| 9                           | 532 19 43-20 | Keeper Belt Engine                |
| 11                          | 532 40 00-08 | Clutch Electric                   |
| 12                          | 532 40 50-97 | Pulley Engine                     |
| 15                          | 532 19 34-99 | Tank Fuel 4.0                     |
| 18                          | 532 19 42-67 | Cap Asm.                          |
| 20                          | 532 18 29-37 | Control Throttle                  |
| 21                          | 532 41 63-58 | Screw #10 x 0.750 BOS Thread      |
| 22                          | 532 19 15-96 | Control Choke                     |
| 28                          | 532 14 21-58 | Fuel Line                         |
| 29                          | 532 13 71-80 | Spark Arrester Kit                |
| 37                          | 532 12 34-87 | Clamp Hose                        |
| 41                          | 532 12 61-97 | Washer 1-1/2 OD x 15/32 ID x .250 |
| 42                          | 810 04 07-00 | Washer Lock 7/16                  |
| 45                          | 873 51 04-00 | Nut Keps Hex 1/4-20 unc           |
| 62                          | 532 14 66-29 | Shield Heat Muffler               |
| 69                          | ---          | Gasket                            |
| 70                          | 532 14 66-99 | Tube Exhaust LH                   |
| 71                          | 532 14 67-00 | Tube Exhaust RH                   |
| 79                          | 532 19 23-34 | Screw Socket Head 5/16-18 x .75   |
| 81                          | 532 14 84-56 | Tube Drain Oil Easy               |
| 82                          | 532 18 16-54 | Plug Drain Oil                    |
| 84                          | 817 12 06-16 | Screw 3/8-16 x 1                  |
| 85                          | 532 17 39-37 | Bolt Hex 7/16-20 x 4-5 Ga.        |
| 87                          | 532 17 18-77 | Bolt 5/16-18 unc x 1 w/Sems.      |
| 90                          | 817 00 06-16 | Screw 3/8-16 x 1                  |
| 91                          | 532 18 74-95 | Bushing                           |
| 105                         | 532 41 56-06 | Shield Side LH                    |
| 106                         | 532 41 56-11 | Shield Side RH                    |
| 107                         | 532 13 77-29 | Screw                             |
| 108                         | 532 42 68-03 | Cover Asm. Engine                 |
| 115                         | 532 42 30-62 | Palnut 1/4                        |
| 118                         | 817 67 05-08 | Screw THD Roll                    |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

## STEERING ASSEMBLY 41




**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**STEERING ASSEMBLY 41**

| KEY<br>NO. | PART<br>NO.  | DESCRIPTION                         |
|------------|--------------|-------------------------------------|
| 1          | 532 41 64-80 | Wheel, Steering Husq SR             |
| 2          | 532 41 35-91 | Axle Asm., Front                    |
| 4          | 532 40 30-87 | Spindle Asm., LH                    |
| 5          | 532 40 30-88 | Spindle Asm., RH                    |
| 6          | 532 12 49-31 | Bearing, Race Thrust Harden         |
| 7          | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga.       |
| 8          | 812 00 00-29 | Ring, Clip #T5304-75                |
| 9          | 532 12 12-32 | Cap, Spindle                        |
| 13         | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga.       |
| 14         | 810 04 06-00 | Washer, Lock Hvy. Hlcl. Spr. 3/8    |
| 15         | 873 54 06-00 | Nut, Crown Lock 3/8-24 unf          |
| 16         | 532 19 47-46 | Shaft Steering                      |
| 19         | 532 19 47-29 | Plate Steering                      |
| 21         | 532 18 67-37 | Adapter, Wheel Steering             |
| 22         | 532 19 48-45 | Bushing, Strg. Blk.                 |
| 26         | 532 41 59-87 | Insert, Wheel Steering Husq SR      |
| 28         | 817 00 06-12 | Screw 3/8-16 x 3/4                  |
| 35         | 532 19 47-32 | Gear, Sector Plate                  |
| 45         | 819 18 38-12 | Washer 9/16 x 2-3/8 x 12 Ga.        |
| 51         | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf      |
| 53         | 532 18 89-67 | Washer Hardened .793 x 1.637 x .060 |
| 57         | 532 40 74-65 | Bracket Upstop                      |
| 58         | 532 19 47-47 | Bolt Shoulder Sector Pivot CFM      |
| 59         | 532 19 47-48 | Washer Thrust Sector Steering       |
| 60         | 873 97 10-00 | Nut Flange Lock 5/8-11              |
| 61         | 532 19 47-40 | Draglink, LH                        |
| 62         | 532 19 47-41 | Draglink, RH                        |
| 63         | 817 00 05-12 | Screw 5/16-18 x 3/4                 |
| 64         | 532 19 98-49 | Retainer Clip Spring Steering       |
| 66         | 871 02 07-48 | Bolt Hex Fghd. 7/16-14 x 3 Serr.    |
| 67         | 532 19 47-37 | Bushing PM Front Axle               |
| 68         | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5       |
| 69         | 532 19 91-62 | Washer 1.5 x .505 x .118            |
| 70         | 532 19 61-97 | Bracket Deck Susp. Front            |
| 118        | 532 40 60-13 | Bushing                             |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
MOWER DECK **44**

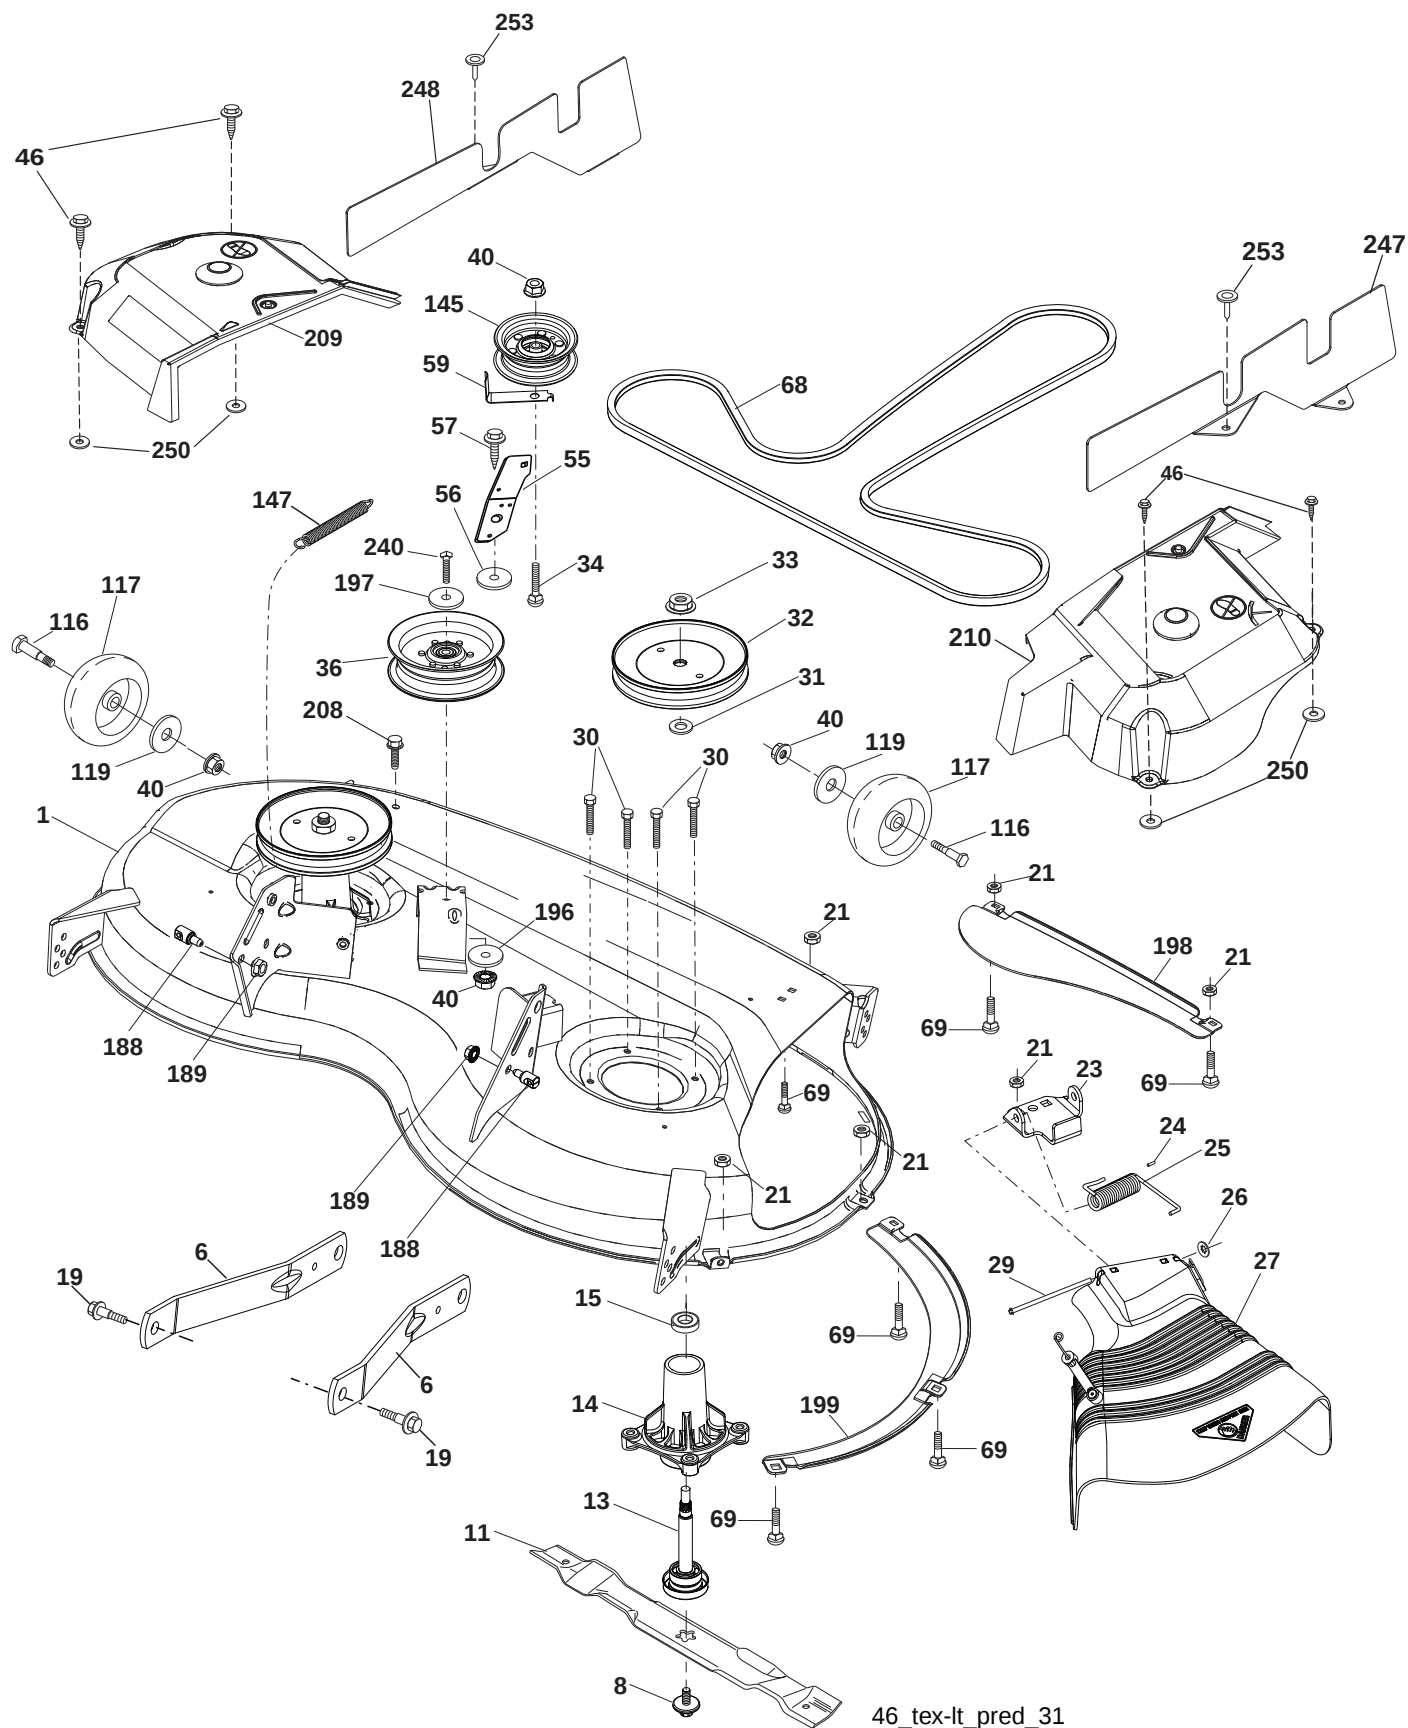

46\_tex-lt\_pred\_31


# TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64

## MOWER DECK **44**

| KEY NO. | PART NO.     | DESCRIPTION                         | KEY NO. | PART NO.            | DESCRIPTION                                                                                                                   |
|---------|--------------|-------------------------------------|---------|---------------------|-------------------------------------------------------------------------------------------------------------------------------|
| 1       | 532 40 50-50 | Mower Housing                       | 117     | 532 17 48-73        | Wheel, Gauge                                                                                                                  |
| 6       | 532 19 51-86 | Arm Suspension                      | 118     | 873 90 06-00        | Nut Lock Flg. 3/8-16 unc                                                                                                      |
| 8       | 532 19 30-03 | Bolt/Washer Asm. 7/16-20 unf        | 119     | 819 13 20-12        | Washer 3/8 x 7/8                                                                                                              |
| 11      | 532 40 53-80 | Blade Mower                         | 145     | 532 19 31-97        | Pulley, Idler, Flat                                                                                                           |
| 13      | 532 19 28-72 | Shaft Assembly, Mandrel             | 147     | 532 19 72-51        | Spring                                                                                                                        |
| 14      | 532 18 72-81 | Housing, Mandrel                    | 188     | 532 19 51-61        | Stud Fastener                                                                                                                 |
| 15      | 532 11 04-85 | Bearing, Ball, Mandrel              | 189     | 873 90 05-00        | Nut Lock Hex Flange                                                                                                           |
| 19      | 532 19 65-39 | Bolt, Shoulder                      | 197     | 819 13 13-12        | Washer 13-32 x 13/16 x 12 Ga.                                                                                                 |
| 21      | 873 68 05-00 | Nut                                 | 198     | 532 40 31-49        | Baffle Center Front                                                                                                           |
| 23      | 532 19 25-57 | Bracket, Deflector                  | 199     | 532 40 31-50        | Baffle Front RH                                                                                                               |
| 24      | 532 10 53-04 | Cap, Sleeve                         | 200     | 532 41 35-24        | Washer 13/32 x 1 x 1/2                                                                                                        |
| 25      | 532 19 70-26 | Spring, Torsion, Deflector          | 208     | 817 67 06-08        | Screw Thdrol 3/8 -16 x 1/2                                                                                                    |
| 26      | 532 11 04-52 | Nut, Push                           | 209     | 532 42 49-86        | Guard Cover Mandrel LH                                                                                                        |
| 27      | 532 41 53-69 | Shield, Deflector                   | 210     | 532 42 49-88        | Guard Cover Mandrel RH                                                                                                        |
| 29      | 532 13 14-91 | Rod, Hinge                          | 240     | 874 52 06-36        | Bolt 3/8-16 x 2-1/4 Gr. 5                                                                                                     |
| 30      | 532 17 39-84 | Screw Thdrol. Rolling Wsh. Hd.      | 247     | 532 42 16-68        | Shield Deck RH                                                                                                                |
| 31      | 532 18 76-90 | Washer, Spacer                      | 248     | 532 42 16-69        | Shield Deck LH                                                                                                                |
| 32      | 532 19 74-73 | Pulley, Mandrel                     | 250     | 532 42 30-62        | Palnut 1/4                                                                                                                    |
| 33      | 532 40 02-34 | Nut, Toplock, Flanged               | 253     | <b>532 42 73-50</b> | Tulflok Rivet                                                                                                                 |
| 34      | 872 11 06-12 | Bolt Carr. Sh. 3/8-16 x 1-1/2 Gr. 5 | --      | 532 19 28-70        | Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included) |
| 36      | 532 19 73-79 | Pulley Idler                        | --      | <b>532 42 72-24</b> | Replacement Mower, Complete                                                                                                   |
| 40      | 873 90 06-00 | Nut 3/8-16 unc                      |         |                     |                                                                                                                               |
| 46      | 532 13 77-29 | Screw                               |         |                     |                                                                                                                               |
| 55      | 532 19 72-49 | Arm, Idler                          |         |                     |                                                                                                                               |
| 56      | 532 19 90-92 | Spacer, Retainer                    |         |                     |                                                                                                                               |
| 57      | 817 00 06-16 | Screw Hex Wsh. Thd. 3/8-16 x 1      |         |                     |                                                                                                                               |
| 59      | 532 14 10-43 | Guard, Tuv. Idler (94)              |         |                     |                                                                                                                               |
| 68      | 532 40 51-43 | V-Belt                              |         |                     |                                                                                                                               |
| 69      | 872 14 05-05 | Bolt                                |         |                     |                                                                                                                               |
| 116     | 532 19 34-06 | Bolt, Shoulder                      |         |                     |                                                                                                                               |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

**TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64**  
**MOWER LIFT 45**

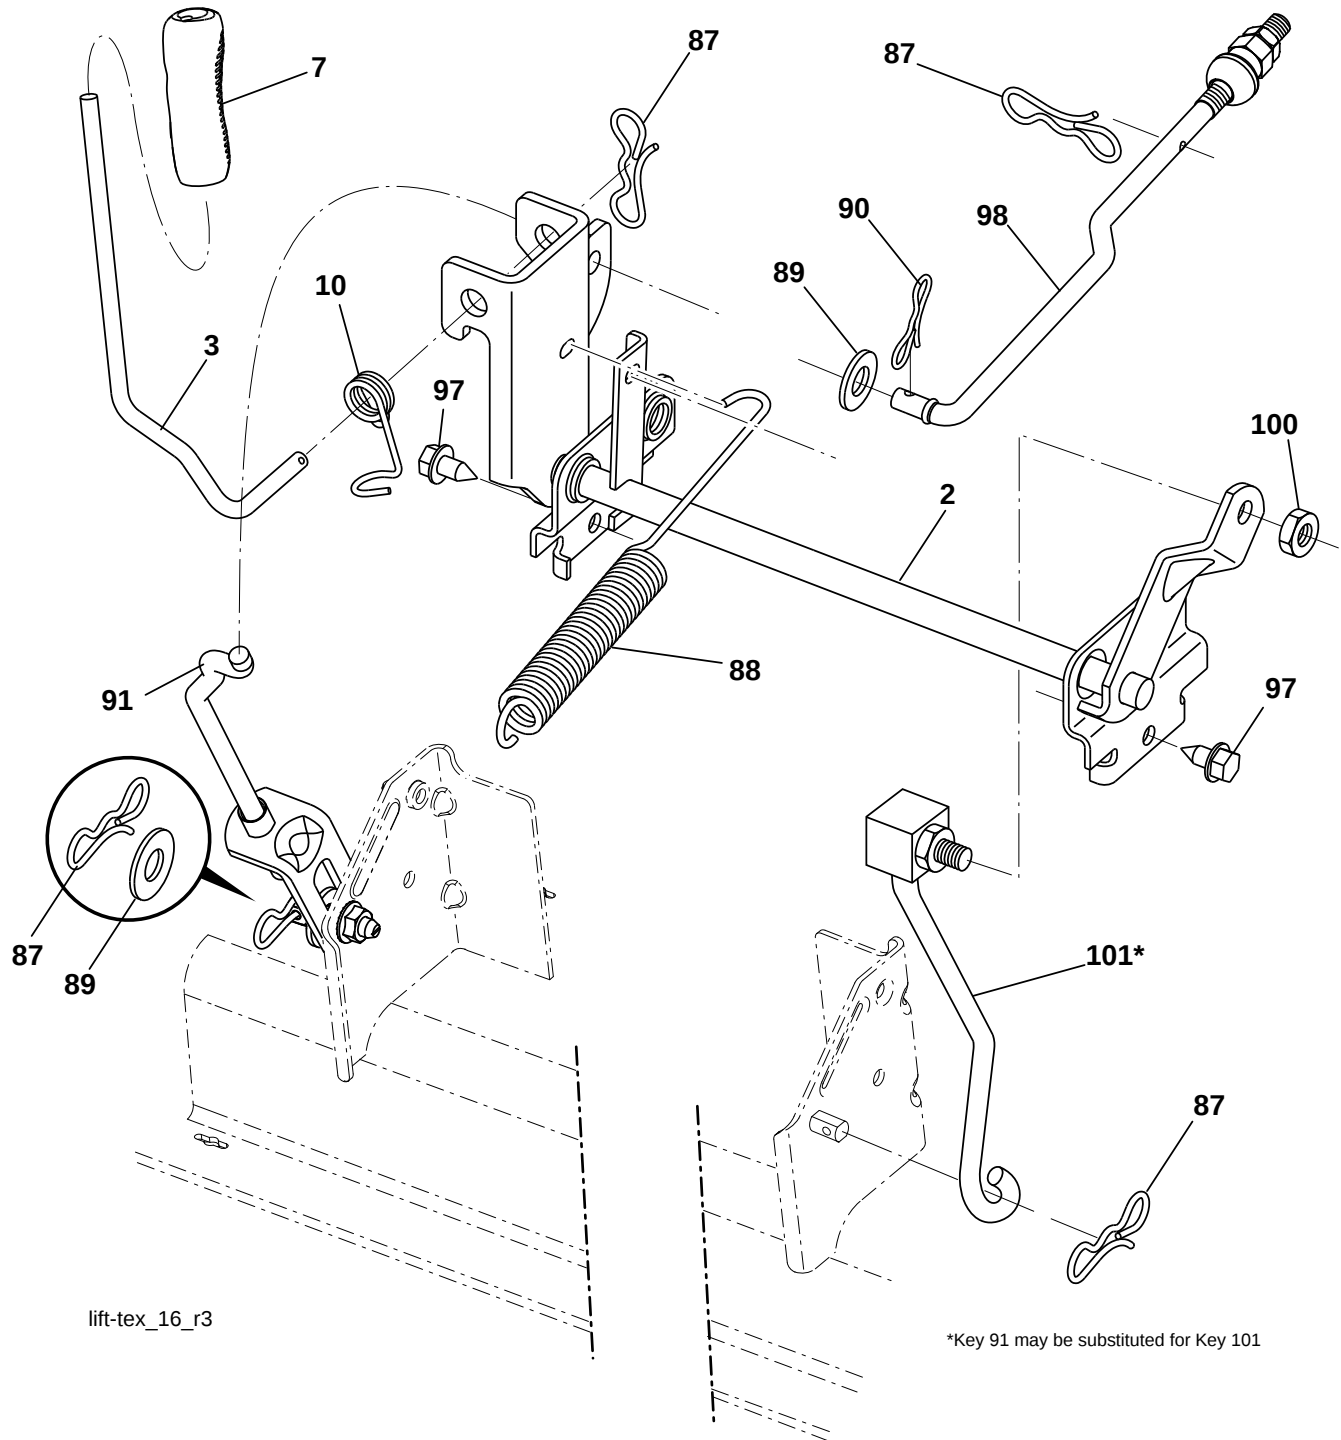


lift-tex\_16\_r3

| KEY NO. | PART NO.     | DESCRIPTION                  |
|---------|--------------|------------------------------|
| 2       | 532 19 52-23 | Shaft Asm., Lift             |
| 3       | 532 19 52-30 | Lever Asm., Lift             |
| 7       | 532 41 15-55 | Grip, Lever                  |
| 10      | 532 19 63-14 | Spring Torsion               |
| 87      | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock |
| 88      | 532 41 07-10 | Spring Lift Assist           |
| 89      | 819 19 19-12 | Washer Clear Zinc            |
| 90      | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock |
| 91      | 532 19 51-81 | Link Lift Susp. Mower Rear   |

| KEY NO. | PART NO.            | DESCRIPTION                       |
|---------|---------------------|-----------------------------------|
| 97      | 817 00 06-12        | Screw 3/8-16 x .75 Smgml. Tap/R.Z |
| 98      | 532 19 52-70        | Link Lift Susp. Front Mower       |
| 100     | 873 93 06-00        | Nut Centerlock 3/8-16 unc         |
| 101     | <b>532 40 70-03</b> | Link Asm. Lift                    |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

TRACTOR -- MODEL NO. YTH200 TWIN (96041006401), PRODUCT NO. 960 41 00-64  
SEAT ASSEMBLY **42**

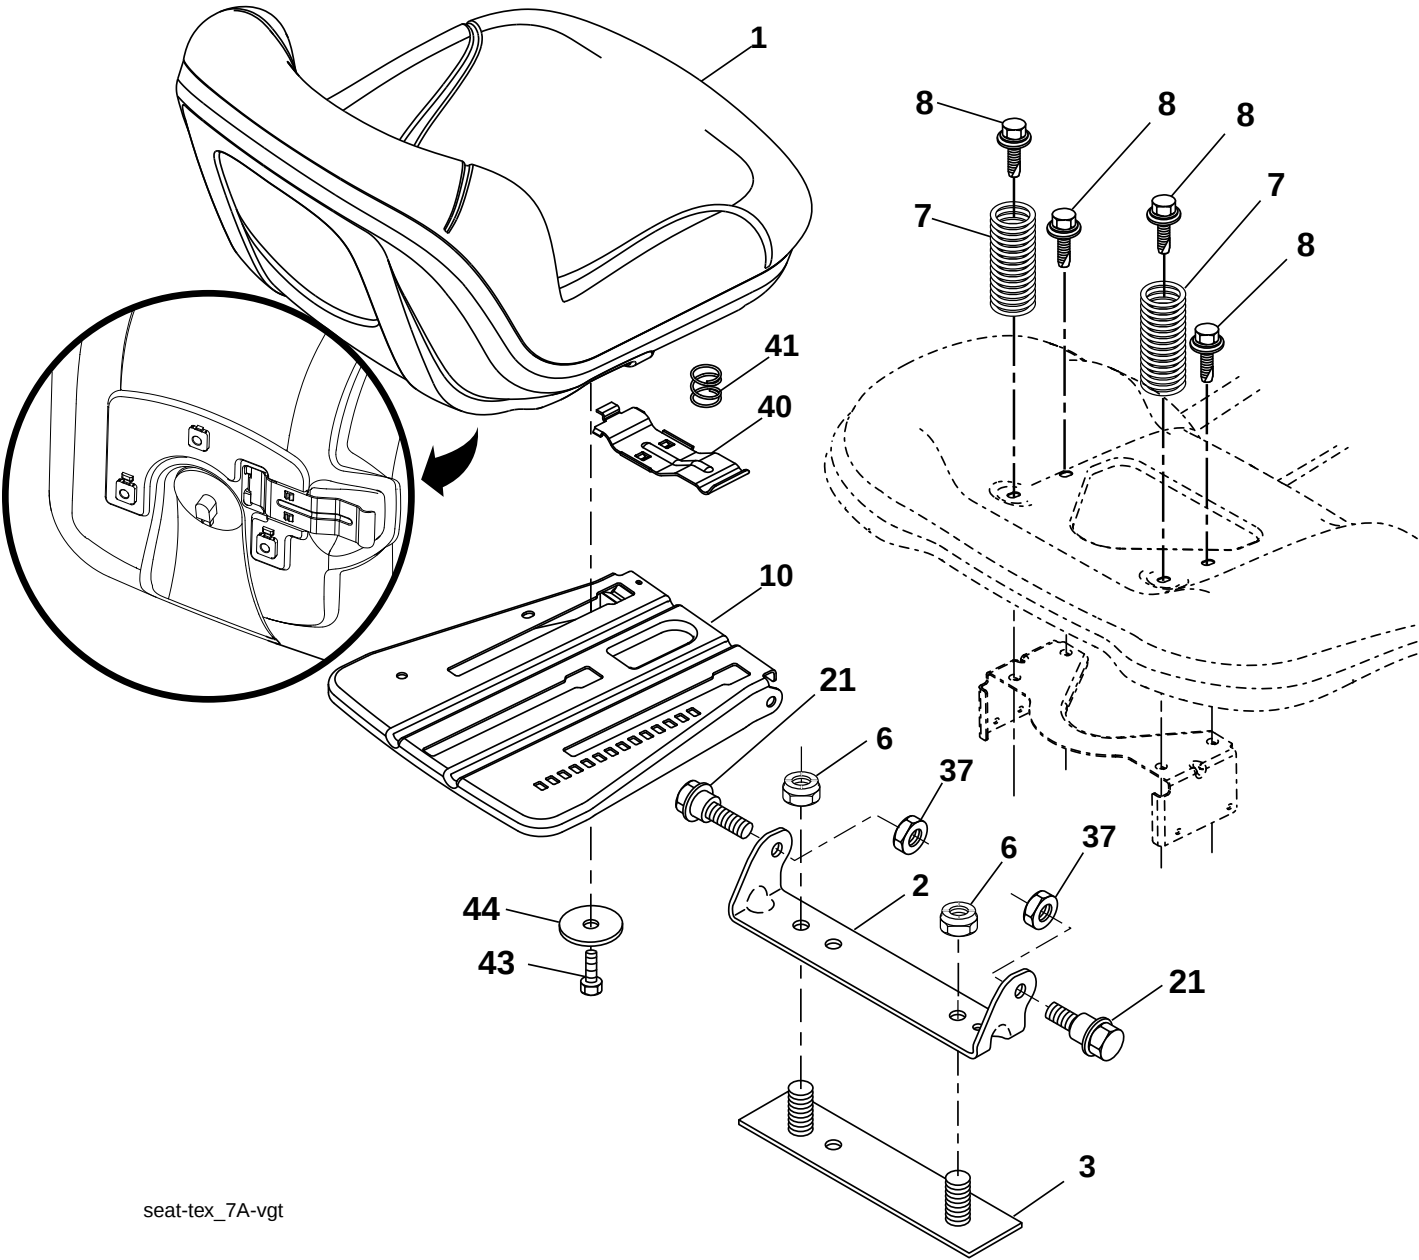

| KEY NO. | PART NO.     | DESCRIPTION                    |
|---------|--------------|--------------------------------|
| 1       | 532 42 40-68 | Seat                           |
| 2       | 532 18 01-66 | Bracket Pivot Fender           |
| 3       | 532 14 06-75 | Strap, Asm. Fender             |
| 6       | 873 80 06-00 | Nut, Lock w/Ins. 3/8-16 unc    |
| 7       | 532 12 41-81 | Spring, Seat Cprsn.            |
| 8       | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems. |
| 10      | 532 19 69-77 | Pan, Seat                      |
| 21      | 532 17 18-52 | Bolt, Shoulder 5/16-18         |

| KEY NO. | PART NO.     | DESCRIPTION                   |
|---------|--------------|-------------------------------|
| 37      | 873 80 05-00 | Nut, Lock 5/16-18 unc         |
| 40      | 532 19 76-61 | Handle Slide Seat             |
| 41      | 532 19 82-00 | Spring Latch Seat             |
| 43      | 874 76 06-12 | Bolt 3/8-16 x 3/4             |
| 44      | 819 13 38-12 | Washer 13/32 x 2-3/8 x 12 Ga. |

**NOTE:** All component dimensions given in U.S. inches  
1 inch = 25.4 mm

