

## SB, Demo board for GARDENA Sileno city and Sileno life, 2019-03

### Affected models

15001\*, 15002\*, 15003\*, 15004\*, 15005\*, 15006\*, 15007\*, 19066\*, 19067\*; 15101\*, 15102\*, 15103\* 15104\*, 15105\*, 15106\*, 19113\* 19114\*, 19115\*, 19116\*, 19117\*, 19118\*

### Affected market(s)

All.

### Description

Requirements for demo board.

### Action

	Product sold to end user	Residual inventory not yet sold
<b>What is required:</b>	n/a	n/a
<b>When to do:</b>	n/a	n/a
<b>What to do:</b>	Make sure that the demo board is built up according to the requirements	
<b>How to do:</b>	See Additional information	

### Parts information

New part no.	Part description	Quantity	Old part no.

### Warranty reporting information

Normal warranty rules apply; service must be performed through our warranty process using only the codes and text listed below:


Field	Selection or Entry
<b>Claim type (inventory)</b>	Non required
<b>Claim type (end users)</b>	74 - Preventative campaign
<b>Failure description</b>	Non required
<b>Component code</b>	Non required
<b>Defect code</b>	Non required
<b>Labor allowance</b>	Non required

## Additional information

**Reason:** Requirements for Sileno city and Sileno life demo boards.

- min. size of the board 1,6 m x 2,4 m
- circumferential safety border of min. 7 cm height
- the board should be at least 30 cm above a concrete floor
- 30 cm distance between boundary wire and the board edge
- installation of the charging station in a corner

Safety border min. 7 cm high!

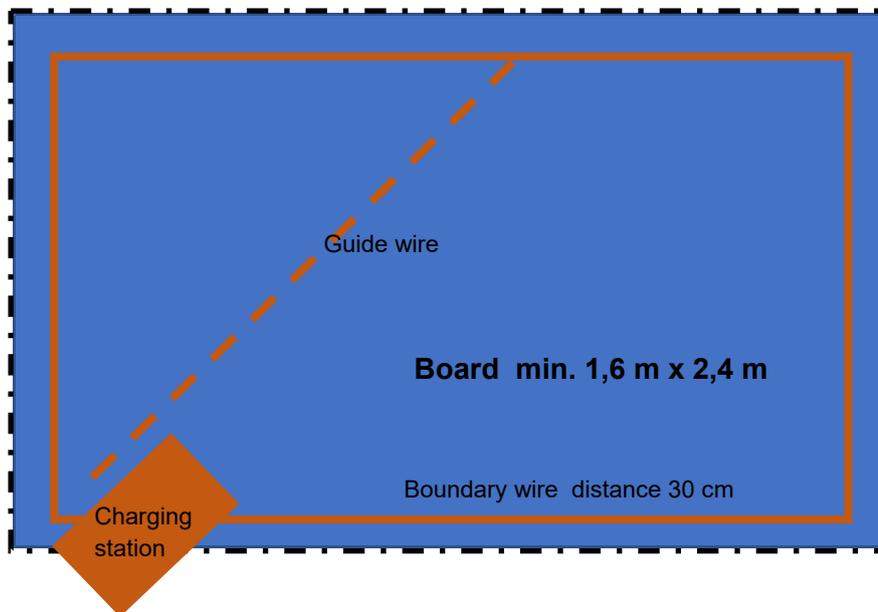

## Revision History

Rev.	Date	Order id.	Description
A	2019-03	SB-4113	Created