

DIXON[®]

ZTR[®]
502

Operator's Manual

INDEX

1. SAFETY	Pages	1 - 3
2. WARRANTY POLICY	Page	4
3. SPECIFICATIONS	Page	5
4. SET UP AND SERVICE	Pages	6 - 11
5. OPERATION INSTRUCTIONS	Pages	12 - 13
6. CARE AND MAINTENANCE	Pages	14 - 21
7. TROUBLE SHOOTING	Pages	22 - 24
8. PARTS ILLUSTRATIONS	Page	29
9. ELECTRICAL SCHEMATIC	Page	30
10. PARTS LIST	Pages	31 - 33

IMPORTANT - READ CAREFULLY

The Dixon ZTR Mower is both easy and fun to operate. However, any power mower must be operated properly to be safe. It is not a toy or a recreational vehicle. Before you start to use the mower, read the operator's manual carefully, and become completely familiar with the controls.

The information in this operator's manual applies to all Dixon ZTR Model 502 Mowers. Your Dixon dealer will gladly provide a check-out ride, and answer any questions.

See your dealer for warranty service, parts and repairs.



DIXON INDUSTRIES, INC.

Box 1569

Coffeyville, Kansas 67337-0945 (316)251-2000

Airport Industrial Park

SAFETY

RIDING LAUNMOVJERS, IF IMPROPERLY OPERATED, CAN CAUSE SERIOUS INJURY.

The following examples are the most common causes of injury to the operator or bystander.

1. BLADE CONTACT: The operator or bystander inserts a hand or foot into the discharge chute or under the mower deck and into the path of the cutting blade.
Never run the mower blades when there are people nearby.
Always turn the engine off when cleaning or working around the mower deck.
2. RUN-OVER: This situation occurs when a bystander is run-over or backed over by the mower. The most frequently cited examples are with small children who wander into, or are allowed to play, in an area where the mower is being operated. Never run the mower blades when there are people nearby, especially children. Young children should be indoors and watched by an adult.
Always look behind you before backing up.
3. TIP-OVER: This occurs when the mower tips over, usually sideways or to the rear. This situation is due to operation of the mower on steep inclines or near a drop off.
Mow across the slope to slightly uphill.
Mow slopes when the grass is dry and watch for bumps, holes and other obstacles.
Test the slope with the blades off. A good rule of thumb is "Don't mow on a slope you can't back up". Stay clear of drop-offs, especially if they are on the down side of a slope.
4. THROWN OBJECTS: The fast spinning mower deck blade can strike stones or other objects which can be hurled into the path of a bystander. To prevent this from happening, never remove the safety discharge chute from the mower deck, or operate the mower when other people are around.
5. FIRES: Most accidents of this type occur during re-fueling of the mower or placing the mower in a storage situation. The exhaust system and related engine components operate at very high temperatures which can ignite any fuel spilled on or near them. Always allow the mower to cool before re-fueling or placing in storage.
6. OPERATION BY CHILDREN: This mower is not a toy or recreational vehicle.
Never allow children to operate the mower in any manner or to ride as a passenger.

NOTE: The six examples are the most frequently cited injury causing situations. Please review all the safety precautions outlined on the following pages prior to operation of the mower. Our aim is to enhance the safe and satisfactory use of this product.

SAFETY REMINDERS: READ CAREFULLY BEFORE OPERATION

1. Wear appropriate, safe clothing when mowing - close fitting jeans or slacks and heavy leather or safety shoes with rough soles. Never operate this mower with bare feet or open sandals.
2. Do not operate on wet or slippery grass.
3. Always mow at the slowest speed that will cut satisfactorily.
4. Keep hands and feet away from the blade at all times.
5. Keep persons clear of the discharge chute. Do not operate mower unless deflector is in place.
6. When mowing hills or slopes, use extreme caution. Reduce speed, do not make sudden starts, stops or turns.
7. Always disengage blades before taking the mower across walks or objects that project above the surface.
8. Stay alert for holes, rocks and roots in the terrain, and other hazards. Keep away from drop-offs.
9. When the mower is not in use, turn the engine off and remove key. Never leave the engine running unattended. Your Dixon mower is equipped with a weight-sensitive switch that kills the engine when operator leaves the seat while blades are engaged.

"Test this important safety feature before each time mower is used. This may be done by starting engine, engaging blades and then rising slightly from seat. If engine does not stop, see your dealer for necessary repair."
10. Before adjusting or servicing your mower, turn off the engine and let it cool. Be sure all moving parts are stopped. Never run the 502 with the body open.
11. Never run the engine indoors; the fumes are dangerous.
12. Before backing your Dixon Mower; stop, turn around and look.
13. Handle gasoline with care - it is highly flammable.
 - A. Use approved gasoline container.
 - B. Never remove the fuel cap of, or add gasoline to, a running or hot engine, or an engine that has not been allowed to cool after running. Never fill the tank indoors and always clean up spilled gasoline.
 - C. Never store the mower, with gasoline in the tank, inside the building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
14. Never lift lawnmower by the body; lift only by the frame.
15. Never carry passengers.

SAFETY REMINDERS: (continued)

16. Use care when pulling loads or using heavy equipment.
 - A. Use only approved drawbar hitch points.
 - B. Limit loads to those you can safely control.
 - C. Do not turn sharply. Use care when backing.
17. Watch out for traffic when crossing or near roadways.
18. Keep the mower in good operating condition, and keep safety devices in place and working.
19. Keep all nuts, bolts and screws tight to be sure the mower is in safe working condition.
20. To reduce fire hazard, keep the engine free of grass, leaves or excessive grease.
21. The mower should be stopped and inspected for damage after striking a foreign object or if it starts vibrating, and any damage should be repaired before restarting and operating the mower.
22. When mowing, proceed as follows:
 - A. Mow only in daylight or in good artificial light.
 - B. Shut the engine off when removing the grass catcher or unclogging chute.
 - C. Check the blade mounting bolts for proper tightness at frequent intervals.
 - D. Never operate the machine when using medication or under the influence of alcohol or drugs.

Warranty Policy:

Each new Model 502 is warranted against manufacturing defects in material and workmanship under normal use and service for a period of (1) year or (400) hours from date of purchase and is extended to the original retail purchaser of the mower only.

Obligation:

Under this warranty policy Dixon Industries, Inc. shall be limited to the replacement to the original purchaser of any part or parts, which, within the warranty period shall be shown to be defective due to faulty workmanship or materials at the factory.

What is NOT covered by Dixon Industries, Inc.:

1. TRANSPORTATION CHARGES: Any charges by the dealer or other parties for transportation of the mower to or from the dealers place of business, also known as pick up and delivery.
2. ENGINES: The warranty policy and procedures for any engine used on our mowers is the responsibility and obligation of the individual engine manufacturer. As such, Dixon Industries, Inc. assumes no responsibility for either the policies or procedures of said manufacturers.
3. BELTS AND BLADES: Our warranty does not apply to the blades or belts used on our mowers due to the very nature of the function they perform and to the elements they are exposed to.
4. ROUTINE MAINTENANCE: Adjustments of any type of oil or grease used on the mower.
5. TIRES: Warranty extended by the manufacturer.
6. PEERLESS GEAR BOX: Warranted for a period of (90) days from date of purchase of Tecumseh Products Company.
7. NEGLIGENCE: Any failure caused by negligence, improper use or abuse on part of owner or operator.

Who is authorized to perform warranty service?

Any authorized Dixon ZTR dealer can perform repairs under warranty on our mowers. If warranty repairs are needed, please contact the selling dealer first. If, due to circumstances beyond your control, you are unable to obtain repairs by the selling dealer, contact the customer service department of Dixon Industries, Inc. for assistance.

Product updates or improvements:

We reserve the right to make changes in design or improvements on our products without imposing any obligation upon ourselves to install the same on products heretofore manufactured.

SPECIFICATIONS

Chassis: 11 GA - rectangular tube.

Body: Two piece - made of DR acrylic reinforced with fiberglass, color fast, scratch and impact resistant. Front body contains access panels for battery service and engine to mower deck belt removal. Rear body tilts up to allow service on the entire drive system.

Seat: Economically designed for operator comfort by use of high density closed cell foam, contoured back rest and arm rests. Seat is adjustable fore and aft.

Mower Deck: 12 GA stamped steel construction, (3) blades, 50" cut width, cut height 1" to 4" via 7 position lift handle. Self cleaning design, smoothly curved front, aides discharge of grass.

Blade Drive: Warner electric clutch.

Drive System: (2) Sundstrand BDU - 10 L hydrostatic transmissions driven by a permanently lubricated peerless gear box.

Engine: 18 HP Kohler twin cylinder with cast iron cylinder, pressure lubrication and mechanical fuel pump.

Starting System: Electric by key switch operation with safety interlocks on parking brake and blade drive clutch.

Tires: Front 11 x 4.10 x 5 smooth tread. Rear 20 x 10 x 8 turf savers.

Capacities: Fuel - 4.8 gallons total (dual tanks) with fuel gauges.

Hydrostat oil tank - 3 quart with inline 10 micron filter.

Hydrostat oil recommendation - name brand SAE (10-W-30) motor oil.

Dimensions: Width - 60" Height -

45" Length - 72"

Weight - 665 lbs.

NOTE: Additional information provided in service instruction under the individual component.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.....

1. Seat assembly instructions.
2. Upper control lever installation.
3. Mower deck installation.
4. Deck leveling procedure.
5. Final preparation.


SEAT ASSEMBLY INSTRUCTIONS

1. Assemble seat as shown in picture. Do not fully tighten the bolts which secure left and right arm rest brackets to seat bottom until seat back and tool box are installed. This will aid alignment of all parts.
2. Place seat assembly on rear body cover, connect seat safety switch.
3. Insert the (2) rear studs of the seat slide into the rear holes of the body cover. Firmly hold seat assembly against body cover with one hand while rear body is raised to fully open position. Continue to hold seat against body to prevent damage to seat safety switch wiring.
4. Install (1) flat washer and (1) nylok nut on (1) of the rear studs extending through body cover and seat frame, tighten a few threads to hold seat assembly in place.
5. Position seat on front holes and install all remaining washers and nylok nuts. Tighten all nuts fully.

SEAT ASSEMBLY INSTRUCTIONS

SEAT PACKAGE


DET	QTY	PART NO	DESCRIPTION
1	1	4416	SEAT BOTTOM ASSEMBLY
2	1	4385	SEAT BACK
3	2	4400	ARM REST
4	1	4401	ARM REST BRACKET L.H.
5	1	4402	ARM REST BRACKET R.H.
6	1	4257	UTILITY BOX ASSEMBLY
7	14	3020	5/16 STD. FLAT WASHER
8	14	3224	5/16-18 x 3/4 HMB GR5 W/NYLOK
9	4	3205	5/16-18 HEX NUT W/NYLOK
* 10	2	3722	FIBRE WASHER
* 11	2	3033	1/2" FLAT WASHER - NARROW
* 12	2	3035	1/2-13 HEX JAM LOCKNUT
* 13	2	3576	NYLON BUSHING

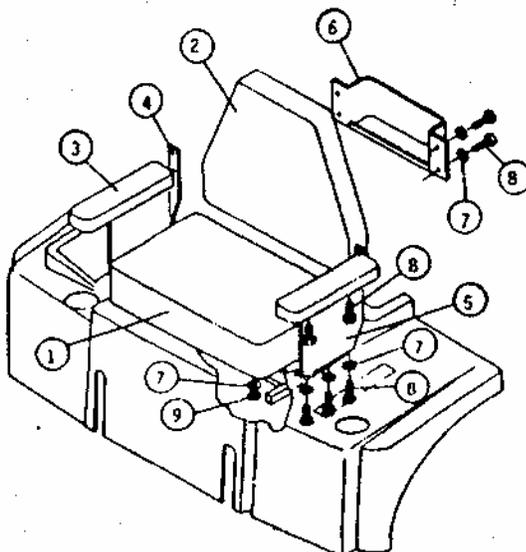


• NOTE: HARDWARE FOR CONTROL LEVER ASSEMBLY

UPPER CONTROL LEVER INSTALLATION

1. Raise rear body cover to fully open position.
2. Install flat washer on right hand swivel plate weldment. Next install right hand control lever, then second flat washer.
3. Push control lever into the neutral slot and install (2) cup washers, (1) flat washer and jam nut. (See Illustration)
4. Tighten jam nut. Proper tightness or tension on jam nut is achieved when swing out movement of upper control levers requires some pressure. Levers should not fall to the side or be sloppy in movement.
5. Repeat above procedure on left side.

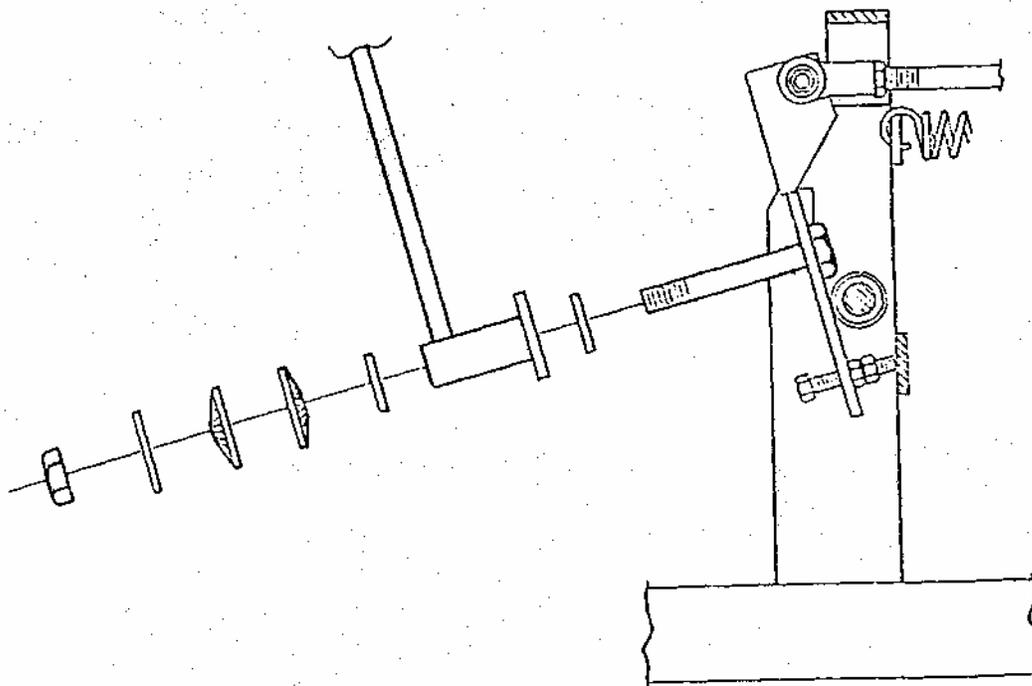

1. To remove front body from chassis, disconnect headlights and remove acorn nut in middle of body.
2. Install rear hanger rods on lift frame, as shown in the diagram. Slide lift plate on hanger rods, small holes in lift plate will face rear of mower, and start nylok nuts on each hanger rod until approximately 1/4 inch of threads are exposed.
3. Position mower deck under chassis.
4. Place lift lever in 3rd hole from highest cut, position #5 on quadrant.
5. Using (1) of the deck support rods, insert the rod at the corner of the lift frame and the front of the mower chassis in the groove provided on the lift frame. Pry backwards on the lift frame enough to connect the brake link into the hole on the tab of the lift lever. This will allow for belt installation in step #7.
6. Raise mower deck at the rear and slide (1) of the deck support rods through the mower deck lift plate and the tabs of the mower deck. "Note" A length of 2 x 4 board turned on end and placed under the mower deck for support will make this task easier if the installation is being done by one person, due to the weight of the mower deck.
7. Raise front of mower deck and slide front support rod through lift frame and tabs on mower deck. Install hair pin clips on front and rear support rods.
8. Move lift lever to lowest cut position, install engine to mower deck drive belt on top center pulley. Check belt routing after installation to make certain that belt is centered in groove of electric clutch pulley.
9. Move lift lever toward high cut position and remove brake link from hole on lift lever.
10. Install deflector chute on mower deck by using nuts and bolts provided.
Never operate mower without deflector chute in place.

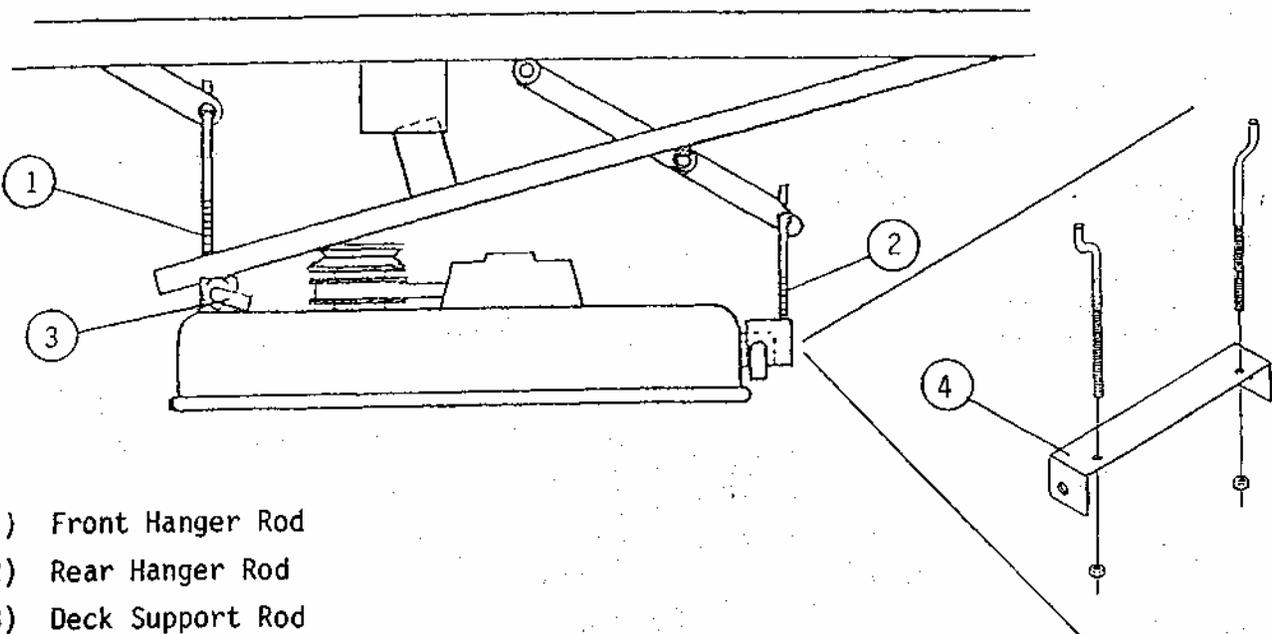

- (1) Front Hanger Rod
- (2) Rear Hanger Rod
- (3) Deck Support Rod
- (4) Lift Plate

MOWER DECK LEVELING PROCEDURE

Leveling Principals:


- A. There are a total of (4) threaded adjusters which will control the attitude or pitch of the mower deck. The adjusters have lock nuts on the bottom which can be turned up or down to raise or lower the front and rear of the mower deck. Deck should be level or pitched slightly higher in rear.

Leveling the Deck:

- A. Place the mower on a smooth level surface, check tire pressures to insure the mower has a correct stance. Inflate tires as required:
 Front - (40 - 46 lbs. maximum)
 Rear - (20 - 24 lbs. maximum)
- B. Remove the discharge chute from the mower deck. Rotate or turn each outer blade tip to align with the edge of the deck or side to side.
- C. Measure from the surface up to the bottom of the blade tip on the discharge side of the mower deck. Retain this measurement. Move to the opposite side and check that measurement is the same. If adjustment is required, turn the nut on the bottom of the front threaded adjuster up or down until both side to side measurements are equal. Retain measurement.
- D. Rotate or turn both outer blades to align with the deck in a front to rear manner. Move to the left rear threaded adjuster, "left rear is designated from operator position on the mower". Turn adjuster nut up or down until rear of mower deck is positioned level to 1/8th of an inch higher than the side to side measurement. At this time, the mower deck will hang or be suspended on (3) points. Move the right rear adjuster and take out the slack which will be present by turning adjuster lock nut up. Confirm the measurement used on the left rear of the deck. Re-install discharge chute.

NOTE:

This will place the mower deck in a base measurement position. Additional adjustment may be required to achieve desired cut for the type of grass or conditions being mowed.

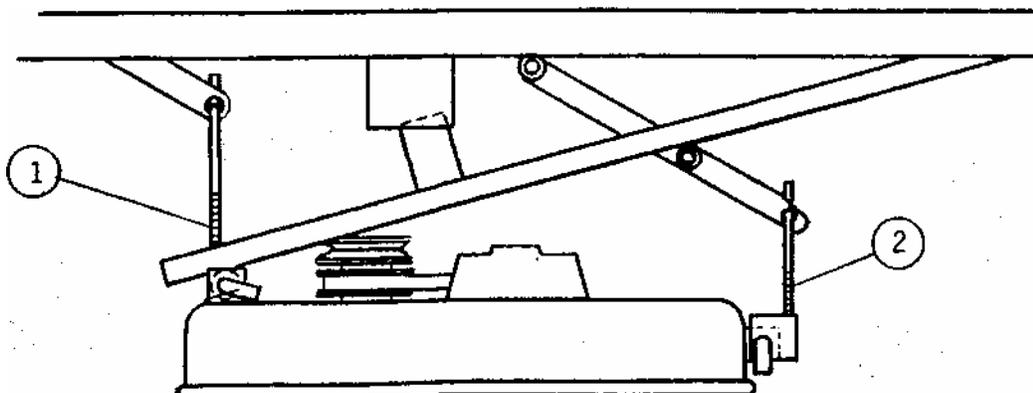

(1) - (2) Adjustment Points

FINAL PREPARATION

1. Remove battery from chassis.
2. Fill each cell with electrolyte (acid) to ring at bottom of fill cap.
3. Allow battery to sit for (10) minutes, re-check acid level and top off any cells that are low.
4. Trickle charge battery using a charger of less than (6) amps until all cells are gassing freely. Hydrometer readings may be taken, if desired.
5. Install permanent battery caps and wash any accumulated acid from battery before re-installation on chassis.
6. Observe proper battery polarity when re-connecting leads on chassis. Always connect positive lead first.

Engine Service:

1. Final preparation of engine should be completed using engine service manual provided with mower.
-

Initial Start and Hydrostat Transmission Check:

1. Final hydrostat checks have been performed at the factory, however, it is necessary to check that the pressure relief bypass on each hydrostatic transmission is completely released before attempting to drive mower.
2. Each hydrostat has a bypass relief pin located at the bottom front of each hydrostatic unit. A bypass keeper is provided to allow the mower to be rolled around without complete servicing of the unit. To accomplish this, the bypass keeper must be positioned to depress the bypass relief pin. After the use of bypass keeper, each must be removed from the bypass relief pin before the unit can be operated.

OPERATION INSTRUCTIONS

The safe and successful operation of the Model 502 will depend upon the operator having the correct knowledge of all controls used on the mower and making good judgments about the terrain to be mowed. Never allow anyone to operate the mower without complete knowledge of all controls and their functions.

Sound judgment by the owner will prevent accidents.

Controls and their functions. All controls described from operators position.

PARKING BRAKE:

The parking brake used on the Model 502 is designed to hold the mower from moving and is not intended for use in stopping the mower while it is in motion. An additional safety feature of the parking brake is that the engine cannot be started unless the brake is applied.

THE HYDROSTATIC DRIVE SYSTEM:

Allows the mower to turn on its own axis (zero radius). Each lever controls one side of the mower. The pressure required to operate the mower is very light and a minimum of 1/2 hour should be spent simply driving the mower in a non-mowing application to gain the confidence necessary to mow like a pro.

LEVER MOVEMENTS:

No shifting or clutching required.

TO GO FORWARD:

Release parking brake. From neutral position, gently puch both drive levers forward; to increase speed, move levers farther forward.

TO GO BACKWARD:

From neutral position, gently pull both drive levers toward you.

TURNING:

Turning is controlled by moving one drive lever slightly forward or rearward of the other. To turn left, move left lever rearward of right lever. To turn "square corners" move lever of desired direction to neutral. To turn on mower's own axis (zero radius) reduce speed and move one lever to reverse position and the other to forward position.

BRAKING:

To brake mower, move both levers in direction opposite of travel, release levers to neutral, set parking brake. When stopping on incline, it may be necessary to hold slight pressure on levers in direction opposite of slope until parking brake is set.

GROUND SPEED:

Ground speed (controlled by movement of hand levers) must be carefully controlled for safety and best mowing results. Never operate at high speed in unfamiliar areas or on slopes.

CHOKE CONTROL LEVER:

Used to start a cold engine. (Engine has not been operated for a length of time)
Located on control panel to operators right.

OPERATION INSTRUCTIONS (continued)

THROTTLE CONTROL LEVER:

Controls engine speed. (Engine should be operated at full throttle when used in a mowing application, this will insure adequate cooling of the engine as well as maintaining mower deck blade speed) Located on control panel on operators right.

MOWER DECK CUT HEIGHT LIFT LEVER:

Controls the cutting height of the mower deck. Seven positions of adjustment in which the very top, or highest notch, is used for transporting the mower in a non-mowing situation. Located in front of operator on the right side of mower.

BLADE DRIVE:

To engage the mower deck cutter blades, lift switch up lightly and push forward. To disengage blades, pull switch backward. Switch is clearly marked "on and off".

LIGHT SWITCH:

The headlights are activated by pushing the switch forward. Failure to turn off the lights, once the engine is stopped, will result in rapid discharge of the battery.

FUSE BLOCK:

Protection of the electrical system is by (1) 15 AMP fuse. To remove the fuse for inspection, just simply lift upon fuse block lid. If fuse burns quickly, please consult your dealer for inspection and repair. Never attempt to bypass the fuse by any method.

CARE AND MAINTENANCE - MODEL 502

This portion of the Model 502 owners manual deals with normal service items which can be performed by the owner. Please remember that if you are in doubt as to the correct service procedures to be followed, these and other service situations can be handled by a Dixon ZTR Dealer who is familiar with the service of your mower.

NOTE:

- , The disassembly and repair of the Sundstrand BDU 10 L hydrostatic transmissions is best left to a qualified Sundstrand repair and service facility. These repair centers are equipped with the necessary tools and service information to accurately perform all service required. Due to the precision nature of these transmissions, field repairs cannot be recommended.

MAINTENANCE SCHEDULE:

To insure a long and trouble free service life on all the components used on the Model 502 a regular and thorough maintenance schedule should be followed. As with any type of precision made equipment, a certain amount of initial bedding in or seating of the components will take place. The following items should be checked after the first (10) hours of operation and on a weekly basis, or each (40) hours of use:

1. Drive system chains, belts and controls.
2. Mower deck belts
3. Tire pressures.
4. Hydrostat oil.
5. Tightness of all nuts and bolts.

Refer to engine service manual provided with your mower for maintenance schedules and procedures to be used on the engine.

CARE AND MAINTENANCE - MODEL 502

MOWER DECK SERVICE: CUTTER BLADE REMOVAL - BELT TENSION.

"CAUTION" The removal of the cutter blades for either sharpening or replacement is best accomplished by removing the deck assembly from the mower. Do not attempt to raise or lift the front of the mower unless proper safety equipment is available to support the mower. If you do not have the necessary equipment, entrust this task to your dealer.

DECK REMOVAL:

1. Remove front belt access cover from body. Stand in front of the mower, grasp lift quadrant lever with left hand. Move lever to align with the (5th) hole from the bottom on the quadrant plate. At this time, connect *• brake link into hole on lift lever. Move lift lever toward lowest cut position and remove belt from the top of center deck hub assembly.
2. Remove the hair pin cotters from the ends of the deck support rods. Slide deck support rods from deck while supporting deck assembly with a suitable brace, or by the use of an assistant to hold the deck while rods are removed. Slide deck from under chassis.
3. Reverse procedure to re-install deck assembly.

CUTTER BLADE REMOVAL:

1. Carefully place deck assembly in a manner which will allow access to the blade bolts. Hold blade from turning while bolt is removed from the center of each hub assembly. "Caution" wear heavy, thick gloves when holding onto cutter blade, avoid the sharp edge of the blade.
2. When re-assembling blades to hub assemblies, fully tighten blade bolts to a minimum of (35 ft. lbs.) torque. The use of air impact tools is recommended for installation to insure bolt tightness.

BELT TENSION:

1. The engine to mower deck drive belt on the Model 502 is automatically held in proper tension by springs which push the deck assembly forward, and does not require any additional adjustment to be made. Both the belt and the idler system should be periodically inspected due to the nature of the job they perform.
2. Serpentine deck belt tension is maintained by a manual adjustment rod which is located on the top of the mower deck assembly. Proper belt tension is critical to insure cut quality. If adjustment is required, tighten lock nut on adjustment rod until belt free play or movement between pulleys is approximately 1/4 of an inch.

CARE AND MAINTENANCE - MODEL 502


DRIVE SYSTEM ADJUSTMENTS: Hydrostat Chains - Belts - Cable - Controls


Refer to the diagrams on the following pages for the location of adjustment points.


- Step 1. Loosen the front and rear mounting bolts of the hydrostat, turn the rear adjustment bolt downward, which will tension the final drive chain to the rear wheel. Chain is correctly tensioned when at a point mid-way between the sprockets chain free play or movement is approximately 1/16th of an inch up and down. Re-tighten mounting bolts.
- Step 2. Loosen the (2) bolts which secure the front chain adjustment, refer to diagram, turn the front adjustment bolt downward using a 5/16th alien •; wrench. Correct tension is as in step #1. Re-tighten bolts.
- Step 3. Repeat above procedures on opposite hydrostat.
- Step 4. Tighten the (2) J-bolts on the T-box mounting plate until each belt has 1/8th to 1/4th of an inch free play or movement at a mid-point between the pulleys on the hydrostats and T-box.
- Step 5. Position parking brake lever in the off or disengaged position. This will allow the belt idler used on the engine to T-box to swing fully and apply tension to the belt. At this time, check that the cable which pulls the idler to a neutral position has approximately 1-1/2 to 2 inches of free play. If adjustment is required, loosen the lock nuts on the cable block and turn cable sleeve in or out to achieve desired measurement. Re-tighten lock nuts. "NOTE" Cable must have the above dimension with parking brake released or drive belt may slip, causing a loss of power.
- Step 6. Neutral adjustment must be checked at this time which will require the engine to be started and the parking brake released. Swing upper control levers outward and into neutral slots, start engine, use caution when releasing parking brake as mower may tend to creep or move prior to re-adjustment of neutral settings on each hydrostat. If adjustment is required, loosen lock nuts at each end of the control rods and back off the tension bolt on each spring block. Turn control rod in or out until neutral is obtained on each hydrostat. Re-tighten lock nuts and tension bolts on spring blocks.
- Step 7. Stop engine, move levers to drive position. Lightly push each upper control lever forward until a resistance is felt on the lever. At this time, check that the forward lever stops are hitting against stop block. "NOTE: Do not allow levers to travel to completely forward without hitting stop blocks as damage to hydrostats could result. If adjustment is required, loosen lock nut on lever stop and turn bolt in to allow lever to hit the stop before resistance is felt in the hydrostat.
- Step 8. Start engine. Drive mower forward and observe driving condition. If mower tends to pull to either side, re-adjust lever stop on fast side to slow that hydrostat down and even out the ground speed. Do not speed up slow side as over stroking of the hydrostat could result in damage to the unit. If upper control levers are slightly off-set after this adjustment, they can be realigned by bending them into alignment.

(1) HYDROSTAT MOUNTING BOLTS

(2) THREADED ADJUSTERS TO TENSION CHAINS

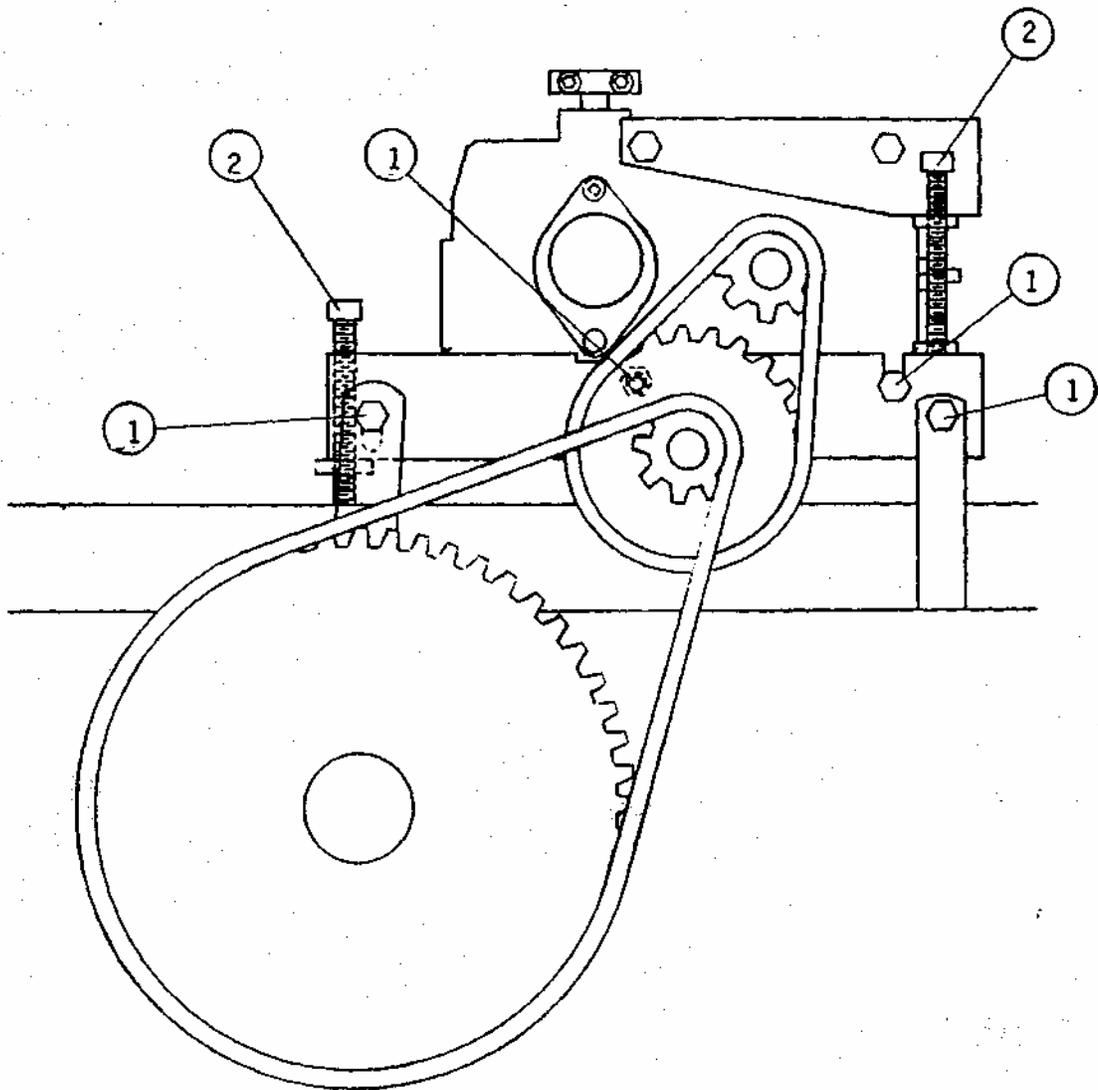

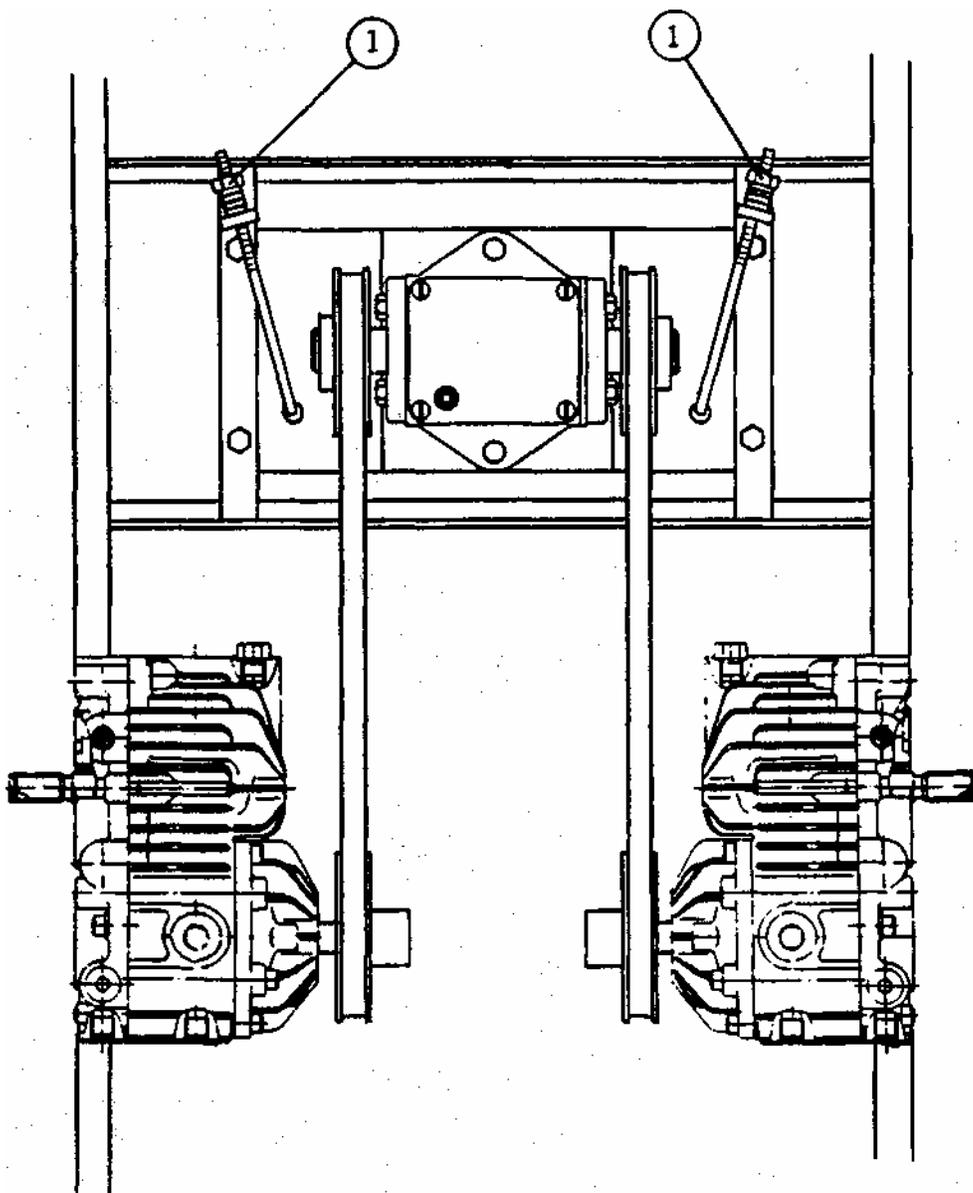

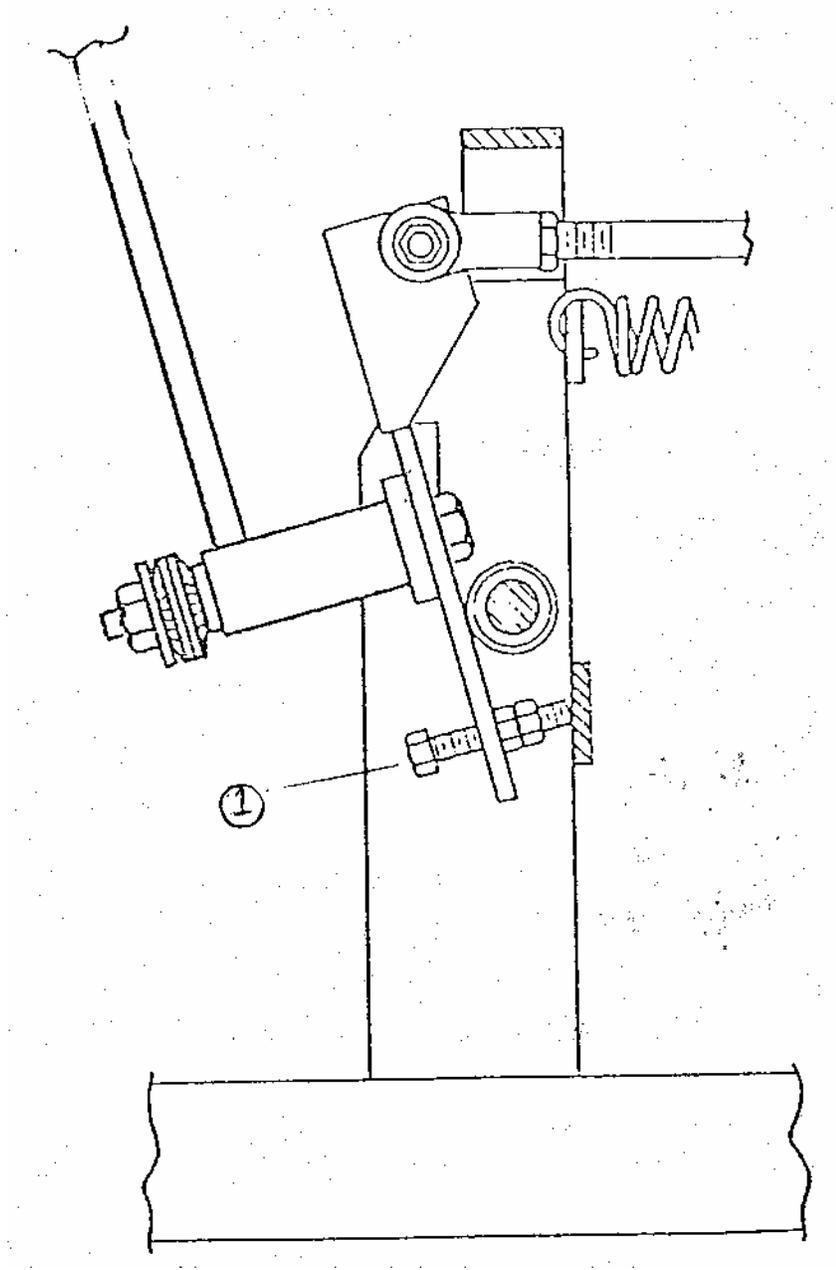

CARE AND MAINTENANCE - MODEL 502

LUBRICATION:

CHASSIS AND MOWER DECK: Number of grease zerks used (2)
 LOCATIONS: (1) each front wheel caster
 SERVICE INTERVALS: Every (50) hours of operation
 RECOMMENDED GREASE: Name brand wheel bearing or multi-purpose grease

CAUTION: The use of compressed air pressure greasing methods
 is not recommended as damage to seals and bearings could occur.

Using a hand pressure grease gun, lubricate each front caster to allow even distribution of grease within the caster, rotate or spin each front wheel caster after (3) pumps of the grease gun. Repeat process until the appearance of grease is noted completely around each caster.

DRIVE CHAINS: Primary and final drive
 RECOMMENDED LUBRICANT: Name brand aerosol chain spray
 SERVICE INTERVALS: As required for operating conditions

Remove excess dirt from chains, lubricate each chain completely by applying the lube to the inside of each connecting link. Applying lube directly to the top of the chain will only allow the lube to be thrown off in operation. The chains are of special construction which use o-rings to seal a factory lubricant inside of the chain. Additional lubrication will cushion chain to sprocket engagement. Avoid the use of any lubricants which may damage the o-rings used on this chain.

ENGINE OIL CHANGES: "Refer to separate owners manual furnished by the OIL
 RECOMMENDATIONS: engine manufacturer."
 SERVICE INTERVALS:

Please dispose of used oils at proper collection centers. Protect your environment.

CARE AND MAINTENANCE - MODEL 502

CLEANING THE MOWER:

A clean machine is a source of pride to the owner. However, cleaning by use of high pressure commercial washes is not recommended. The high water pressure, combined with solvents or alkaline detergents, can lead to corrosion of electrical components or damage to the sealed bearings used on your mower. A better approach is the use of mild household soaps and low water pressure. A stiff brush can be used to loosen excess grass and dirt build up. Avoid directing water pressure onto the mower deck hub assemblies, electrical wiring and engine components such as air filter openings. Never wash or clean the Sundstrand BDU 10 L hydrostatic transmissions, as damage to these units could result. To remove excess water which accumulates during washing of the mower either blow off with compressed air, if available, or start the engine, allowing a long enough operation time to dry thoroughly. It is advisable to engage the mower deck for a short time to disperse all water from pulleys and belts.

Please help protect the environment by avoiding all chemicals which may damage or cause harm to plants and animals in your area.

TROUBLE SHOOTING

MOWER CUT QUALITY:

There are many variables that can effect the cut quality of any multi blade mower. Type and condition of grass, ground speed, blade speed, and conditions are some of the variables that interact creating differences in cut quality results. In most cases, a smooth, even cut will be achieved without further adjustment.

The Trouble Shooting Chart suggests practices and adjustments that may be helpful in improving cut quality. Your Dixon ZTR Dealer is also available to provide assistance to you.

<u>SITUATION</u>	<u>CAUSES</u>	<u>REMEDY</u>
Poor cut quality	Ground speed	Reduce mowing speed
Poor cut quality	Loose belts	Adjust per operators manual
Poor cut quality	Engine RPM too low	Increase engine RPM to maximum
Poor cut quality	Dull or bent blades	Sharpen or replace as required
Poor cut quality	Unlevel mower deck	Adjust per operators manual
Poor cut quality	Grass build-up under mower deck	Clean out underside of mower deck
Poor cut quality	Improper blades	Replace with original equipment blades which are designed for the Model 501
Poor cut quality	Uneven tire pressures	Check and adjust as required per operators manual

TROUBLE SHOOTING

DRIVE SYSTEM:

<u>SITUATION</u>	<u>CAUSES</u>	<u>REMEDY</u>
Mower pulls to one side or the other	Drive adjustment	Adjust per operators manual Consult your dealer for repair
Loss of drive power on one side or the other	T-Box belts slipping	Adjust per operators manual Consult your dealer for repair
Loss of power on both wheels after being operated for a length of time	Belt from engine to T-Box is slipping	Adjust per operators manual Consult your dealer for repair
Poor driving performance	Operation of mower	Review operators section of owners manual
Oil leaks	Loose or missing hose clamps	Tighten or replace as required


TROUBLE SHOOTING

ELECTRICAL SYSTEM:


<u>SITUATION</u>	<u>CAUSE</u> Blown	<u>REMEDY</u>
Starter will not turn engine over	fuse	Inspect and replace fuse If fuse continues to burn consult your dealer for repair
Starter will not turn engine over	Dead battery	Charge battery
Battery discharge	Poor connections on battery Battery water low Wrong battery installed in mower	Tighten or renlace as required
Battery discharge	Engine electrical system not functioning correctly	Have electrical system checked by your dealer
Battery discharge	Engine being operated at too low an RPM	Increase engine RPM Consult your dealer for information
Electric clutch will not engage mower deck blades	Low battery condition Poor connections on clutch switch Broken wiring	Repair or replace as required Consult your dealer for repair
Head lights do not operate	Poor connection on lights Broken wiring Bad bulb	Repair or replace as required

Note:


Electrical system failures are generally simple in nature, always check the obvious first and then move onto the more complicated parts used. Poor battery service, loose connections, corrosion, frayed or broken wiring, are more likely than component failure.

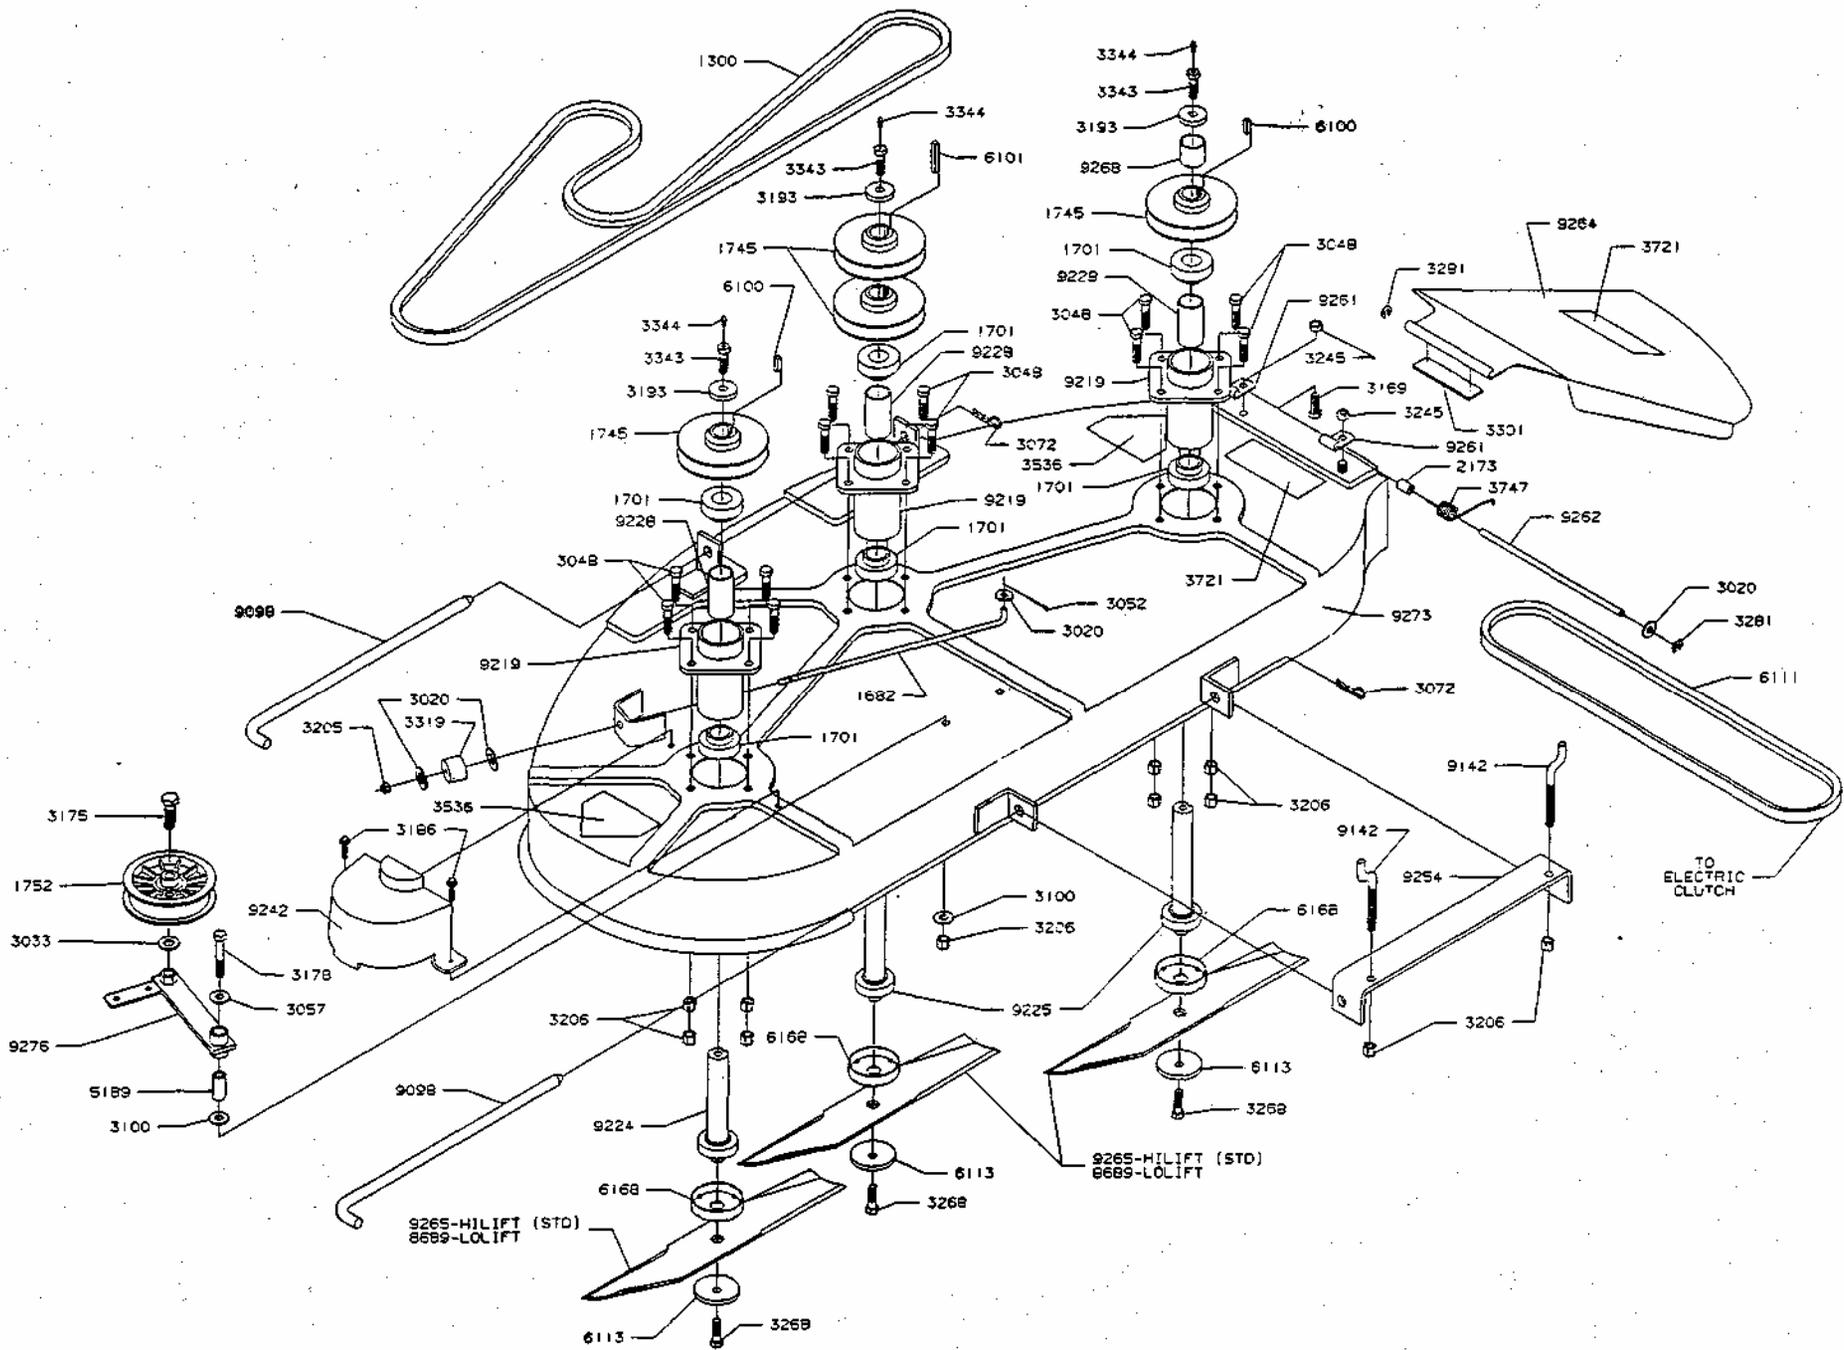


DECK ASSEMBLY (MODEL 502)

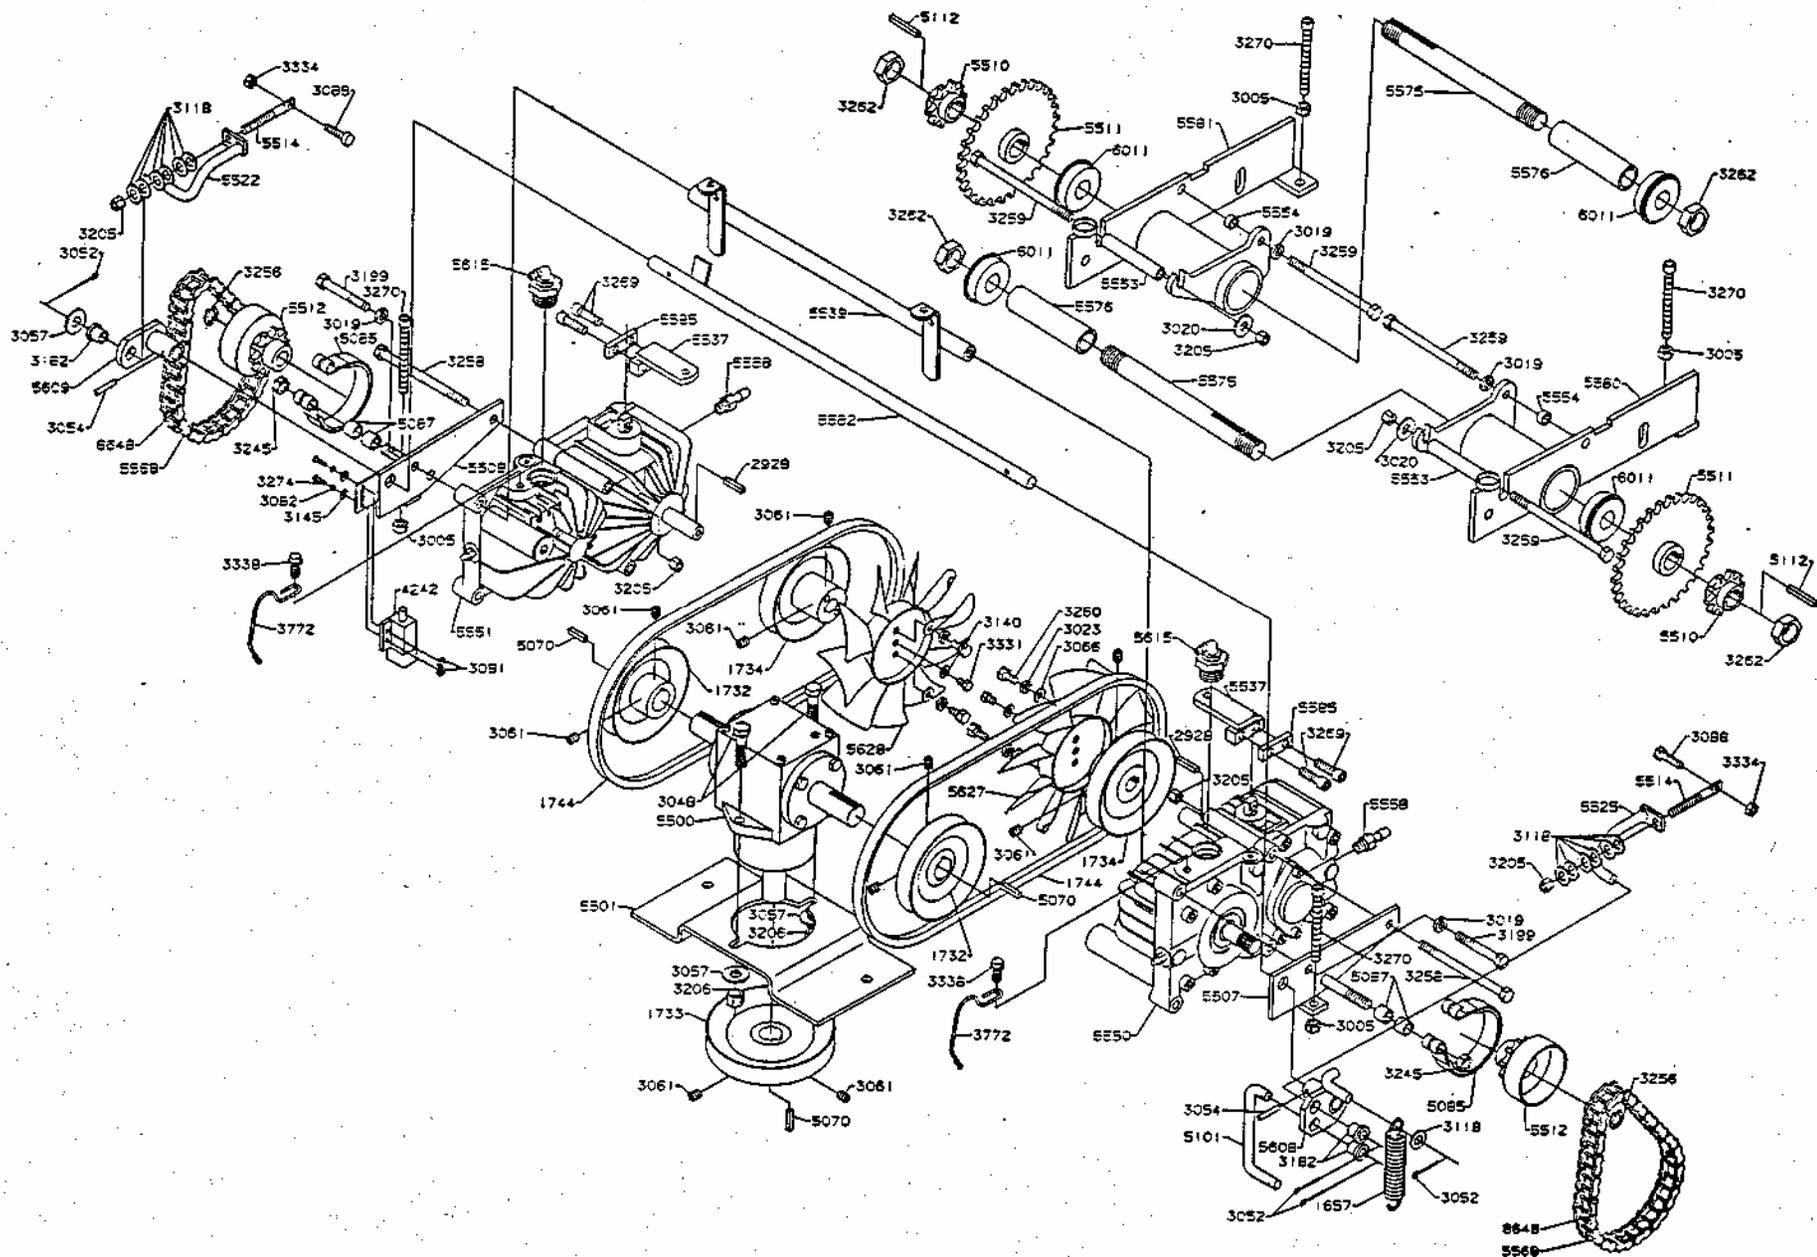


T-BOX AND HYDROSTATS ASSEMBLY (MODEL 502)

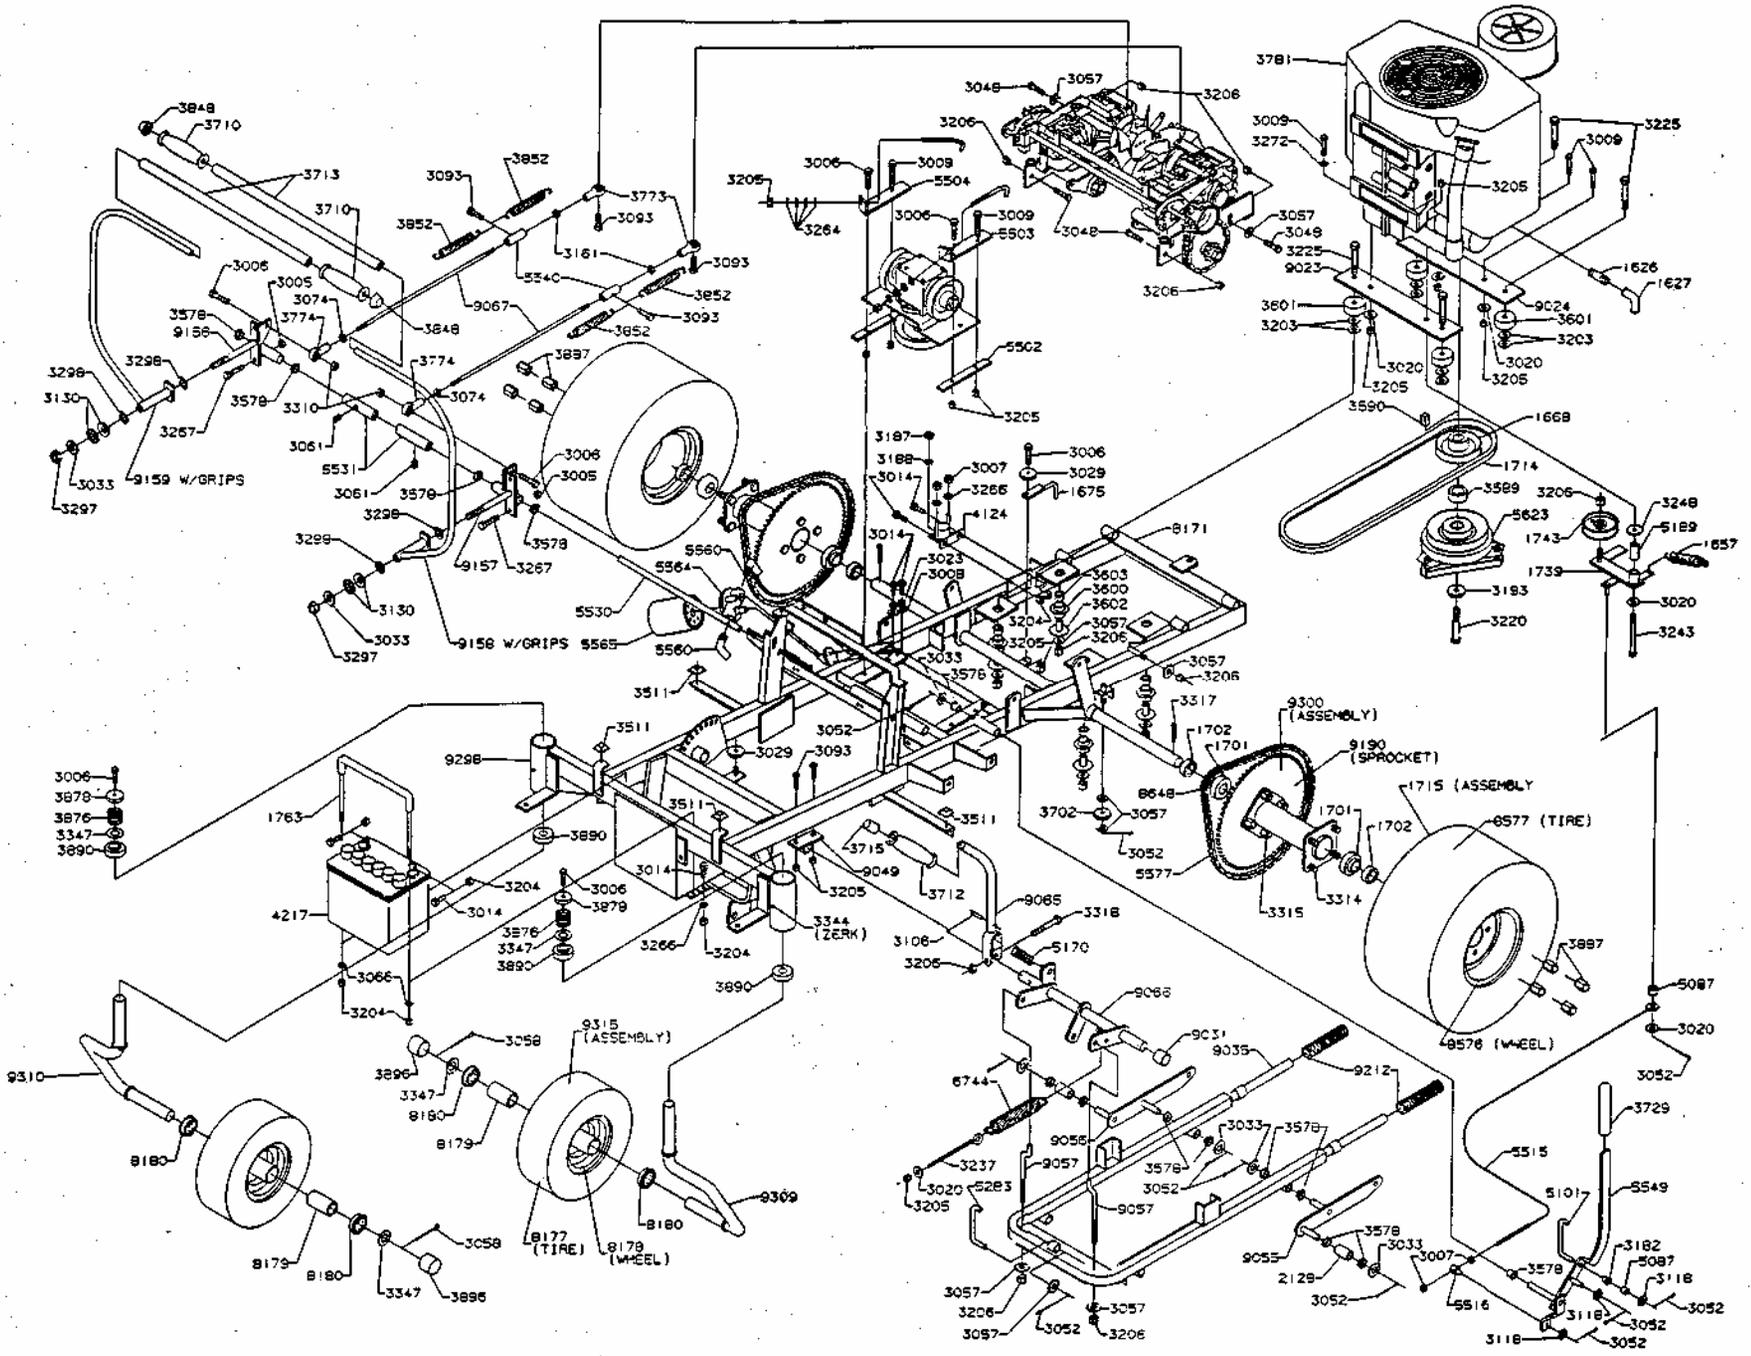

CHASSIS ASSEMBLY (MODEL 502)

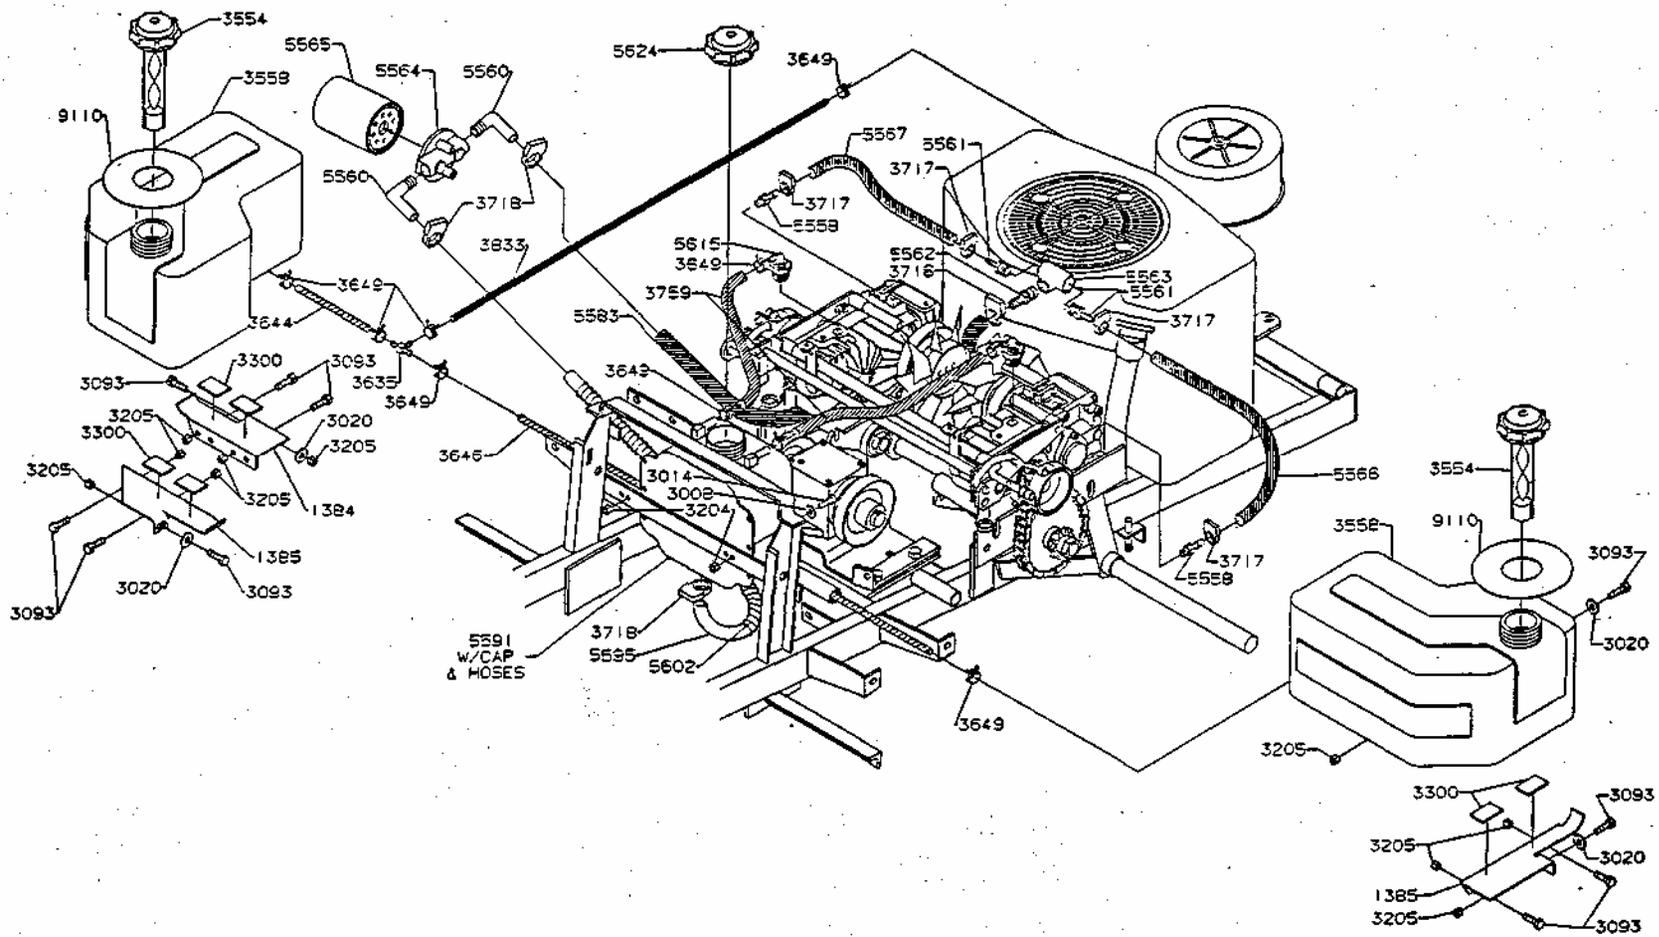

FUEL & HYDRAULICS TANKS & FITTINGS ASSEMBLY (MODEL 502)

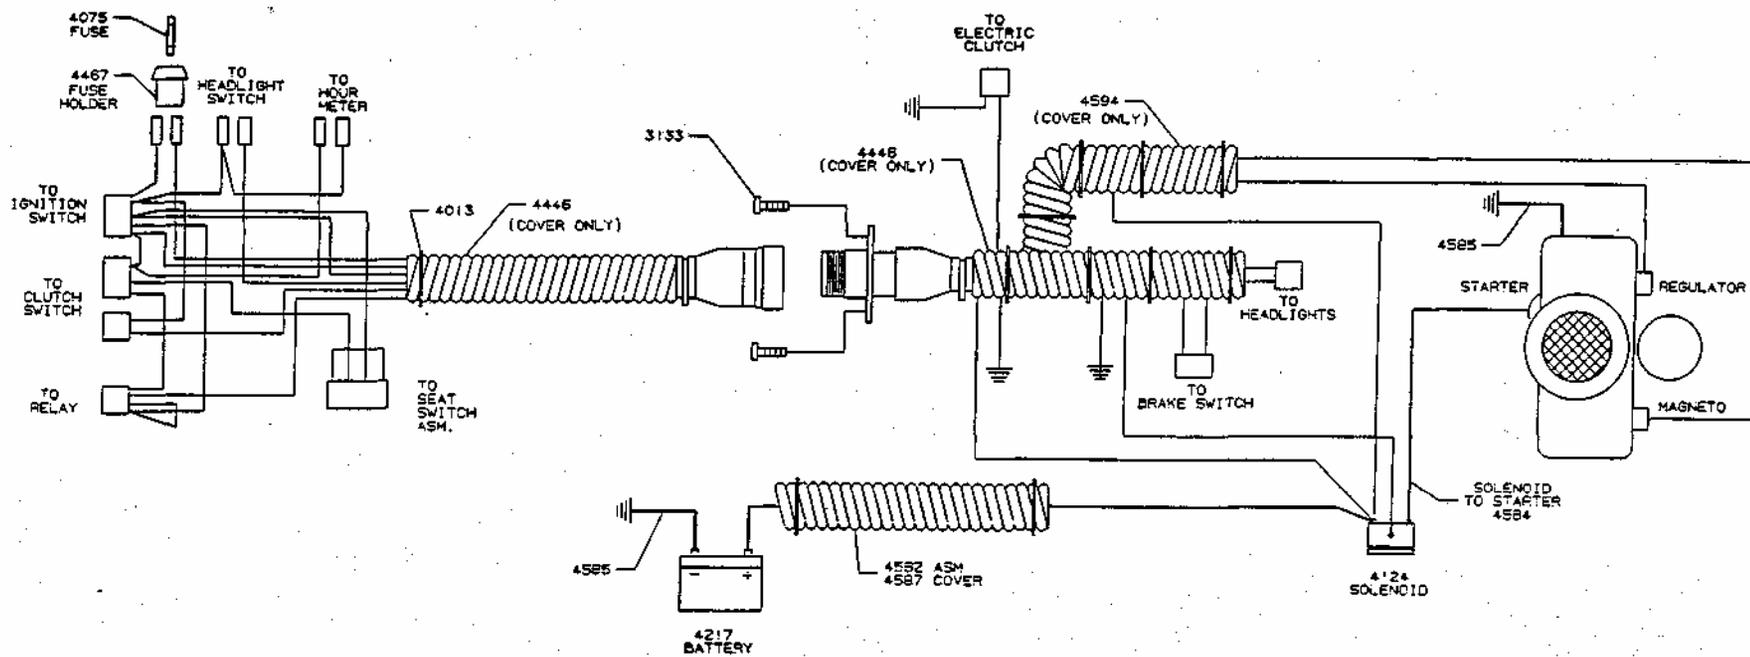

UPPER WIRING LOOM - 4714

LOWER WIRING LOOM - 4569

WIRING KIT - 8188
(SEE ASSEMBLY BREAKDOWN)

1991 ZTR 502 Parts List

1300	Belt 36" Mower Drive	3186	#12-24 X 3/4" Drill & Tap Screw
1384	Tank Mount Bracket (Short)	3187	#10-32 Hex Nut
1385	Tank Mount Bracket (Long)	3188	#10 Ext Tooth Lock Washer
1469	LH Slide Angle	3193	Washer .43 X 1.38 X .25
1470	RH Slide Angle	3195	Face Nut 1/2"-27
1471	Seat Slide	3196	Face Nut 7/16"-28
1657	Spring - Belt Idler	3198	1/4"-20 Wing Nut w/Nylok
1668	Drive Pulley	3199	5/16"-18 X 2 1/4" HH Bolt Gr 5
1675	Clutch Anchor	3204	1/4"-20 Hex Nut w/Nylok
1682	L-Rod	3205	5/16"-18 Hex Nut w/Nylok
1701	Wheel/Deck Hub Bearing	3206	3/8"-16 Hex Nut w/Nylok
1714	T-Box Drive Belt	3207	1/2"-13 Hex Nut w/Nylok
1715	Rear Wheel & Tire	3208	#10-24 Hex Nut w/Nylok
1732	Pulley - T-Box	3220	7/16"-20 X 2 3/4" HH Bolt Gr 5
1733	Pulley - T-Box Drive	3224	5/16"-18 X 1" HH Bolt w/Nylok Gr 5
1734	Pulley Hydrostat	3225	3/8"-16 X 2 1/4" HH Bolt
1739	Hydrostat Idler Bracket	3231	9/16" Std Flat Washer
1743	Hydrostat Flat Idler Pulley HD	3235	#10-24 X 5/8" Phillips Pan Hd Screw
1744	Hydrostat Drive Belt	3243	5/16"-18 X 3 1/4" HH Bolt Gr 5
1745	Pulley	3245	3/8"-16 Thin Profile Nylok Nut
1801	Seat Strap	3247	#6-20 X 1/2" Phillips Pan Hd Screw
2128	Sleeve	3248	5/16" ID X 1/8" Thick Washer
2164	Support Sprocket Spacer	3249	5/8" Int Tooth Lock Washer
2173	Bushing	3256	Snap Ring
2823	Oil Drain Assembly	3257	7/16" Int Tooth Lock Washer
3005	5/16"-18 UNO Hex Nut	3258	5/16"-18 X 4 3/4" HH Bolt Gr 8
3006	5/16"-18 X 1 1/4" HH Bolt Gr 5	3259	5/16"-18 X 5" HH Bolt Gr 8
3007	1/4" -20 UNC Hex Nut	3260	1/4"-20 X 1/2" HH Bolt Gr 5
3008	1/4" ID X 3/4" OD Flat Washer	3262	3/4"-16 Thin Profile Nylok Nut
3009	5/16"-18 UNC X 1 3/4" HH Bolt Gr 8	3263	5/8"-11 Thin Profile Nylok Nut
3014	1/4"-20 UNC X 3/4" HH Bolt Gr 5	3264	5/16" Disc Spring HD
3019	5/16" Helical Lock Washer	3265	#10-24 X 3/4" Truss Hd Phillips Screw
3020	5/16" Std Flat Washer	3266	1/4" Int Tooth Lock Washer (Not Shown)
3023	1/4" Helical Lock Washer	3267	5/16"-18 X 1 3/8" HH Bolt Gr 5
3029	Front Grommet	3268	3/8"-24 X 1 1/4" HH Bolt Gr 8 w/Nylok
3031	5/16"-18 UNC Acorn Nut	3269	5/16"-18 X 1" Soc HB
3033	1/2" SAE Flat Washer	3270	5/16"-18 X 3" Soc HB
3048	3/8"-16 UNC X 1 1/2" HH Bolt	3274	#6-32" X 1/2" Truss Hd Ph Screw
3052	3/32" Dia X 1" Cotter Pin	3281	Clip
3054	3/16" Dia X 1" Roll Pin	3298	Washer .515 X .874 X .031
3056	5/16" Fender Washer	3300	Foam Pad
3057	3/8" Std Flat Washer	3315	1/2-20 Hex Nut W/Nylok
3061	5/16"-18 UNC X 3/8" Soc Set Screw	3318	3/8-16 X 2 1/4: HHB Gr 8
3066	3/16" Std Flat Washer	3319	Idler Shock Mount
3072	1/8" X 1 3/4" Hair Pin Cotter	3331	M6 X PI X 8MM HHB Gr 8.8
3074	5/16"-24 UNF Hex Jam Nut	3338	M8 X 1.25P HWH Tap Screw
3081	#6-32 UNC Hex Nut	3343	Hub Bolt-Drilled
3082	#6 Lock Washer	3344	Grease Zerk
3087	5/16"-18 UNC X 3/4" HH Bolt Gr 5	3347	Washer 1.033 X 1.5 X .06
3091	1/2"-20 UNF Hex Lug Nut	3348	5/16-18 X 3/4" Tap Screw
3093	5/16"-18 UNC X 1" HH Bolt Gr 5	3511	Adhesive Bumper Pad
3106	1/4" X 1" Spirol Pin	3531	Decal - OPERATING INSTRUCTIONS
3118	Disc Spring	3536	Decal - DANGER
3130	1/2" Contact Bellville Spring	3554	Fuel Cap/Gauge
3133	#8-32 X 1/2" TR 3 Screw	3558	2 Gal Tank w/Cap-Gauge
3145	#6 Std Flat Washer	3585	Decal - CUTTING HEIGHT
3161	5/16"-24 UNF LH Thread	3589	Spacer (Electric Clutch)
3163	1/2" Int Tooth Lock Washer	3590	Key 1/4" Sq X 1/2"
3169	3/8"-16 X 1" HH Bolt Gr 5	3599	ISO Mount Assembly
3182	Flip Lock Bushing	3600	Rebound Mount

3601	Load Mount	4467	Fuse Holder
3602	Spacer Tube	4568	Throttle
3603	ISO Mount Insert	4569	Lower Wiring Loom
3617	Decal - DIXON	4687	Battery Cover Assembly
3635	Tee-Fuel Line	4701	Michigan Seat 50"
3644	Fuel Line 5 1/2"	4714	Upper Wire Loom
3645	Fuel Line 18"	5070	Key 3/16" Sq X 7/8"
3646	Fuel Line 20"	5085	Brake Band
3649	Fuel Line Clamp	5087	Spacer 3/8" X 1/2"
3653	Floor Pad Left Front	5101	Brake Link
3654	Floor Pad Right Front	5112	Key-Sq 3/16" X 1 1/2"
3655	Floor Pad Left Rear	5170	Spring
3656	Floor Pad Right Rear	5283	Link
3669	Decal - CAUTION	5500	T-Box
3695	J-Bolt	5501	Mount Plate
3702	Pulley	5502	Mount Shim
3705	Velcro Strip - Hook	5503	T-Box Guide Left
3706	Velcro Strip - Latch	5504	T-Box Guide Right
3710	Handle Grip	5507	Brake Plate Bracket Left
3711	Hour Meter	5508	Brake Plate Bracket Right
3712	Handle Grip	5510	Sprocket 10T
3713	Foam Tube	5511	Sprocket 30T
3715	End Cap	5512	Sprocket 10T w/Brake Drum
3717	3/8" Hose Clamp	5514	Brake Rod 5/16" X 2 5/8"
3718	5/8" Hose Clamp	5515	Idler Cable
3719	Heat Shield Deflector	5516	Swivel
3720	Tie Wrap	5522	Brake Link Right
3721	Decal - DANGER	5525	Brake Link Left
3723	Decal - RESERVOIR	5530	Control Pivot Shaft
3731	Control Panel	5531	Adjustable Collar
3747	Deflector Spring	5537	Control Arm Bracket
3772	By-Pass Keeper	5539	Hydrostat Support Rod
3773	LH Rod End	5540	Neutral Adjust Collar
3774	RH Rod End	5549	Brake Handle
3791	Model Decal	5550	Hydrostat Left
3812	Ignition Nut	5551	Hydrostat Right
3813	Protective Cap	5553	Spacer
3848	Cap Nut	5554	Spacer
3852	Spring	5558	Hose Fitting
3876	Caster Spring	5560	Elbow - Male
3878	Caster Plug	5561	Adapter-Male (For 3/8" ID Hose)
3887	Chrome Lug Nut	5562	Adapter-Male (For 5/8" ID Hose)
3890	Bearing	5563	Tee-Cast Iron
3896	Hub Cover	5564	Filter Head
3897	Decal - DIXON	5565	Oil Filter
4013	Wire Tie	5566	Hose 3/8" X 8"
4075	15 Amp Fuse	5567	Hose 3/8" X 14"
4124	Solenoid w/Hardware	5568	Chain-Primary (Short)
4197	Ignition Switch	5575	Shaft 3/4" X 8 1/4"
4198	Blade Drive Clutch Switch	5576	Spacer
4199	Light Switch	5577	Drive Chain-Secondary
4201	Switch Key (Used w/4197)	5580	Jack Shaft Bracket Left
4216	Battery Ground Cable	5581	Jack Shaft Bracket Right
4217	Battery	5582	Pivot Shaft Bracket
4242	Deck Switch	5583	Hose 5/8" X 19"
4256	Utility Box	5585	Tab
4274	Choke Cable	5591	Reservoir Assembly
4276	Headlight Assembly	5595	Hose 5/8" X 14"
4446	Cover - Flex Guard	5608	Brake Arm Left w/Bushing
4453	Access Cover Assembly	5609	Brake Arm Right w/Bushing

5615	Connector/Elbow Assembly	9264	Deflector Sub Assembly
5623	Electric Clutch	9273	Mower Deck
5624	Tank Cap	9274	Mower Deck Assembly
5627	Left Fan	9276	Idler Arm
5628	Right Fan	9298	Caster Tube Assembly
6011	Mower Deck Bearing	9300	Wheel Hub Assembly
6100	Outer Shaft Key	9309	Caster Axle LH
6101	Center Shaft Key	9310	Caster Axle RH
6111	Deck Drive Belt	9312	Bumper Weldment
6113	Blade Washer	9315	Caster Wheel & Tire
6168	Trash Guard		
8171	Frame 502		
8174	Upper Body Asm 502		
8176	Lower Body Asm 50"		
8177	Caster Tire 50"		
8178	Caster Rim 50"		
8179	Caster Bearing 50"		
8180	Bearing Retainer 50"		
8188	Wiring Kit 50"		
8328	Greasable Shaft 9225		
8329	Greasable Shaft 9224		
8572	Headlight Bulb		
8573	Headlight Bulb Socket		
8576	Rear Rim		
8577	Rear Tire		
8648	Chain Connecting Link		
8689	Mower Blade 50" Std		
9017	Seat Frame		
9023	Engine Mount Plate - Fwd		
9024	Engine Mount Plate - Rear		
9031	Lift Tube		
9035	Lift Frame		
9049	Lift Bushing Bracket		
9055	Lift Cam Left		
9056	Lift Cam Right		
9065	Lift Handle		
9066	Lift Shaft		
9067	Control Rod		
9076	Seat Frame Cable		
9082	Seat Frame Pivot Rod		
9089	Control Rod Assembly		
9098	Hanger Rod		
9110	Tank Cover		
9142	Rear Lift Rod		
9156	Right Swivel Plate		
9157	Left Swivel Plate		
9158	Control Lever w/Grip Left		
9159	Control Lever w/Grip Right		
9190	Sprocket Assembly		
9212	Spring (Belt Tensioner)		
9219	Deck Hub		
9226	Deck Hub Sub Assembly		
9228	Deck Hub Bearing Spacer		
9230	Outer Hub Assembly		
9231	Center Hub Assembly		
9242	Pulley Guard		
9254	Lift Plate		
9261	Deflector		
9262	Rod		